


# OPERATING AND SERVICE MANUAL

## FUNCTION GENERATOR 3310A/B

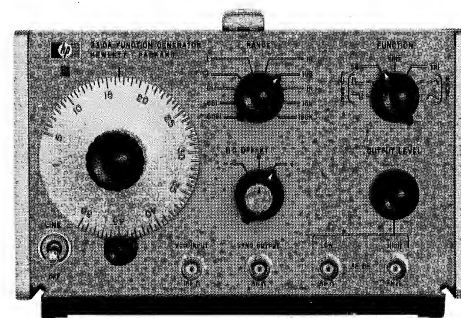

HEWLETT  PACKARD

## **CERTIFICATION**

*The Hewlett-Packard Company certifies that this instrument was thoroughly tested and inspected and found to meet its published specifications when it was shipped from the factory. The Hewlett-Packard Company further certifies that its calibration measurements are traceable to the U.S. National Bureau of Standards to the extent allowed by the Bureau's calibration facility.*

## **WARRANTY AND ASSISTANCE**

All Hewlett-Packard products are warranted against defects in materials and workmanship. This warranty applies for one year from the date of delivery, or, in the case of certain major components listed in the operating manual, for the specified period. We will repair or replace products which prove to be defective during the warranty period provided they are returned to Hewlett-Packard. No other warranty is expressed or implied. We are not liable for consequential damages.

Service contracts or customer assistance agreements are available for Hewlett-Packard products that require maintenance and repair on-site.

For any assistance, contact your nearest Hewlett-Packard Sales and Service Office. Addresses are provided at the back of this manual.



## **OPERATING AND SERVICE MANUAL**

-hp- Part No. 03310-90002

# **MODEL 3310A/3310B FUNCTION GENERATOR**

**Serials Prefixed: 1048A**

Appendix C, Manual Backdating Changes,  
adapts this manual to Serial no.'s  
1048A03650 and below.

Copyright Hewlett-Packard Company 1969  
P.O. Box 301, Loveland, Colorado 80537 U.S.A.

Printed: June 1971

## TABLE OF CONTENTS

Section	Page		
I	GENERAL INFORMATION . . . . .	1-3	
1-1.	Introduction . . . . .	1-3	
1-3.	Specifications . . . . .	1-3	
1-5.	Description . . . . .	1-3	
1-6.	Model 3310A Function Generator . . .	1-3	
1-10.	Model 3310B Function Generator . . .	1-3	
1-13.	Instrument and Manual Identification . .	1-3	
Section	Page		
II	INSTALLATION . . . . .	2-1	
2-1.	Introduction . . . . .	2-1	
2-3.	Inspection . . . . .	2-1	
2-5.	Power Requirements . . . . .	2-1	
2-7.	Grounding Requirements . . . . .	2-1	
2-10.	Installation . . . . .	2-1	
2-12.	Rack/Bench Installation . . . . .	2-1	
2-14.	Repackaging for Shipment . . . . .	2-1	
Section	Page		
III	OPERATING INSTRUCTIONS . . . . .	3-1	
3-1.	Introduction . . . . .	3-1	
3-3.	Panel Features . . . . .	3-1	
3-5.	General Operating Information . . . . .	3-1	
3-6.	3310A/B . . . . .	3-1	
3-18.	3310B . . . . .	3-1	
3-22.	Special Considerations . . . . .	3-4	
3-23.	Floating . . . . .	3-4	
3-29.	DC Offset . . . . .	3-4	
3-31.	Frequency Drift . . . . .	3-4	
3-33.	Amplitude Stability . . . . .	3-4	
3-35.	Changing the Duty Cycle (aspect ratio) of the 3310A/B Pulse and Ramp Waveforms . . . . .	3-5	
3-37.	Phase Locking the 3310A/B . . . . .	3-5	
3-39.	Useability of the 3310B Tone Burst Output Above 50 kHz . . . . .	3-5	
3-41.	Applications . . . . .	3-6	
Section	Page		
IV	THEORY OF OPERATION . . . . .	4-1	
4-1.	Introduction . . . . .	4-1	
4-3.	Block Diagram Description (3310A) . . .	4-1	
4-16.	Detailed Schematic Description (3310A)	4-1	
4-44.	Block Diagram Description (3310B) . . .	4-3	
4-46.	Detailed Schematic Description (3310B)	4-3	
Section	Page		
V	MAINTENANCE . . . . .	5-1	
5-1.	Introduction . . . . .	5-1	
5-3.	Test Equipment Required . . . . .	5-1	
5-5.	Performance Checks . . . . .	5-1	
5-8.	Frequency Range Check . . . . .	5-1	
5-14.	Sine Wave Frequency Response Check	5-1	
5-17.	Triangle Symmetry Check . . . . .	5-3	
5-20.	Dial Accuracy Check . . . . .	5-3	
5-49.	SYNC OUTPUT Response Check . . .	5-6	
5-53.	Maximum HIGH Output (except pulses greater than 2 MHz) and OUTPUT LEVEL Range Check . . . . .	5-6	
5-60.	Maximum HIGH Output Check (pulses greater than 2 MHz) . . . . .	5-6	
5-65.	Minimum LOW Output Check . . . . .	5-6	
5-70.	SYNC OUTPUT Amplitude Check . . .	5-7	
5-76.	Ext. Gate Sensitivity (3310B only) . .	5-7	
5-86.	Ext. Trigger Check (3310B only) . . .	5-7	
5-93.	Checks of General Operating Characteristics . . . . .	5-8	
5-94.	Low Output Check (30 dB Separation)	5-8	
5-100.	Output Impedance Checks . . . . .	5-8	
5-116.	External Frequency Control Check . .	5-9	
5-119.	Adjustment Procedure . . . . .	5-9	
5-121.	Cover Removal . . . . .	5-9	
5-123.	Power Supply Adjustment . . . . .	5-9	
5-126.	Triangle Amplifier Bias Adjustment .	5-10	
5-128.	Symmetry Check . . . . .	5-10	
5-134.	Dial Calibration . . . . .	5-10	
5-140.	Frequency Calibration . . . . .	5-10	
5-148.	Distortion Adjustment . . . . .	5-10	
5-150.	D.C. Offset Adjustment (SINE function) . . . . .	5-10	
5-154.	Square Wave and Pulse Aberration Adjustment . . . . .	5-10	
5-158.	Frequency Response Adjustment . .	5-11	
5-160.	START/STOP PHASE Limit Adjustment (3310B only) . . . . .	5-11	
5-167.	Troubleshooting . . . . .	5-11	
5-169.	General Troubleshooting Information .	5-11	
5-170.	Front Panel Checks . . . . .	5-11	
5-172.	Specific Circuit Troubleshooting Aids and Maintenance Tips . . . . .	5-14	
5-173.	Circuit Troubleshooting . . . . .	5-14	
5-182.	Troubleshooting The 3310B . . . . .	5-16	
5-184.	Maintenance Tips . . . . .	5-17	
5-185.	A1 Board Removal . . . . .	5-17	
5-186.	Broken Trace Repair . . . . .	5-17	
Section	Page		
VI	REPLACEABLE PARTS . . . . .	6-1	
6-1.	Introduction . . . . .	6-1	
6-4.	Ordering Information . . . . .	6-1	
6-6.	Non-Listed Parts . . . . .	6-1	
Section	Page		
VII	CIRCUIT DIAGRAMS . . . . .	7-1	
7-1.	Introduction . . . . .	7-1	
7-3.	Functional Block Diagram . . . . .	7-1	
7-5.	Schematic Diagrams . . . . .	7-1	
7-7.	Component Location Diagrams . . . . .	7-1	
APPENDICES			
A. CODE LIST OF MANUFACTURERS			
B. SALES AND SERVICE OFFICES			
C. MANUAL BACKDATING CHANGES			



## LIST OF TABLES

Number	Page	5-6.	D.C. Voltages on A1 Assembly With and Without Offset . . . . .	5-16
1-1.	Specifications . . . . .	1-0		
1-2.	General Information . . . . .	1-0/1-1		
5-1.	Required Test Equipment . . . . .	5-0		
5-2.	Dial Accuracy Check . . . . .	5-3		
5-3.	(A and B) High Frequency Dial Check . . . . .	5-4		
5-4.	Starred Value Component . . . . .	5-12		
5-5.	Condensed Adjustment Procedure . . . . .	5-13/5-14		
		5-7.	D.C. Voltages for Tone Burst Circuit (A4 Assembly) With EXT. GATE Input . . . . .	5-17
		5-8.	D.C. Voltages for Tone Burst Circuit (A4 Assembly) Without EXT. GATE Input . . . . .	5-17
		6-1.	Replaceable Parts . . . . .	6-2

## LIST OF ILLUSTRATIONS

Number	Page	5-5.	Rise Time Check . . . . .	5-5
1-1.	Model 3310A and 3310B Function Generators . . . . .	1-2		
3-1.	3310A/B Front and Rear Panel Features . . . . .	3-2/3-3		
3-2.	Biasing a Transistor Using the Internal D.C. Offset of the Model 3310A . . . . .	3-4		
3-3.	Floating the 3310A/B Output Using External Battery (Output Protection Circuit Installed . . . . .	3-5		
3-4.	Floating the 3310A/B Output Using Capacitance Coupling for Output Protection . . . . .	3-5		
3-5.	Phase Locking the 3310A/B . . . . .	3-5		
3-6.	Changing the Duty Cycle of the 3310A/B Pulse and Ramp Functions . . . . .	3-6		
3-7.	Using the 3310A/B for Network Analysis . . . . .	3-6		
3-8.	Using the 3310A/B as a Logic Interface . . . . .	3-7		
3-9.	Using the 3310A/B as Clock Source for Logic Circuitry Troubleshooting . . . . .	3-7		
3-10.	Checking the Dynamic Response of a Speaker . . . . .	3-8		
3-11.	Using the 3310A/B to Show Basic Mathematical Concepts . . . . .	3-8		
4-1.	Simplified Block Diagram . . . . .	4-0		
5-1.	Frequency Response Check . . . . .	5-1		
5-2.	Dial Accuracy/Triangle Symmetry Check . . . . .	5-3		
5-3.	Distortion Check . . . . .	5-4		
5-4.	5 MHz Distortion Check . . . . .	5-5		
		5-5.	Aberration Check . . . . .	5-6
		5-7.	EXT. GATE Sensitivity Check . . . . .	5-7
		5-8.	EXT. TRIGGER Check . . . . .	5-8
		5-9.	External Frequency Control Check . . . . .	5-9
		5-10.	Tunnel Diode Check . . . . .	5-15
		5-11.	Troubleshooting Tree No. 1. No Output or Defective Output . . . . .	5-19/5-20
		5-12.	Troubleshooting Tree No. 2. Output Not Obtainable on All Functions . . . . .	5-19/5-20
		6-1.	3310A/B Mechanical Parts . . . . .	6-13
		7-1.	Functional Block Diagram . . . . .	7-3/7-4
		7-2.	Tuning and Inverting Amplifiers, Current Sources . . . . .	7-5/7-6
		7-3.	Triangle and Feedback Amplifiers, Level Detectors . . . . .	7-7/7-8
		7-4.	Sine Shaping and Output Circuits . . . . .	7-9/7-10
		7-5.	Sine Shaping and Output Circuits (Backdating) . . . . .	7-11/7-12
		7-6.	Power Supply (3310A only) . . . . .	7-13/7-14
		7-7.	Power Supply and Tone Burst Generator (3310B only) . . . . .	7-15/7-16
		7-8.	Wiring Diagram (3310A only) . . . . .	7-17/7-18

Table 1-1. Specifications.

MODEL 3310A/B PERFORMANCE CHARACTERISTICS	3310B (only)
<p><b>Frequency range:</b> 0.0005Hz to 5MHz in decade ranges.</p> <p><b>Sine wave frequency response:</b> reference, 1kHz at full output into 50 ohms. 0.0005Hz to 50kHz: <math>\pm 1\%</math> 50kHz to 5MHz: <math>\pm 3\%</math></p> <p><b>Dial accuracy:</b> 0.0005Hz to 500kHz, all functions: <math>\pm(1\%</math> of setting <math>+1\%</math> of full scale). 500kHz to 5MHz, sine, square, triangle: <math>\pm(3\%</math> of setting <math>+3\%</math> of full scale). 500kHz to 5MHz, pulse and ramp: <math>\pm(10\%</math> of setting <math>+1\%</math> of full scale).</p> <p><b>Sine wave distortion</b> (below fundamental): 10Hz to 50kHz: greater than 46dB (0.5%) 50kHz to 500kHz: greater than 40dB (1%) 500kHz to 5MHz: greater than 30dB (3%)</p> <p><b>Triangle symmetry:</b> 0.0005Hz to 20Hz: less than 1% 20Hz to 50kHz: less than 0.5%</p> <p><b>Square wave and pulse response:</b> less than 30ns rise and fall times at full output. less than 35ns rise and fall times at less than full output. less than 5% total aberration.</p> <p><b>Sync output response:</b> less than 20ns rise and fall times.</p> <p><b>External Frequency control</b></p> <p><b>Input requirements:</b> 0 to +10V <math>\pm 1</math>V for 50:1 increase. 0 to -10V <math>\pm 1</math>V for 50:1 decrease. An ac voltage will FM the frequency about a dial setting within the limits (<math>1 &gt; f &lt; 50</math>) X range knob setting.</p>	<p>The specifications for the 3310B are identical to those of the Model 3310A except as follows:</p> <p style="text-align: center;"><i>NOTE</i></p> <p><i>These specifications apply to the X.0001 through X 1 K ranges only.</i></p> <p><b>External Gate Sensitivity</b> (DC coupled): Will cause the 3310B to free run when the gate input is held at between +1 V and +30 V, or will trigger a single cycle on a positive waveform <math>\geq 1</math> V but <math>\leq +30</math> V. To generate a single cycle the period of triggering waveform must be greater than the period of the 3310B output while the duty cycle is less than that of the 3310B output. When the gate signal goes to 0 the 3310A output will stop in the same phase it started.</p> <p><b>External Trigger Sensitivity</b> (AC coupled): Requires a positive going square wave or pulse from 1V p-p to 30V p-p of lower frequency than that set on the 3310B. (The triggering signal can be d.c. offset, but its peak amplitude, including dc offset, must not exceed <math>\pm 30</math>V; i.e. <math>[V_{ac\ peak} + V_{dc}] \leq 30V_{peak}</math>).</p>
	OUTPUT CHARACTERISTICS
<p style="text-align: center;"><b>CAUTION</b></p> <p><b>DO NOT APPLY GREATER THAN <math>\pm 30</math> V TO EITHER EXTERNAL GATE OR EXTERNAL TRIGGER INPUT.</b></p>	<p><b>Maximum HIGH outputs</b> (except pulses greater than 2MHz): greater than 30V p-p open circuit. greater than 15V p-p into 50 ohms.</p> <p><b>Maximum HIGH output</b> (pulses greater than 2MHz): greater than 24V p-p open circuit. greater than 12V p-p into 50 ohms.</p> <p><b>Minimum LOW output:</b> less than 30mV p-p open circuit. less than 15mV p-p into 50 ohms.</p> <p><b>OUTPUT LEVEL control:</b> greater than 30dB range controlling HIGH and LOW outputs.</p> <p><b>SYNC output amplitude:</b> greater than 4V p-p open circuit. greater than 2V p-p into 50 ohms.</p>

Table 1-2. General Information (3310A/B).

<p><b>Frequency Range:</b> 0005 Hz to 50 kHz (3310B only)</p> <p><b>LOW output:</b> 30dB below HIGH output for any amplitude setting, when LOW and HIGH are equally terminated.</p> <p><b>External Frequency Control:</b> <b>Range:</b> 50:1 on any range.</p> <p><b>Sensitivity:</b> 100mV/minor division (of the frequency dial on any range).</p>	<p><b>Sine Wave Distortion</b> (below fundamental): 0.0005 Hz to 10 Hz: greater than 40 dB (1%).</p> <p><b>Input impedance:</b> 10 kilohms.</p> <p><b>Output impedances:</b> HIGH: 50 ohms LOW: 50 ohms SYNC: 50 ohms</p>
--	---

Table 1-2. General Information.(Cont'd)

<p><b>Triangle and Ramp Linearity:</b> 0.0005 Hz to 50 kHz: less than 1%.</p> <p><b>DC Offset:</b> <b>Amplitude:</b> <math>\pm 10\text{V}</math> open circuit, <math>\pm 5\text{V}</math> into 50 ohms, continuously adjustable.</p> <p>NOTE: maximum (<math>V_{acp} + V_{dc}</math>) is <math>\pm 15\text{V}</math> open circuit, <math>\pm 7.5\text{V}</math> into 50 ohms.</p> <p><b>Input impedance (3310B only):</b> External Trigger: 390pF in series with 500 ohms External Gate: 500 ohms</p> <p><b>Modes of Operation (3310B only):</b> Single Cycle Multiple Cycle START/STOP Phase (3310B only): The START/STOP Phase can be adjusted over a range of approximately <math>\pm 90^\circ</math> using the front panel control.</p>	<p><b>Manual Trigger:</b> Causes the 3310B to free run when depressed. When the trigger button is released, the waveform will stop in the same phase it started.</p> <p><b>Waveforms:</b> sine, square, triangle, positive pulse, negative pulse, positive ramp, and negative ramp. Pulses and ramps have 15% or 85% duty cycle, SYNC waveform is a square wave for symmetrical functions, pulse for pulse and ramp functions.</p> <p><b>Power requirements:</b> 115V or 230V <math>\pm 10\%</math>, 48Hz to 440Hz, less than 20W.</p> <p><b>Operating temperature:</b> 0 to <math>55^\circ\text{C}</math>.</p> <p><b>Accessories available:</b> Combining case: HP 1051 A Rack adapter: HP 5060-0797 Filler strip: HP 5060-0105</p>
---	--

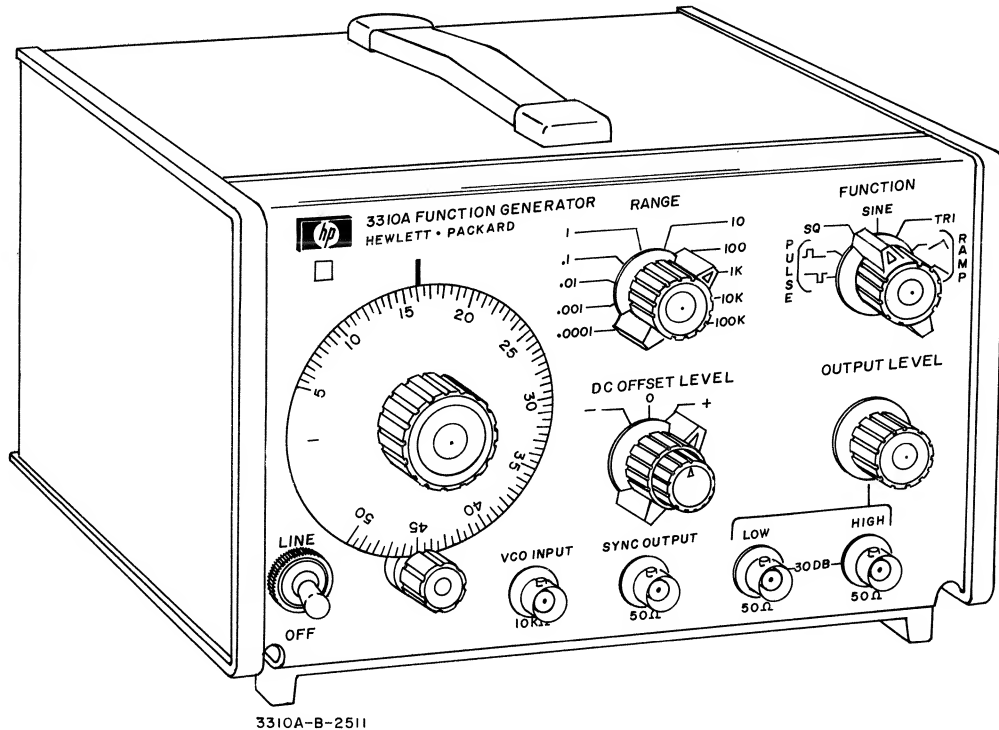
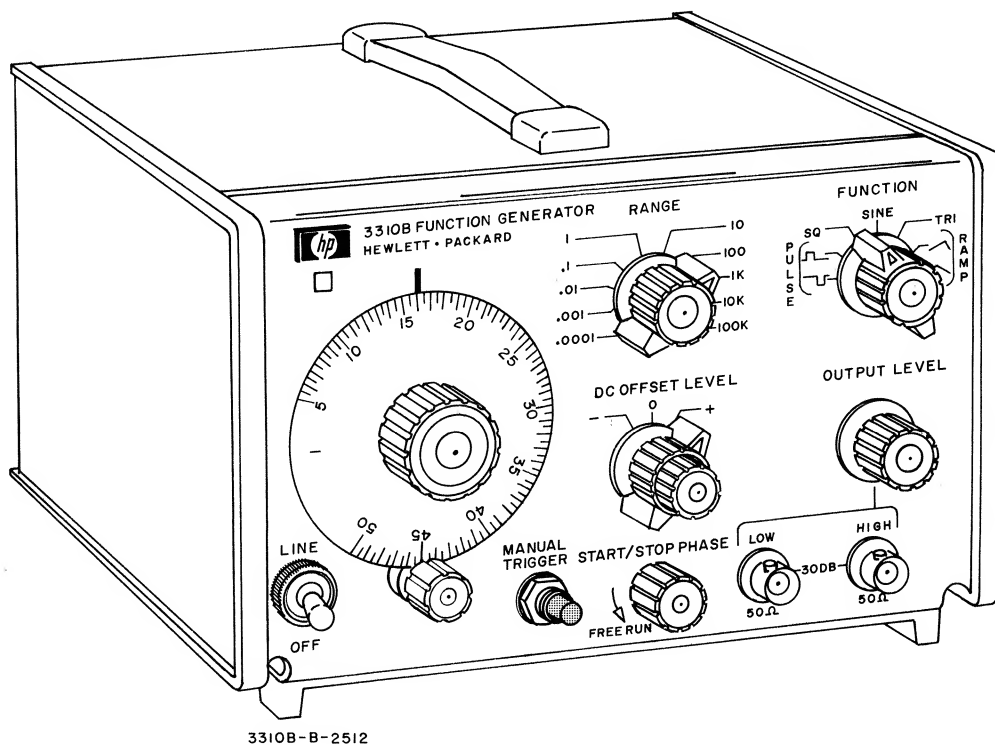
**3310A****3310B**

Figure 1-1. Model 3310A and 3310B Function Generators.

## SECTION I

### GENERAL INFORMATION

#### 1-1. INTRODUCTION.

1-2. This section contains general information about the -hp- Model 3310A and the Model 3310B Function Generators. The description of these instruments, their specifications, and instrument identification information are included. Throughout this manual, the Model 3310A will be referred to as the 3310A. The Model 3310B will be referred to as the 3310B. If a statement refers to either/or both instruments they will be called the 3310A/B.

#### 1-3. SPECIFICATIONS.

1-4. Table 1-1 contains specifications for the 3310A and the 3310B. Table 1-2 contains the general operating characteristics of these instruments. The information Table 1-2 contains should not be considered specifications. Performance Checks have been provided in Section V. These checks can be used to compare the instruments with their published specifications. Checks of the more important general operating characteristics of the instruments, listed in Table 1-2, are also provided.

#### 1-5. DESCRIPTION.

##### 1-6. Model 3310A Function Generator.

1-7. The -hp- Model 3310A Function Generator is a versatile function generator having sine, triangle and square wave outputs, as well as positive-and negative-going pulses and positive-and negative-going ramps. All of these functions have a maximum output amplitude of 30V p-p. Any of these functions may be internally dc offset up to + or -10V. The sum of the dc component plus the peak value of the signal may not exceed 15V into open circuit. A LOW output connector provides a signal level 30dB below the HIGH output. With the 30dB variable attenuator, a total attenuation of greater than 60dB is available.

1-8. The frequency range of the 3310A is from .0005Hz to 5MHz, in 10 ranges. The frequency may be externally controlled, up to a 50:1 range, by an external voltage.

1-9. In addition to the HIGH and LOW outputs, a SYNC OUTPUT is available. This sync signal is a square wave in the Sine, Square, and Triangle functions, and is a pulse in the Ramp and Pulse functions.

##### 1-10. Model 3310B Function Generator.

1-11. When the START/STOP PHASE control on the 3310B is set to FREE RUN the instrument functions as a Model 3310A Function Generator. If the START/STOP PHASE control is set to any other position, tone bursts of almost any length, adjustable in phase from  $+90^{\circ}$  to  $-90^{\circ}$ , are obtainable. The waveshape of the frequency within the burst is determined by the setting of the FUNCTION switch. Burst length is determined by the length of the positive portion of an external waveform applied to the EXT. GATE input at the rear of the instrument.

1-12. The frequency range of the 3310B is .0005 Hz to 5 MHz in "Free Run" mode. The triggering frequency range of the 3310B is .0005 Hz to 50 kHz although, for many applications the output is useable to 5 MHz.

#### 1-13. INSTRUMENT AND MANUAL IDENTIFICATION.

1-14. Hewlett-Packard uses a two-section serial number. The first section (prefix) identifies a series of instruments. The last section (suffix) identifies a particular instrument within the series. If a letter is included with the serial number, it identifies the country in which the instrument was manufactured. If the serial prefix of your instrument differs from the one on the title page of this manual, a change sheet will be supplied to make this manual compatible with newer instruments or the backdating information in Appendix C will adapt this manual to earlier instruments. All correspondence with Hewlett-Packard should include the complete serial number.



## SECTION II

### INSTALLATION

#### 2-1. INTRODUCTION.

2-2. This section includes information and instructions necessary for the installation or shipment of this instrument. Included is information pertaining to initial inspection, installation, and repackaging for shipment.

#### 2-3. INSPECTION.

2-4. This instrument was carefully inspected both mechanically and electrically before shipment. It should be physically free of marks or scratches and in perfect electrical order upon receipt. To confirm this, the instrument should be inspected for physical damage. Also, the electrical performance of the instrument should be tested using the procedure outlined in Section V of this manual. If there is damage or deficiency, see the warranty at the front of this manual.

#### 2-5. POWER REQUIREMENTS.

2-6. This instrument will operate from either 115 or 230Vac, 48Hz to 440Hz. The instrument can easily be converted from 115 volt to 230 volt operation by changing the position of the slide switch located on the rear panel, so that the designation appearing on the switch matches the nominal voltage of the power source.

#### 2-7. GROUNDING REQUIREMENTS.

2-8. To protect operating personnel, the National Electrical Manufacturers' Association (NEMA) recommends that the instrument panel and cabinet be grounded. Each Hewlett-Packard instrument is equipped with a three-conductor power cord which, when plugged into an appropriate receptacle grounds the instrument. The offset pin on the power cord three-prong connector is the ground wire.

2-9. To preserve the protection feature when operating the instrument from a two-contact outlet, use a three-prong to two-prong adapter and connect the green pigtail on the adapter to ground.

#### 2-10. INSTALLATION.

2-11. This instrument is fully transistorized; therefore no special cooling is required. However, the instrument should

not be operated where the ambient temperature is outside the limits specified in Table 1-2.

#### 2-12. Rack/Bench Installation.

2-13. This instrument is initially shipped as a bench-type instrument with plastic feet and tilt stand in place. This instrument can be rack mounted by using a rack mounting kit available at your nearest -hp- Sales and Service Office.

#### 2-14. REPACKAGING FOR SHIPMENT.

2-15. The following is a general guide for repackaging for shipment. If you have any questions, contact your local -hp- Sales and Service Office. (See Appendix at the back of this manual for office location.)

#### NOTE

*If the instrument is to be shipped to Hewlett-Packard for service or repair, attach a tag to the instrument identifying the owner and indicating the service or repair to be accomplished; include the model number and full serial number of the instrument. In any correspondence, identify the instrument by model number, serial number and serial number prefix.*

2-16. Place the instrument in its original container if available. If the original container is not available, a suitable one can be purchased from your nearest -hp- Sales and Service Office.

2-17. If the original container is not used:

a. Wrap the instrument in heavy paper or plastic before placing in an inner container.

b. Use plenty of packing material around all sides of the instrument and protect panel faces with cardboard strips.

c. Place the instrument and inner container in a heavy carton or wooden box and seal with strong tape or metal bands.

d. Mark the shipping container with "DELICATE INSTRUMENT," "FRAGILE" etc.





## SECTION III

### OPERATING INSTRUCTIONS

#### 3-1. INTRODUCTION.

3-2. This section contains information necessary for proper operation of the Model 3310A and Model 3310B Function Generators. Included in this section are identification of controls, indicators, and connectors (panel features), turn on procedures and general operating information. A special considerations and an applications section are also provided.

#### 3-3. PANEL FEATURES.

3-4. The Model 3310A and Model 3310B panel features are described in Figure 3-1. Each operating control, indicator, and connector is identified by an associated number and described by a paragraph with the corresponding number.

#### 3-5. GENERAL OPERATING INFORMATION.

##### 3-6. 3310A/B.

##### NOTE

The circled numbers (X) refer to Figures 3-1 and 3-2. Paragraphs 3-6 through 3-17 apply to both the 3310A and 3310B. Paragraphs 3-18 through 3-21 apply to the 3310B only.

3-7. Before connecting the Model 3310A/B to primary power ensure that the proper fuse (14) for the line voltage selected is used. (See Table 6-1)

3-8. Set the line selector switch (15) to correspond to nominal line voltage being used.

3-9. Connect the A.C. power cord to the power receptacle (16).

3-10. Set the front panel switch (1) to "LINE". The indicator (2) should light.

3-11. RANGE (3). Set the 3310A/B to the desired frequency by selecting the desired RANGE and adjusting the frequency dial (13) and vernier (12) to the desired setting. The output frequency is equal to the RANGE setting times the frequency dial setting.

3-12. FUNCTION (4). Select the FUNCTION desired.

3-13. LOAD. Connect the desired load to the output to be used (HIGH (6) or LOW (7)). Connect an oscilloscope across the load.

3-14. OUTPUT LEVEL (5). Observe the oscilloscope and adjust the output amplitude to the desired level.

3-15. D.C. LEVEL (8). If D.C. OFFSET is required set the offset knob to the polarity desired and adjust the offset vernier (9) to obtain the desired amount of offset.

3-16. VCO INPUT (11). If it is desired to frequency modulate or sweep the 3310A/B output connect an external source to the VCO INPUT. The 3310A/B will sweep a 50:1 range upward when the dial is set to 1 and a 0 to +10 ramp voltage is applied. A 50:1 downward sweep can be obtained if the dial is set at 50 and a 0 to -10 V ramp voltage is applied. To sweep symmetrically around a particular frequency apply a ramp waveform which varies from + to - and is symmetrical about the 0 V level.

3-17. SYNC OUTPUT (10). An external oscillator can be synchronized with the 3310A/B by connecting the SYNC OUTPUT to the sync input of the external oscillator. The sync output a d.c. coupled square wave in SQ., SINE, and TRI functions. It is a pulse in the PULSE and RAMP functions. The sync signal is inverted with respect to the output signal.

##### 3-18. 3310B.

##### NOTE

When the START/STOP PHASE control (18) of the 3310B is set to FREE RUN the 3310B operates as a Model 3310A Function Generator.

3-19. Manual Trigger (17). To use manual triggering, turn the START/STOP PHASE control to any setting other than FREE RUN. Set the controls (frequency, level, etc.) to obtain the desired output, and then depress the MANUAL TRIGGER button. The output will remain on as long as the button is held depressed, and will stop when the button is released. If a specific start and stop phase is desired, adjust the START/STOP PHASE control to obtain up to  $\pm 90^\circ$  phase variation.

3-20. Ext. Trigger (19). Set the 3310B controls for the desired output, and turn the START/STOP PHASE control to any setting other than FREE RUN. Connect the triggering signal to the EXT. TRIGGER input terminal on the rear panel. The triggering signal must be a square wave or pulse between +1 V and +30 V; it can be dc offset, but ( $V_{ac\ peak} + V_{dc}$ ) cannot be greater than  $\pm 30$  V. Single cycles of the 3310B output will be triggered at a repetition rate that is the same as the frequency of the triggering signal. The START/STOP PHASE control can be adjusted to vary the phase of the output approximately  $\pm 90^\circ$ .


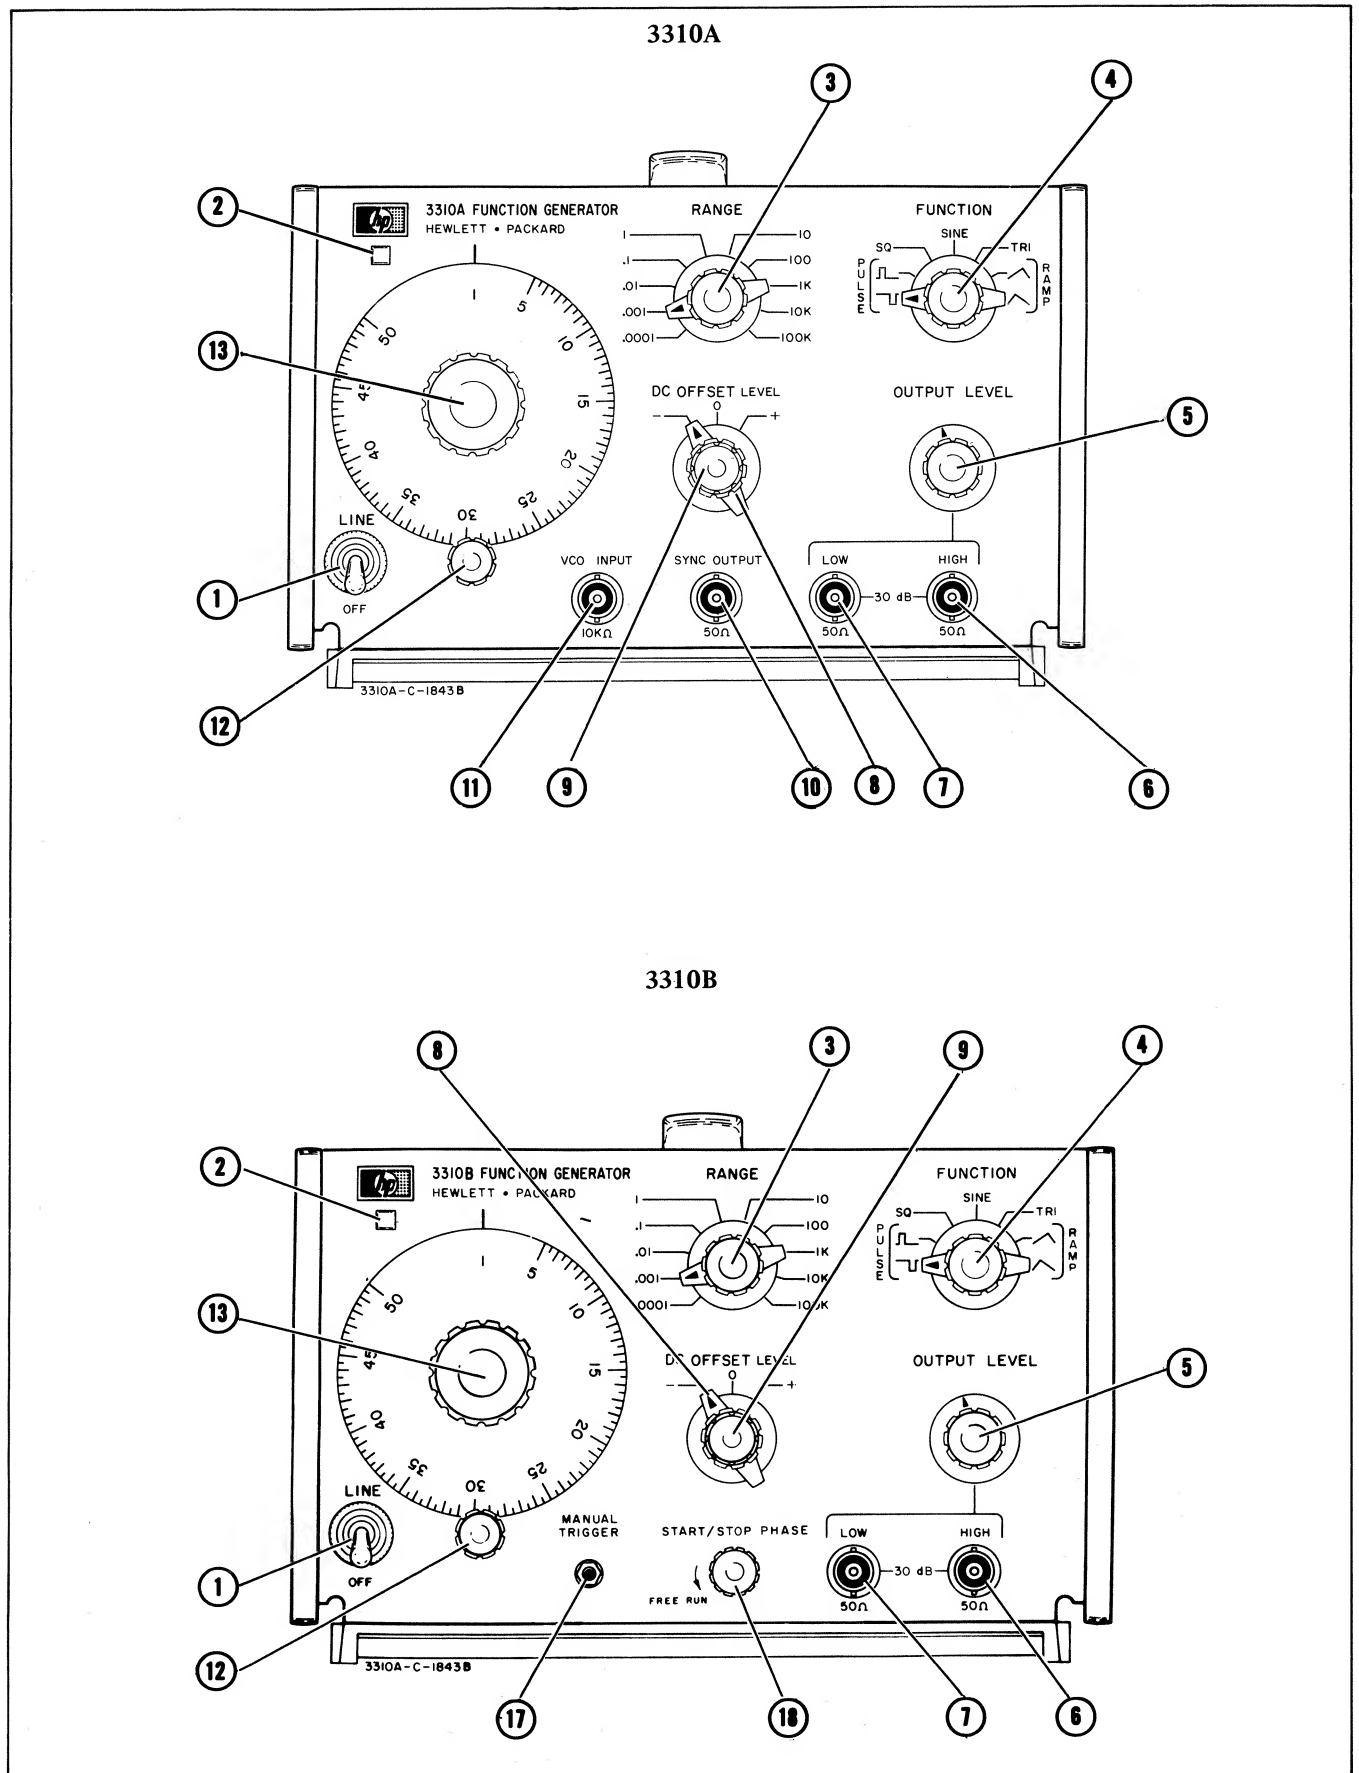


Figure 3-1. 3310A/B Front and Rear Panel Features.

NOTE: Shaded area  
pertains to the 3310B  
only.

## 3310A/B

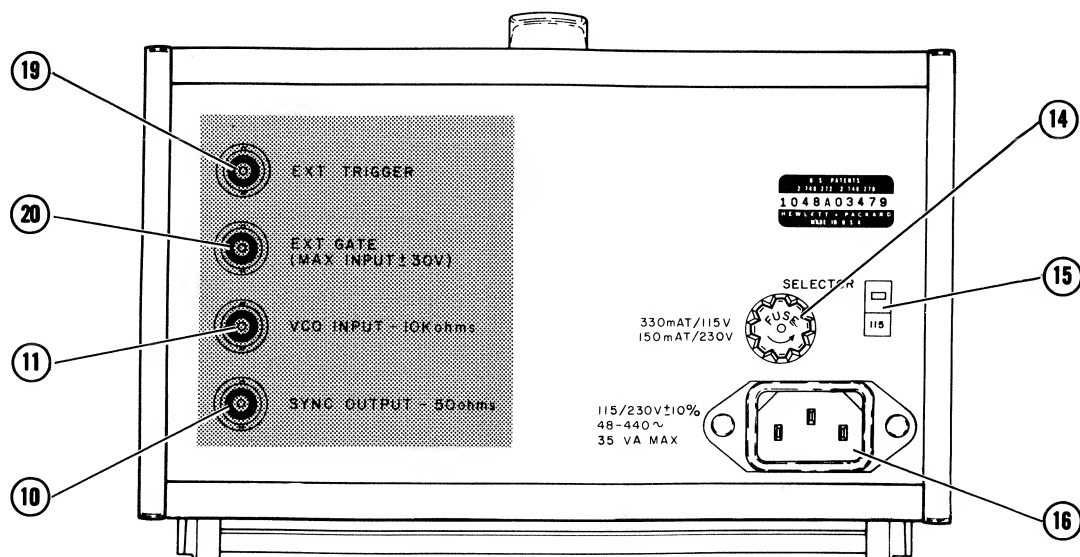

- ① LINE Switch: Applies primary power to the instrument when set the LINE position.
- ② On Indicator: Glows when instrument is operating.
- ③ RANGE Switch: Selects the frequency range of the 3310A/B. The frequency range setting times the dial setting determines the output frequency.
- ④ FUNCTION Switch: Selects the output waveform. Seven different functions are available.
- ⑤ OUTPUT LEVEL Control: Adjusts the output level. Output can be varied from approximately 1 V p-p to 30 V p-p into open circuit or .5 V p-p to 15 V p-p into 50 ohms.
- ⑥ HIGH Output: Output terminal for all functions, maximum output is 30 V p-p.
- ⑦ LOW Output: Provides same output as HIGH terminal except signal level is 30 dB below HIGH output if both outputs are equally terminated.
- ⑧ D.C. OFFSET Switch: Selects polarity of d.c. offset.
- ⑨ D.C. OFFSET LEVEL: Adjusts positive or negative d.c. offset voltage in a range of 0 to 10 V.
- ⑩ SYNC OUTPUT: Provides a square wave in SINE, SQ, and TRI functions, a pulse in PULSE and RAMP functions. Output is 2 V p-p into 50 ohms.
- ⑪ VCO INPUT: Input for an external frequency control voltage. A positive voltage increases frequency from dial setting. Negative voltage decreases frequency from dial setting.
- ⑫ Frequency Vernier: Frequency fine adjust.
- ⑬ Frequency Dial: Frequency coarse adjust.
- ⑭ Fuse: Protects the instrument from current overloads.
- ⑮ 115/230 V Slide Switch: Sets 3310A/B to operate from either 115 V or 230 V a.c. power source.
- ⑯ Primary Power Receptacle: Primary power is connected to the instrument here via the power cord.
- ⑰ MANUAL TRIGGER: Causes the 3310B to generate a continuous output when depressed if the START/STOP PHASE knob is set to some position other than free run.
- ⑱ START/STOP PHASE: When set to FREE RUN the 3310B operates as a Model 3310A. When not in FREE RUN position the control adjusts the starting and stopping phase of the 3310B output. Phase can be varied in a range of approximately  $\pm 90^\circ$ .
- ⑲ EXT. TRIGGER: A positive going pulse applied to this input generates a single cycle at the output. The period of the triggering pulse should be greater than the period of the output waveform.
- ⑳ EXT. GATE: A positive pulse applied to this input generates a frequency burst at the output. The length of the burst is proportional to the length of the gating pulse.

Figure 3-1. 3310A/B Front and Rear Panle Features (cont'd).

3-21. Ext. Gate (20). Set the 3310B controls for the desired output and turn the START/STOP PHASE control to any setting other than FREE RUN. Connect the gate signal to the EXT. GATE input terminal on the rear panel. The output will turn on at the application of +1 V to +30 V, and will remain on until the gate signal goes to zero. Adjust the START/STOP PHASE control to vary the phase of the output  $\pm 90^\circ$ . Single cycles can be triggered by applying any positive waveform between 1 V and 30 V which has a period greater than the period of the 3310B output and a duty cycle less than the period of the 3310B output. Multiple cycle bursts of any desired length can be obtained by setting the frequency of the gate input to a desired submultiple of the output frequency. The number of cycles per burst can be determined approximately by dividing the gate frequency into the output frequency. Exact determination of the number of cycles per burst must be made using an oscilloscope.

### 3-22. SPECIAL CONSIDERATIONS.

#### 3-23. Floating.

3-24. Because the Model 3310A/B has a direct coupled output, caution must be observed when attempting to float either the 3310A/B output or an external load. It should be noted that the 3310A/B output ground is PERMANENTLY CONNECTED TO CHASSIS GROUND (  $\perp$  ). Therefore, any attempt to connect an external source, which has a ground common with chassis ground, to the 3310A/B output ground will short the external source. Likewise, if the external source is connected to the 3310A/B output it will drive current into the output. *THIS MAY DAMAGE TRANSISTORS IN THE OUTPUT CIRCUIT AND CAUSE THE POWER SUPPLIES TO MALFUNCTION* unless your instrument has been modified per Service Note 3310A-1A (Output Protection Circuit Kit No. 03310-69503). Instruments with serial nos. 1126A03651 and greater contain this modification.

3-25. In order to facilitate floating of the 3310A/B output, without the use of external sources, the  $\pm$  DC OFFSET has been provided. A maximum open circuit offset voltage of  $\pm 10$  V can be obtained. It should be noted, however, that the peak voltage of the signal plus the value of d.c. offset cannot exceed  $\pm 15$  V into open circuit. Voltages in excess of this will be clipped. When driving a  $50\ \Omega$  load the above mentioned levels are halved. Therefore the maximum offset into  $50\ \Omega$  is  $\pm 5$  V and the peak of the output ( $V_{ac} + V_{dc}$ ) cannot exceed  $\pm 7.5$  V. An additional constraint is that the peak 3310A/B output current cannot exceed 150 mA. Figure 3-2 gives an example of how the internal d.c. offset can be used to bias a transistor.

3-26. If it is desired to float the 3310A/B using an external battery the method shown in Figure 3-3 should be used. *THIS METHOD IS RECOMMENDED ONLY IF THE MODIFICATION MENTIONED IN PARAGRAPH 3-24 HAS BEEN INSTALLED.....*

It should be remembered again that the maximum output current, including the current generated by the floating battery ( $V_f$ ) cannot exceed 150 mA. In addition, the ratio

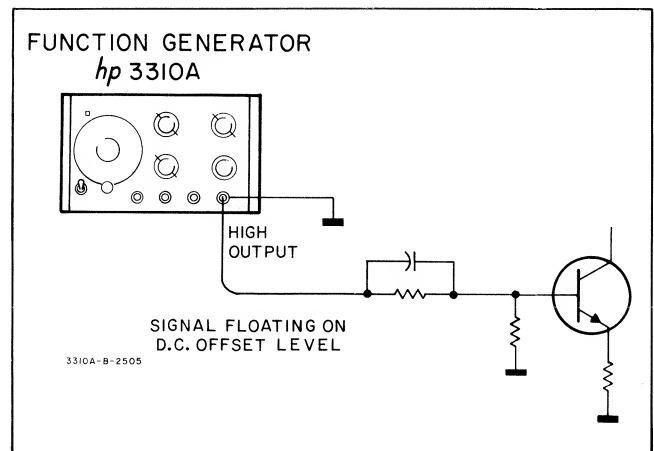


Figure 3-2. Biasing a Transistor Using the Internal D.C. Offset of the Model 3310A.

of  $R_L$  to the 3310A/B output impedance; i.e.  $50\ \Omega$ , should be large enough to permit no more than 15 V to be applied across the 3310A/B from the combined voltage of the 3310A/B output and the external source.

3-27. If so desired the 3310A/B output can be floated as shown in Figure 3-4. The CV product of the coupling capacitor  $C_c$  should always be small, however, in order to prevent surge currents from damaging the instrument when the floating battery is connected to the circuit. This method is, therefore, primarily for use at higher frequencies.

3-28. If the load is at some potential above chassis ground the 3310A/B output should be isolated from this potential for the reasons outlined in paragraph 3-24.



*RESISTOR R7 IS A FUSING RESISTOR WHICH PROTECTS THE INSTRUMENT AGAINST LARGE, SUSTAINED OVERCURRENTS WHICH MAY BE APPLIED TO THE OUTPUT TERMINAL.*

#### 3-29. DC Offset.

3-30. A maximum d.c. offset of  $\pm 10$  V into open circuit or  $\pm 5$  V into  $50\ \Omega$  is obtainable. It should be noted, however, that the peak of the output signal cannot exceed  $\pm 15$  V peak to peak into open circuit or  $\pm 7.5$  V into  $50\ \Omega$ . *THIS INCLUDES ANY DC OFFSET ASSOCIATED WITH THE SIGNAL.*

#### 3-31. Frequency Drift.

3-32. Under normal conditions of temperature and humidity the frequency drift of the Model 3310A/B is 0.1 % of setting for 10 minutes and .5 % of setting for 8 hours. The amount of drift varies from range to range and is affected by temperature and humidity.

#### 3-33. Amplitude Stability.

##### NOTE

*A 2 hour warmup period should be allowed for maximum frequency and amplitude stability.*

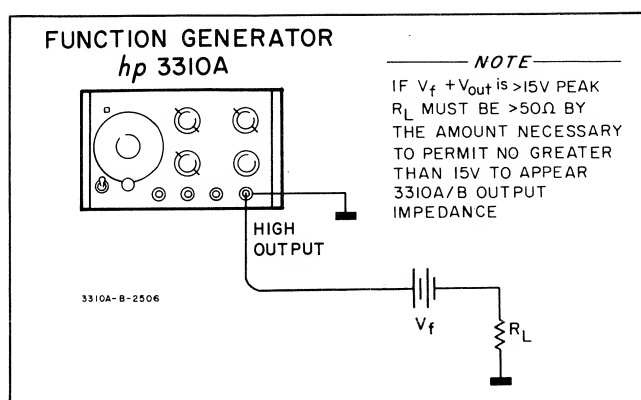


Figure 3-3. Floating the 3310A/B Output Using External Battery (Output Protection Circuit Installed).

3-34. Amplitude stability is affected by temperature and humidity. Under normal operating conditions the amplitude stability for a 10 minute period is .25 %. Over a period of 8 hours, it is slightly higher.

3-35. Changing The Duty Cycle (aspect ratio) of the 3310A/B Pulse and Ramp Waveforms.

3-36. The duty cycle of the 3310A/B output can be varied from a very small percentage of the output period to approximately 30 % by the method shown in Figure 3-6.

Both the 3310A/B frequency and the amplifier output amplitude potentiometer must be adjusted to obtain the desired frequency and duty cycle.

3-37. Phase Locking the 3310A/B.

3-38. To phase lock the 3310A/B to the fundamental or harmonics of another signal the circuit shown in Figure 3-5 should be used.

The 3N128 is a MOS-FET. It provides excellent isolation, therefore no distortion is introduced by the 3310A/B into the phase lock signal. The lock-in range depends on the

frequency and amplitude of the input and on the value of C. For an undistorted 3310A/B output, C should be large. For wide lock in range, C should be small. To make an initial selection of C, try  $X_C = 50 \Omega$  at the desired frequency.

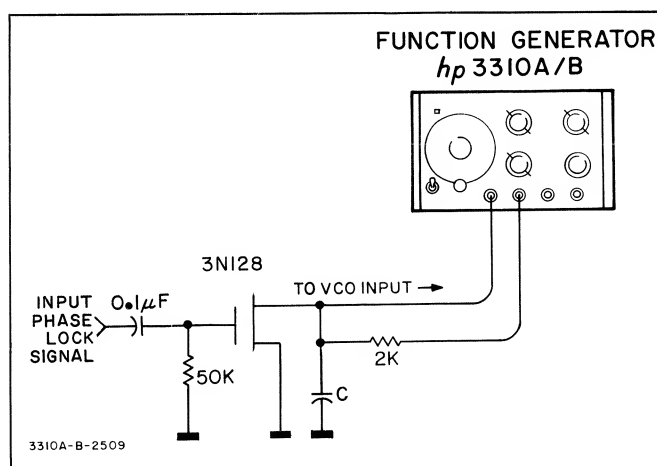


Figure 3-5. Phase Locking the 3310A/B.

3-39. Useability of the 3310B Tone Burst Output Above 50 kHz.

3-40. For many applications, the tone burst output of the Model 3310B is useful above 50 kHz. If the burst length of the 3310B output is large, i.e. long in respect to the period of one cycle of the output frequency, phase and amplitude fluctuations will be noted at the beginning of the burst. This phenomenon cannot be detected when using shorter burst lengths (5 to 10 cycles), however, because the phase and amplitude fluctuations which occur in the shorter time interval are very slight. As a result short bursts are useable in most applications. At higher frequencies (around 1 MHz) overshoot in the stop phase of the burst will be noted. This overshoot is typically less than 13 % of the peak to peak value of the output waveform.

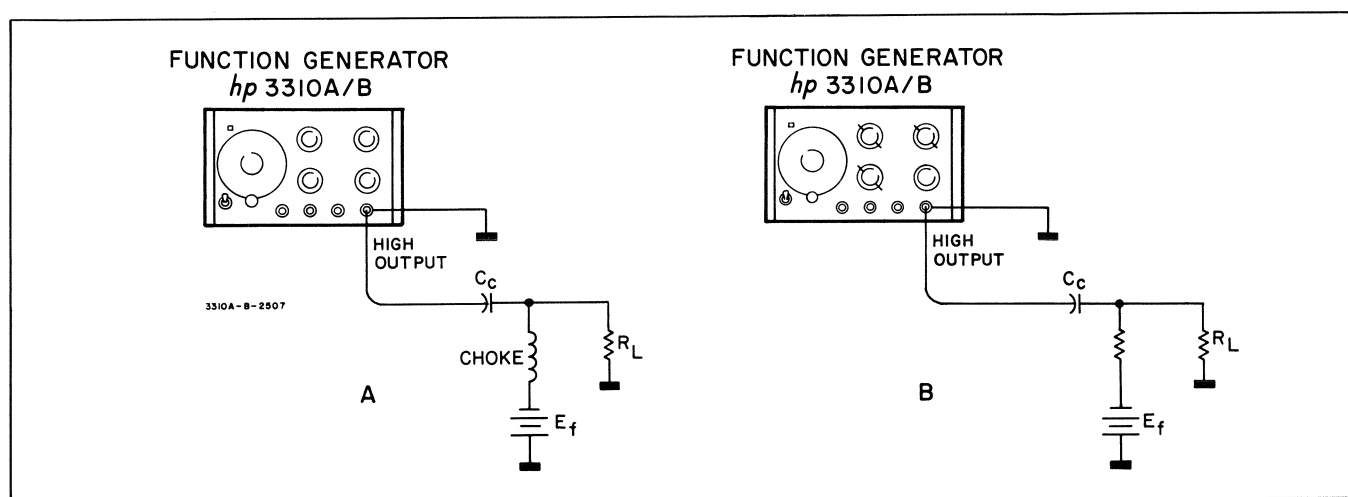


Figure 3-4. Floating the 3310A/B Output Using Capacitance Coupling for Output Protection.


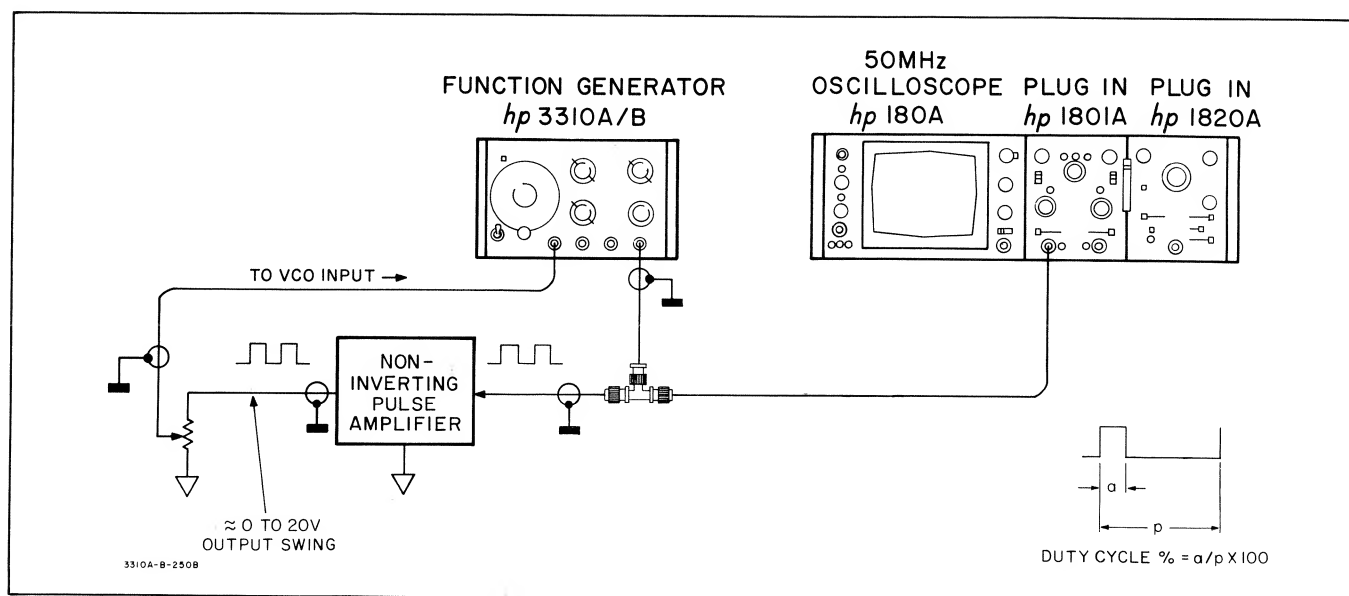


Figure 3-6. Changing the Duty Cycle of the 3310A/B Pulse and Ramp Functions.

### 3-41. APPLICATIONS.

3-42. The Model 3310A and Model 3310B Function Generators, because of their great versatility, are adaptable

to a wide range of applications. Frequency response matching, square wave circuit response testing, and time constant determination are but a few of the possible applications for the 3310A/B. Some specific applications are shown in Figures 3-7 through 3-11.

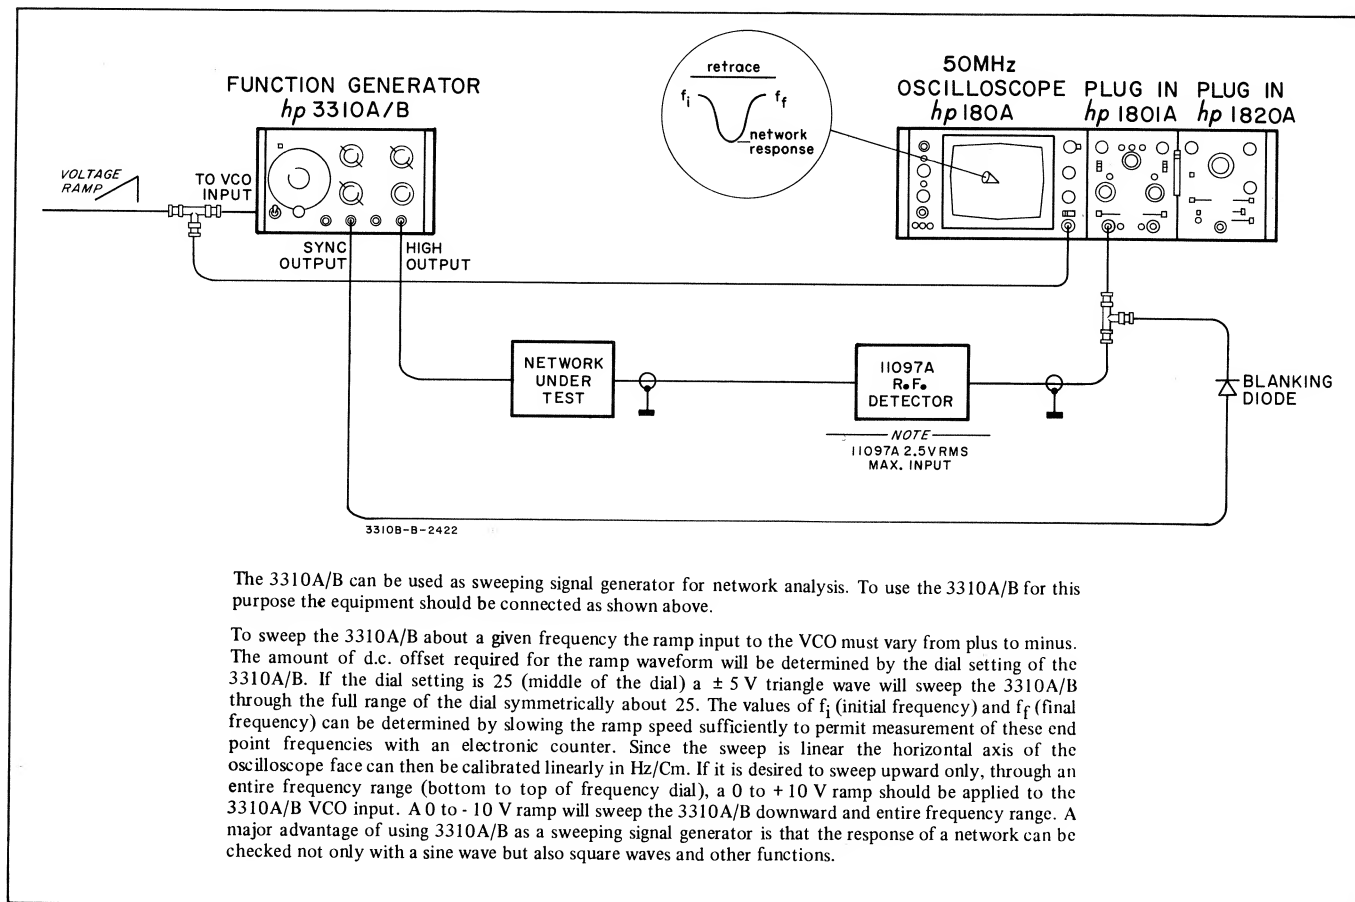

The 3310A/B can be used as sweeping signal generator for network analysis. To use the 3310A/B for this purpose the equipment should be connected as shown above.

To sweep the 3310A/B about a given frequency the ramp input to the VCO must vary from plus to minus. The amount of d.c. offset required for the ramp waveform will be determined by the dial setting of the 3310A/B. If the dial setting is 25 (middle of the dial) a  $\pm 5$  V triangle wave will sweep the 3310A/B through the full range of the dial symmetrically about 25. The values of  $f_i$  (initial frequency) and  $f_f$  (final frequency) can be determined by slowing the ramp speed sufficiently to permit measurement of these end point frequencies with an electronic counter. Since the sweep is linear the horizontal axis of the oscilloscope face can then be calibrated linearly in Hz/Cm. If it is desired to sweep upward only, through an entire frequency range (bottom to top of frequency dial), a 0 to +10 V ramp should be applied to the 3310A/B VCO input. A 0 to -10 V ramp will sweep the 3310A/B downward and entire frequency range. A major advantage of using 3310A/B as a sweeping signal generator is that the response of a network can be checked not only with a sine wave but also square waves and other functions.

Figure 3-7. Using the 3310A/B for Network Analysis.

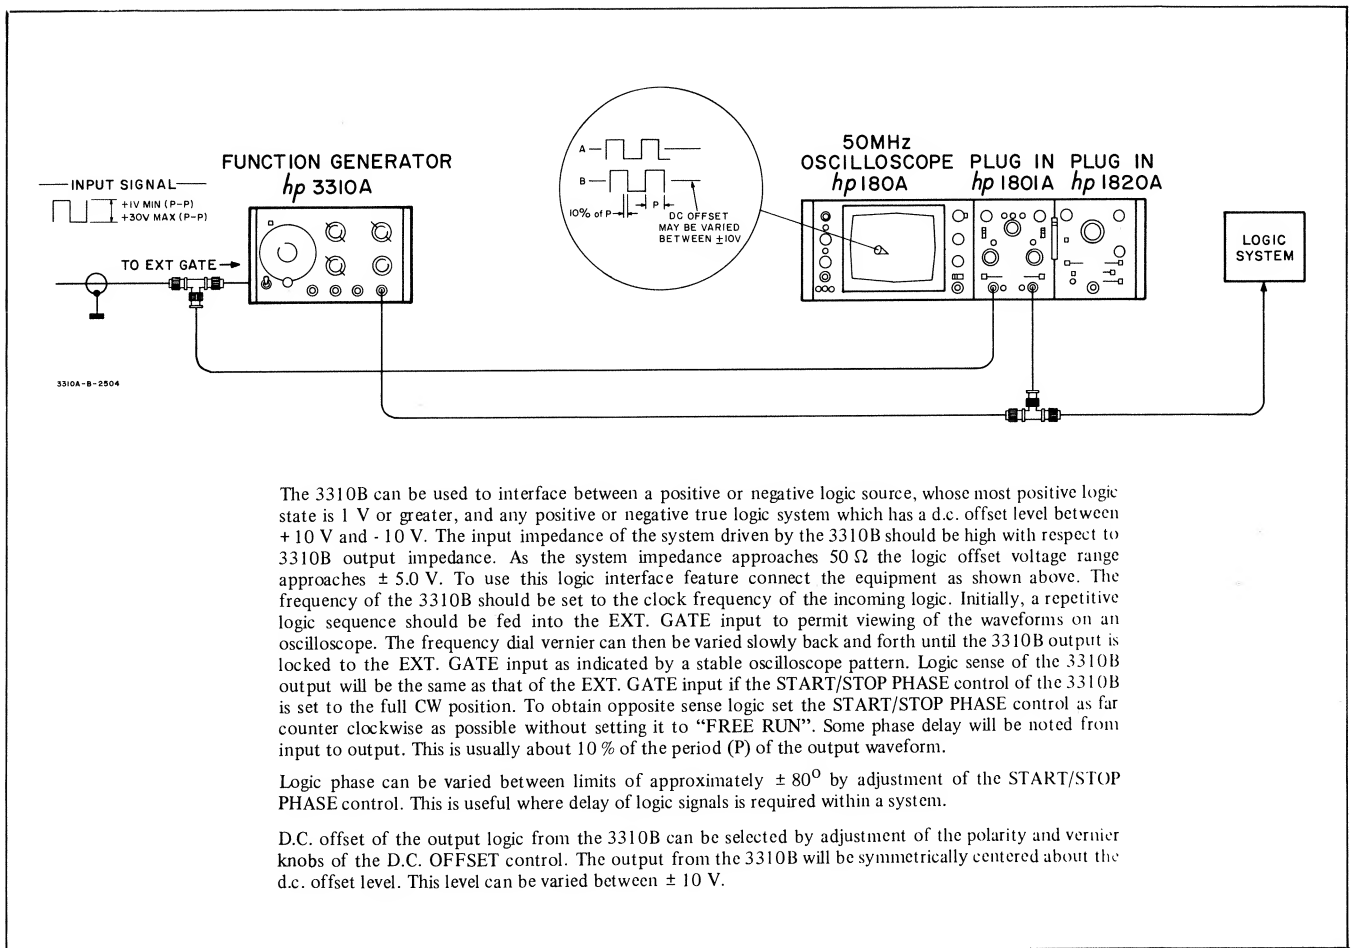


Figure 3-8. Using the 3310B as a Logic Interface.

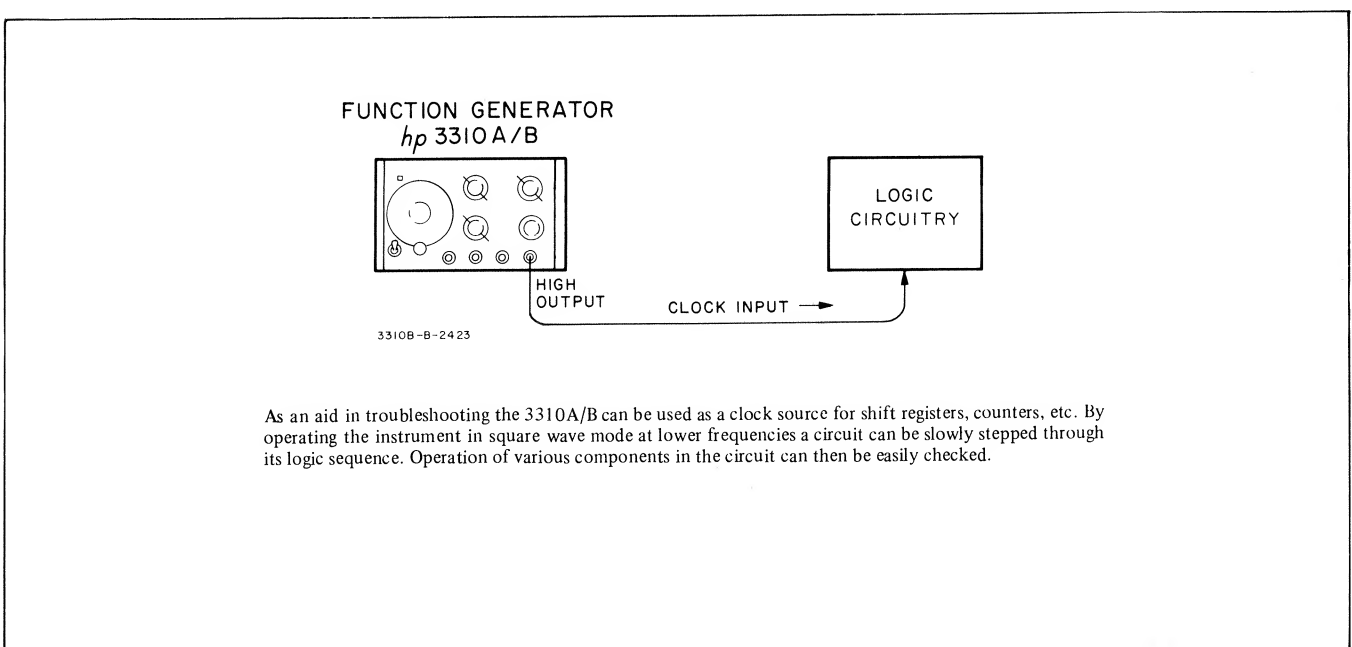


Figure 3-9. Using the 3310A/B as Clock Source for Logic Circuitry Troubleshooting.

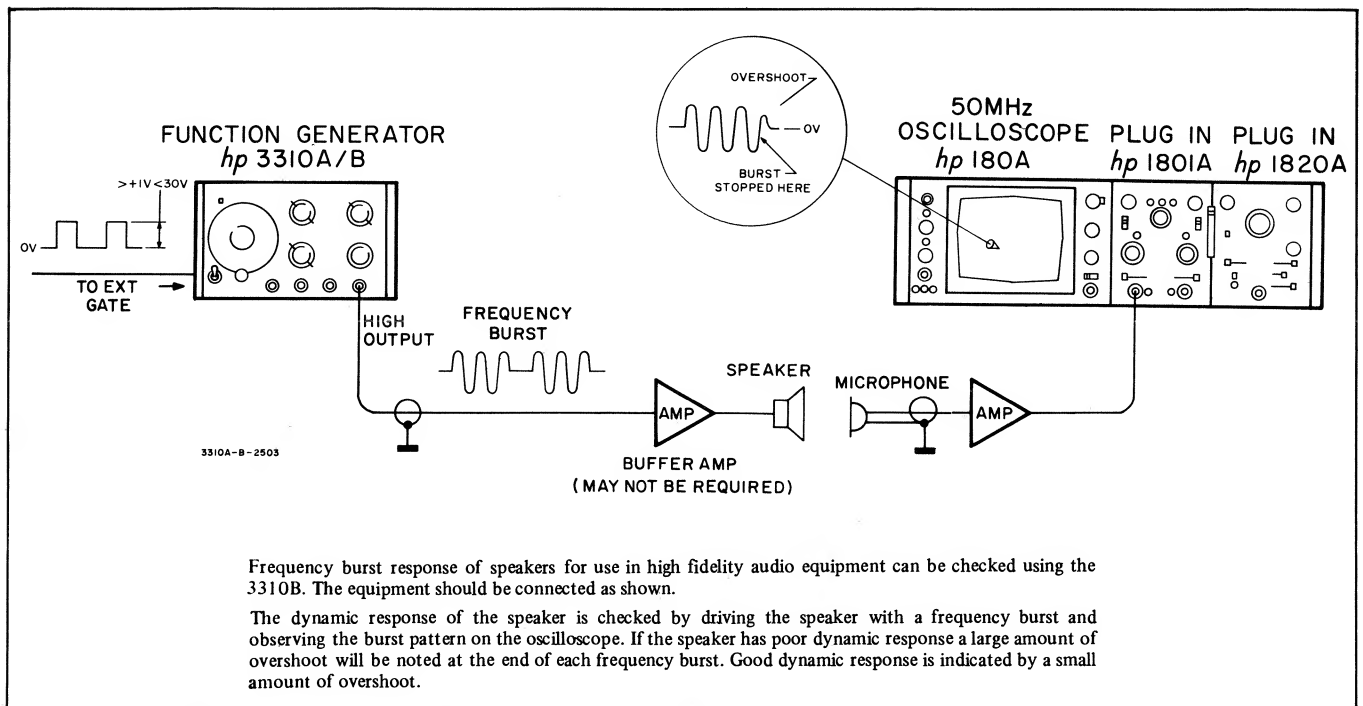


Figure 3-10. Checking the Dynamic Response of a Speaker.

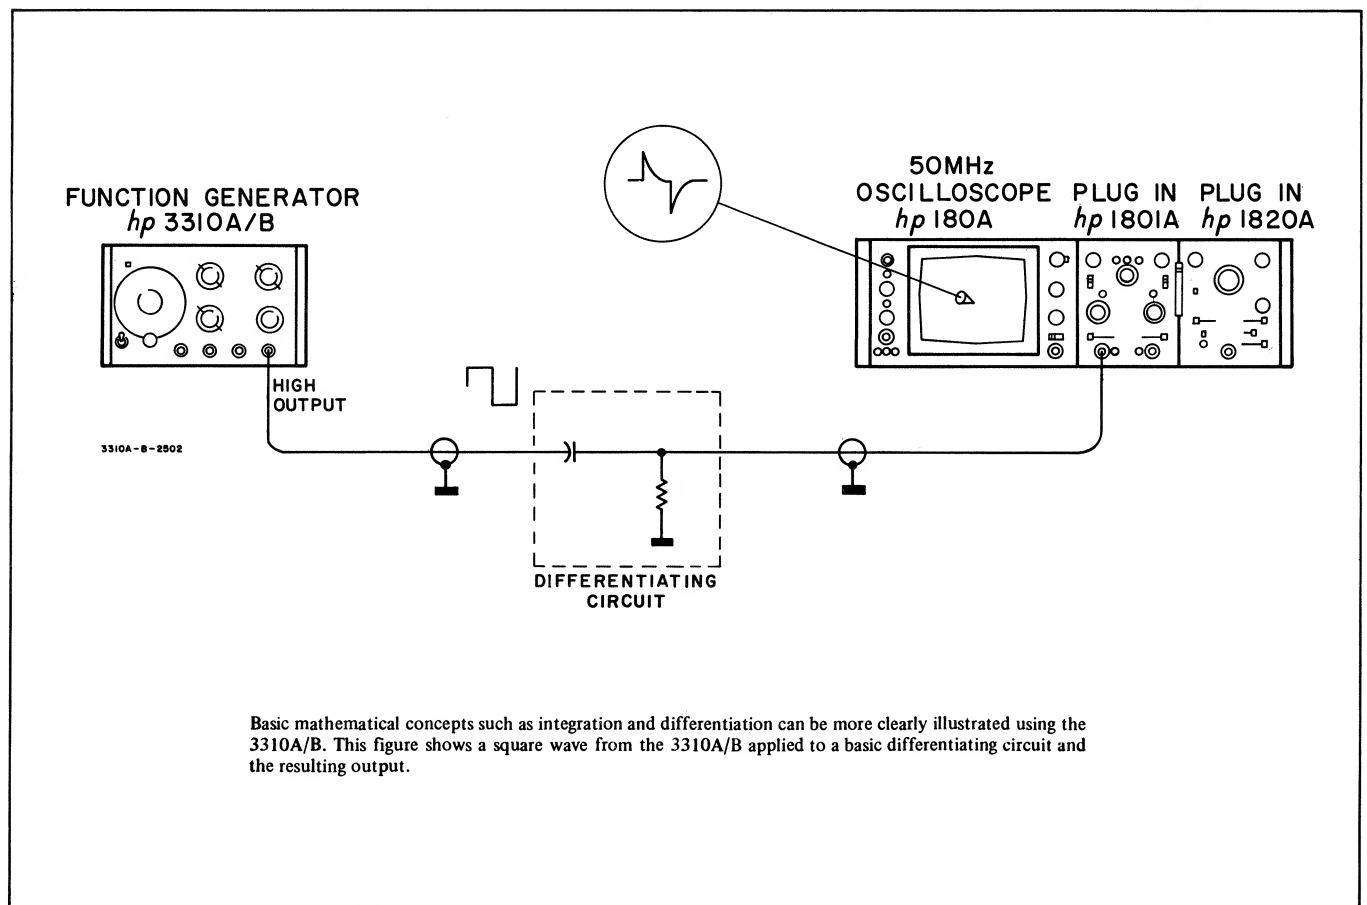


Figure 3-11. Using the 3310A/B to Show Basic Mathematical Concepts.





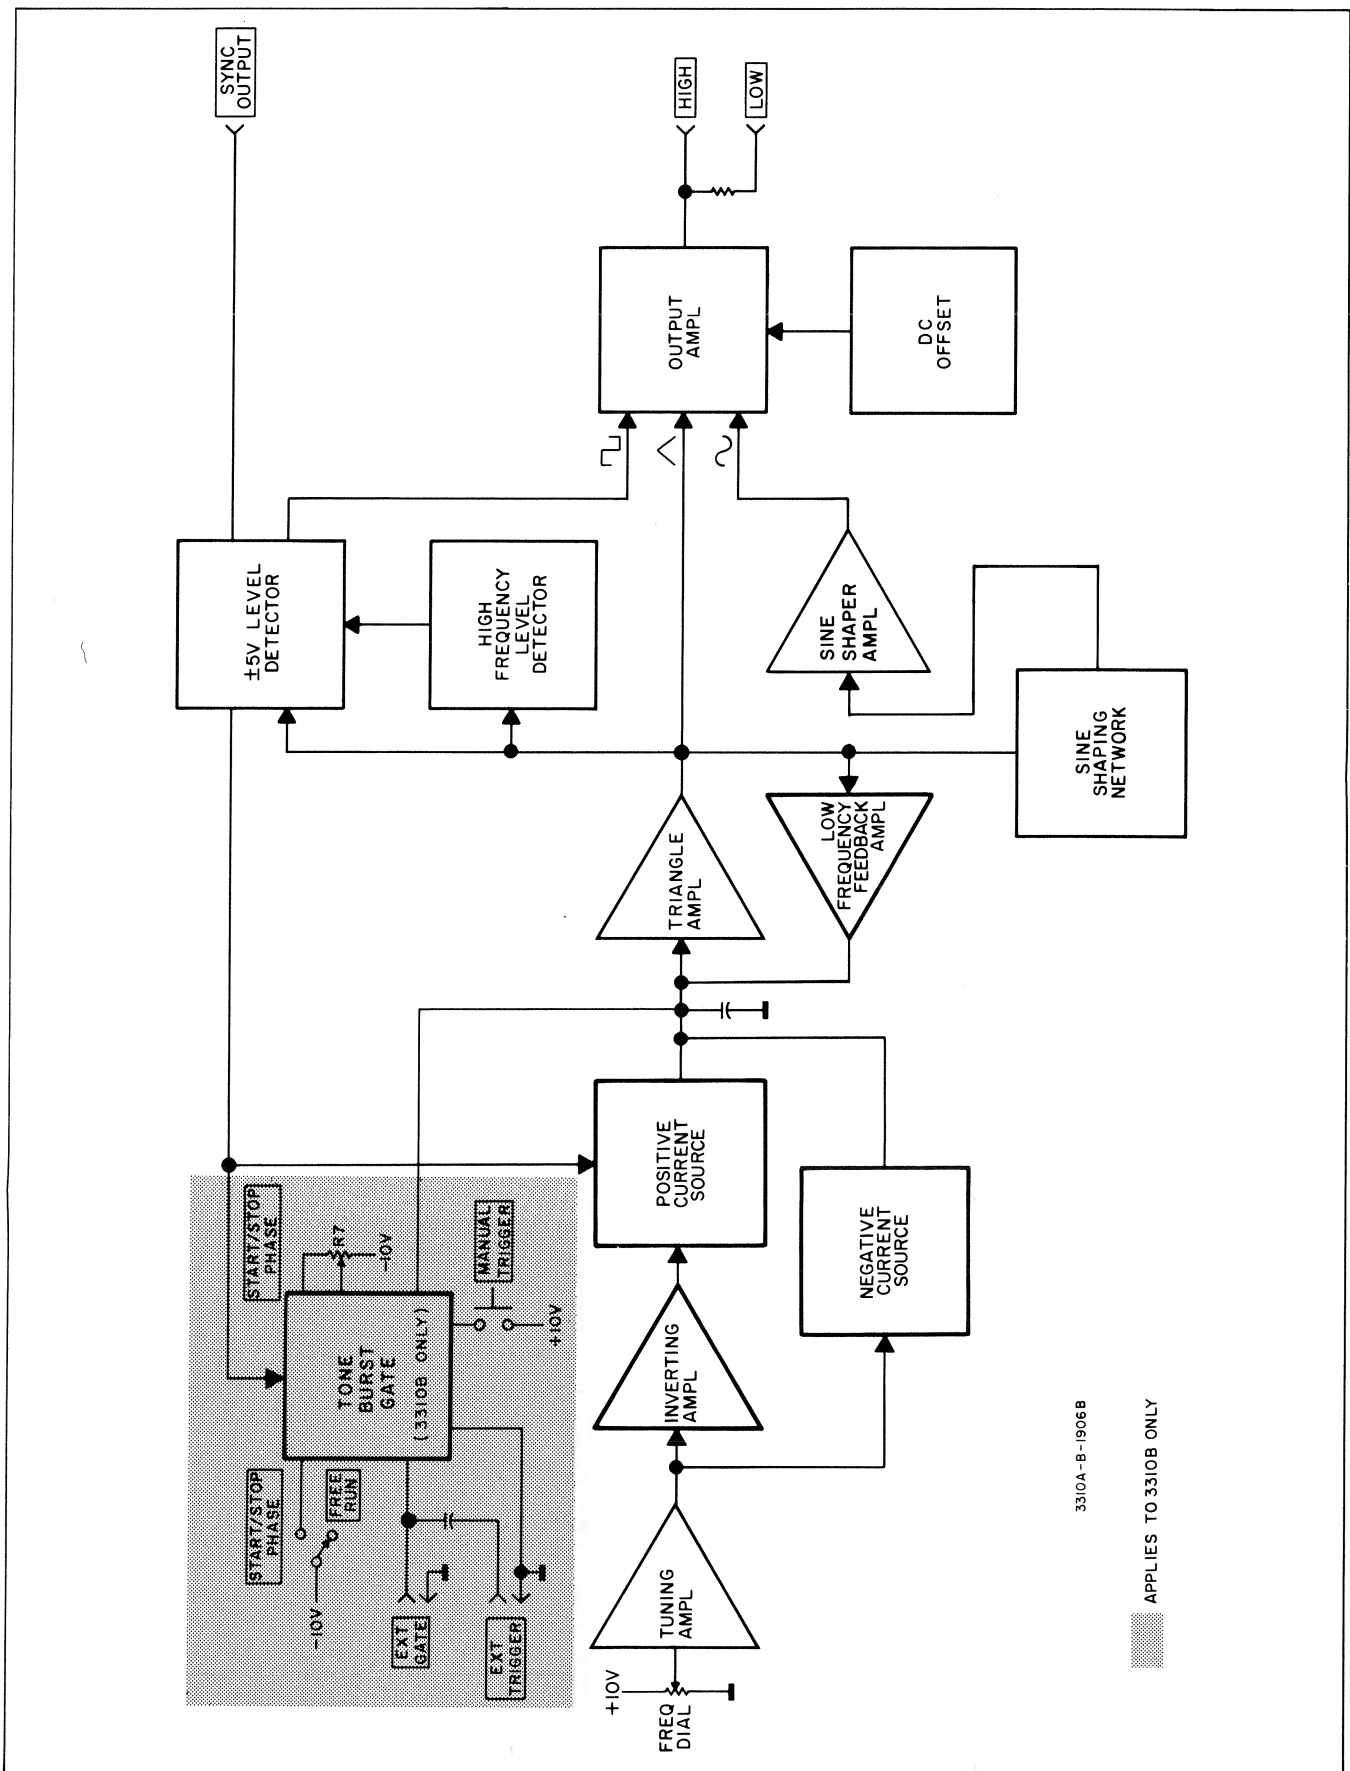


Figure 4-1. Simplified Block Diagram.

## SECTION IV

### THEORY OF OPERATION

#### 4-1. INTRODUCTION.

4-2. This section contains a simplified block diagram of the 3310A/B, a discussion of the theory of operation relating to the simplified block diagram, and detailed schematic theory of operation referring to Figures 7-1 through 7-7

#### 4-3. BLOCK DIAGRAM DESCRIPTION. (3310A)

4-4. This description refers to Figure 4-1, Simplified Block Diagram. A detailed Functional Block Diagram is found in Section VII of this manual.

4-5. This instrument incorporates a voltage to frequency conversion device. The Frequency Dial controls a potentiometer which supplies between 0 V and 9.0 V dc to the Tuning Amplifier. The Tuning Amplifier is an inverting amplifier with a gain of approximately two. The output of the tuning amplifier is coupled to a negative current source and to the Inverting Amplifier, which has a gain of one. The output of the Inverting Amplifier is coupled to a positive current source.

4-6. The input for the Triangle Amplifier is taken across an integrating capacitor. Current from a positive voltage source (positive current) first charges the capacitor. The capacitor is then discharged to a negative voltage source (negative current). In the symmetrical functions SQ, SINE, and TRI the positive current is equal to the negative current. In the asymmetrical RAMP and PULSE functions, the positive and negative currents are unequal. The currents are reversed when the output of the triangle amplifier reaches either + or - 5 V as detected by the  $\pm 5$  Volt Level Detector.

4-7. The positive current source linearly charges the integrating capacitance in a positive direction. This linearly changing voltage is the input of the Triangle Amplifier, causing the voltage output of the Triangle Amplifier to change linearly in a positive direction. When the output reaches + 5 volts, the  $\pm 5$  Volt Level Detector flips, and the negative current source begins to linearly discharge the integrating capacitance. As the integrating capacitance is discharged, the Triangle Amplifier output continues in a negative direction until it reaches - 5 volts. At - 5 volts the  $\pm 5$  Volt Level Detector flips, and one cycle of the triangle wave is complete.

4-8. The time required to charge and discharge the integrating capacitance determines the period of one cycle and therefore the frequency. The charge time may be changed by varying either the integrating current or the integrating capacitance.

4-9. On the X10 range and higher, the integrating capacitance value changes as the RANGE is switched. The Frequency Dial varies the integrating current at all frequencies. On the X.1 range and below, the Low Frequency Feedback Amplifier supplies an opposing integrating current. The amount supplied depends upon the RANGE position.

4-10. At frequencies above 50 kHz, the High Frequency Level Detector prevents overshoot in the  $\pm 5$  Volt Level Detector. To maintain high frequency accuracy it is necessary to flip the  $\pm 5$  Volt Level Detector before the 5 volt level is reached. The High Frequency Level Detector determines how early the flip must take place to correct for loop delay.

4-11. The output of the  $\pm 5$  Volt Level Detector is a square wave which, when amplified by the Output Amplifier, becomes the square wave output.

4-12. The output of the Triangle Amplifier is also coupled to the Sine Shaping Network and the Sine Shaper Amplifier. The triangle wave is synthesized into a sine wave by the Sine Shaping Network, and this sine wave is amplified by the Sine Shaper Amplifier. The output of the Sine Shaper Amplifier, when amplified by the Output Amplifier, becomes the sine wave output.

4-13. The outputs of the  $\pm 5$  Volt Level Detector, the Sine Shaper Amplifier, and the Triangle Amplifier are amplified by the Output Amplifier. A dc voltage may be summed with any of the inputs to the Output Amplifier to produce a dc offset output.

4-14. The output of the  $\pm 5$  Volt Level Detector provides the SYNC OUTPUT signal. This Sync Output signal is a square wave in SINE, SQ, and TRI. In the pulse and ramp functions it is a pulse.

4-15. The Output Amplifier supplies the chosen signal to the HIGH output connector. The same signal is attenuated 30 dB and is available at the LOW output connector.

#### 4-16. DETAILED SCHEMATIC DESCRIPTION (3310A).

4-17. The following paragraphs refer to Figures 7-1 and 7-2.

4-18. The Tuning Amplifier consists of A1IC1 and A1Q1. It is an operational amplifier, using feedback through A1R11. The input to the Tuning Amplifier is a summing junction which sums the voltage from the VCO INPUT with the voltage from the Frequency Dial potentiometer. R1.

Variable resistors A1R1 through A1R5 provide fine adjustment for each frequency range from X1 to X100 K. The output of the Tuning Amplifier is coupled to the input of the Inverting Amplifier and to the negative Current Source A1Q6.

4-19. The Inverting Amplifier consists of A1IC2 and A1Q2. It has a gain of one and inverts the voltage. The output of the Inverting Amplifier is coupled to the positive Current Source.

4-20. The inputs to both current sources are coupled through the FUNCTION switch A2S3. In sine, square, and triangle functions, the resistors A2R1 and A2R4 control the amount of current in the current sources. If the amount of current flowing in the negative current source A1Q6 is equal to  $i$ , then a current of  $2i$  is flowing in the positive current source. The output of positive current source A1Q5 is gated on by the  $\pm 5$  Volt Level Detector during the positive portion of the Triangle Amplifier output.

4-21. Since A1Q5 is supplying current equal to  $2i$ , and A1Q6 is supplying a negative current equal to  $i$ , a positive current equal to  $i$  is coupled to the integrating capacitance at the Triangle Amplifier input. When the Triangle Amplifier output reaches  $+5$  volts, the  $\pm 5$  Volt Level Detector changes state. A negative gate is coupled to A1CR4, terminating the positive  $2i$  current from A1Q5. Since the negative current  $i$  is still flowing in A1Q6, this negative current  $i$  discharges the integrating capacitance. This condition exists until the output of the Triangle Amplifier reaches  $-5$  volts, at which time the positive current  $2i$  is gated on again. This completes one cycle of the oscillation.

4-22. In the pulse and ramp functions, asymmetrical values of positive and negative current flow. These different values of current determine an 85% or 15% duty cycle.

4-23. The feedback through A1R10 to the Tuning Amplifier input corrects for changes in characteristics in A1Q5 and A1Q6 and avoids frequency error.

4-24. The Bias Network consists of A1Q3 and A1Q4, and corrects for the individual differences between A1Q5 and A1Q6 and keeps their emitter voltages at the correct levels to avoid symmetry error.

4-25. The following paragraphs refer to Figures 7-1 and 7-3.

4-26. The value of integrating capacitance on the input of the Triangle Amplifier depends upon the position of the RANGE switch. Figure 7-3 shows this switch in the X.0001 position. If the RANGE switch were in the X10 position A1C13, A1C14, and A1C16 would be in parallel with A1C17 to form the total integrating capacitance.

4-27. As the frequency dial is varied, the currents in the current sources vary. The greater the current source outputs, the higher the rate of change seen at the integrating capacitance, and the shorter the period of each cycle of the Triangle Amplifier.

4-28. The input stage of the Triangle Amplifier is a field effect transistor, A1Q12. This FET has a very high input impedance. A1Q13 is a current source for the FET, and A1R56 is a bias adjustment. The output of the Triangle Amplifier is coupled to the  $\pm 5$  Volt Level Detector.

4-29. The output of the Triangle Amplifier is coupled to tunnel diodes A1CR21 and A1CR22. When the triangle output reaches  $+5$  volts, A1CR21 conducts, causing the  $\pm 5$  Volt Level Detector to change states. When the triangle output reaches  $-5$  volts, A1CR22 conducts, causing the level detector to flip back to its original state. Three parallel output stages furnish the square or rectangular wave outputs.

4-30. The triangle output is also coupled to the High Frequency Level Detector through A1CR13 and A1CR15. On the X10 K and X100 K ranges, the outputs of the A1Q22 and A1Q26 are coupled to the  $\pm 5$  Volt Level Detector.

4-31. As the frequency of the instrument increases above 50 kHz, the time required to gate the current source and reverse the triangle output becomes significant. Because of this loop delay, the triangle output begins to go slightly beyond  $\pm 5$  volts. This starts to increase the period of each cycle and introduces frequency error.

4-32. As the peak value of the triangle starts to increase, the charge on A1C22 and A1C26 increases. The outputs of A1Q22 and A1Q26 change and the result is a change of bias on the tunnel diodes, causing them to conduct at some level below  $\pm 5$  volts. This corrects the condition which would otherwise cause frequency error.

4-33. For ranges X.0001 through X10, the integration capacitance for the Triangle Amplifier remains the same because of physical size limitations. On these ranges the Low Frequency Feedback Amplifier becomes active. This amplifier, consisting of A1Q44 through A1Q51, supplies a negative feedback current to the integrating capacitance. When the current sources are supplying a positive current, the feedback amplifier is supplying a negative current. When the current sources are supplying a negative current, the feedback amplifier supplies a positive current. The integrating capacitance is then charged with a current equal to the source current minus the feedback current.

4-34. The feedback current changes by a factor of 10 with each change of range switch position. This is accomplished by switching in different values for the feedback resistor. The feedback current is constant for any one frequency.

4-35. The input stage of the feedback amplifier is a differential amplifier using a dual FET. This differential amplifier is referenced to the Triangle Amplifier input.

4-36. The following paragraphs refer to Figures 7-1 and 7-4.

4-37. At the input to the Sine Shaping Network, there is shown a feedback path going to the positive current source. The feedback capacitor A2C1 is selected to furnish a positive feedback current to the positive current source output that is equal to the amount of current lost through the capacitance of the positive current source transistor at higher frequencies.

4-38. The triangle wave is applied to the Sine Shaping Network through resistor A2R10. The even numbered diodes conduct in shaping of the negative half of the sine wave while the odd numbered diodes conduct in shaping the positive half of the sine wave. Transistors A3Q1 through A1Q6 are constant voltage supplies for the diode shaping network.

4-39. The signal at the input to the Sine Shaper Amplifier is a sine wave. The shaper amplifier is an inverting operational amplifier whose gain is approximately one, as controlled by the input resistor A2R11 and the feedback resistor A2Q18.

4-40. The FUNCTION switch S3 is used to couple one of the waveforms to the OUTPUT LEVEL control A2R20. From the center arm of this potentiometer, the signal is coupled through A3R31 to a summing junction. At this summing junction, the signal is summed with the output of the DC OFFSET LEVEL control. Up to  $\pm 10$  V dc offset voltage may be coupled through A3R32 to the summing junction.

4-41. The lower frequencies are amplified by A3IC1 and coupled through A3CR28 and A3R36 to the collector of A3Q9. High frequencies are coupled through A3C5 and A3C6 to the bases of A3Q9 and A3Q12. At high frequencies A3C7 couples the signal from A3Q9 collector to A3Q11 emitter.

4-42. The final output transistors Q1 and Q2 complete the complementary symmetrical output stages. A3CR15 through A3CR20 are biasing diodes. A3R69 supplies negative feedback to the input of the amplifier to control the overall gain. Diodes CR1 and CR2 in conjunction with their associated circuitry provide voltage protection for the output circuit. Diodes A1CR30 and A1CR31 reduce the otherwise large junction capacity of the zener diodes CR1 and CR2.

4-43. A3R66 provides 50 ohms resistance for the amplifier HIGH output. R5 attenuates the signal 30 dB and R6 provides the 50 ohms resistance for the LOW output.

#### 4-44. BLOCK DIAGRAM DESCRIPTION (3310B).

4-45. When the START/STOP PHASE control is set to FREE RUN the 3310B operates as a Model 3310A Function Generator. At any setting other than FREE RUN

the TONE BURST GATE is operable and can be controlled by the EXT. GATE, EXT. TRIGGER, or MANUAL TRIGGER inputs. Tone bursts of any length or duty cycle (within the triggering frequency range of the 3310B) can be generated. The START/STOP PHASE of the tone burst is determined by R7. The signal always stops in the same phase it started.

#### 4-46. DETAILED SCHEMATIC DESCRIPTION (3310B).

4-47. The following paragraphs refer to Figure 7-7

4-48. The circuit for the TONE BURST GATE and the power supplies for the 3310B are mounted on the A5 assembly. This assembly occupies the same physical position as the A4 assembly in the 3310A.

4-49. When the START/STOP PHASE control is set to FREE RUN, relay K1 is open and the trigger and gate circuitry is deactivated. When the START/STOP PHASE control is at any setting other than FREE RUN, -10 V is applied to relay K1, closing it and connecting the output from the integrator to the limiter circuit. The limiter consists of A5Q1 through A5Q2 and associated circuitry.

4-50. The voltage set on the START/STOP PHASE control, R8, is applied to the base of A5Q2. When the voltage from the integrator equals that on the base of A5Q2, the limiter will clamp the integrator voltage to that level. With the integrator output held at this level, the  $\pm 5$  V detector will not switch the current sources, resulting in a dc level at the output which is proportional to the setting of R8. Thus R8 controls the stop phase of the output.

4-51. Potentiometer R8 also controls the start phase of the output. In order for the START/STOP PHASE control to have an effect on the output, A5Q7 must be on. If A5Q7 is off the voltage on the base of A5Q2 rises above the integrator voltage applied to the base of A5Q1. This allows the triangle wave from the integrator to continue from where it was limited, starting the output in the phase it was stopped.

4-52. The condition of A5Q7 is determined by the output of A5IC1. When an external gate signal is applied to the base of A5Q10, through J6, J7 or S6, A5Q10 conducts and shorts the square wave from the  $\pm 5$  V detector to ground. Transistor A5Q8 is also turned on at this time causing A5IC1 to shut off A5Q7. This, in turn, switches the limiter and allows the output to start as explained in paragraph 4-51. When the gate signal drops below approximately +1 V, A5Q8 and A5Q10 will stop conducting, and the next positive portion of the square wave from the detector will turn on A5Q9. This switches A5IC1 turning on A5Q7, allowing the limiter to clamp the triangle voltage from the integrator.

Table 5-1. Required Test Equipment

INSTRUMENT TYPE	REQUIRED SPECIFICATIONS	RECOMMENDED MODEL
Electronic Counter	0.0005 Hz to 5 MHz with time interval capability (5262A Plug-in)	-hp- Model 5245L/5262A
Oscilloscope	5 MHz Bandwidth	-hp- Model 180A/1801A/1820A
RMS Voltmeter	Accuracy: 2% dB Range: -60 dB to +10 dB	-hp- Model 3400A
Broadband Sampling Voltmeter	Frequency Range: 1 MHz to 50 MHz Voltage Range: 0.003 V to 3 V	-hp- Model 3406A
Digital Voltmeter	Ranges: 10 V dc to 30 V dc with 4 digit presentation	-hp- Model 3439A/3441A
AC/DC Voltmeter	Ranges: 1 V to 300 V Accuracy: 3%	-hp- Model 427A
DC Power Supply	Range: 0 V to 15 V continuously variable	-hp- Model 6215A
DC Null Voltmeter	Ranges: $\pm 3 \mu\text{V}$ to $\pm 30 \text{ mV}$	-hp- Model 419A
Thermal Converter	Input Impedance: 50 $\Omega$ Voltage Input: 3 V rms Frequency Range: 5 Hz to 5 MHz	-hp- Model 11049A
Feedthrough Terminating Resistance	Resistance: 50 $\Omega$ Frequency Range: dc to 5 MHz	-hp- Model 11048B
DC Reference Supply	(See Figure 5-1) Resistor: variable 50 $\Omega$ Resistor: variable 500 $\Omega$ Resistor: fixed 6.5 k $\Omega$ Battery: 1.3 V	-hp- Part No. 2100-1481 -hp- Part No. 2100-0324 -hp- Part No. 0811-0392 Mallory RM-42R
5 MHz High Pass Filter	(See Figure 5-4) C1, C: fxd 91 pF L1, L: var 10 - 20 $\mu\text{H}$	-hp- Part No. 0160-2203 -hp- Part No. 9140-0035
Pad: 50 $\Omega$ matching 5 dB attenuation	Resistor: fxd 14.7 $\Omega$ (2) Resistor: fxd 82.5 $\Omega$	-hp- Part No. 0698-3428 -hp- Part No. 0757-0711
Oscillator	0 to >200 kHz, >1 Vrms into 50 $\Omega$	-hp- Model 204C
Power Supply	0 - 30 V, 100 mA, regulated	-hp- Model 721A
Square Wave Gen.	0 - 1 MHz, 30 V p-p output	-hp- Model 211B (or 3310A)
Strip Chart Recorder	10 inch chart width, 2 in/min chart speed	-hp- Model 7127A
Distortion Analyzer	Distortion measurement range: 5 Hz to 600 kHz $\pm 0.1\%$	-hp- Model 331A/332A

## SECTION V

### MAINTENANCE

#### 5-1. INTRODUCTION.

5-2. This section contains information necessary for proper maintenance and repair of the 3310A and 3310B Function Generators. Included are the Performance Checks, Adjustment and Calibration Procedures, Troubleshooting information, and Repair Procedures.

#### 5-3. TEST EQUIPMENT REQUIRED.

5-4. Table 5-1 contains information about the test equipment necessary to perform the procedures given in this section. This table includes the types of instruments required, their critical specifications, and recommended models. If the recommended model is not available, any model which meets the same requirements may be substituted.

#### 5-5. PERFORMANCE CHECKS.

5-6. The Performance Checks are designed to assist in comparing the 3310A/B with its published specifications. These checks may be used for incoming inspection, periodic maintenance, and after-repair checks. The Performance Checks should be done before any attempt is made to adjust or calibrate the instrument. The Performance Checks for the Model 3310A also apply to the Model 3310B when the 3310B START/STOP PHASE control is in the "FREE RUN" position. If the instrument does not meet the requirements outlined in the Performance Checks, refer to the Adjustment and Calibration procedure in this section.

5-7. A performance Check Test Card is provided at the end of this section for recording the performance of the 3310A/B during Performance Checks. The card may be removed from the manual and used as a permanent record if desired.

#### 5-8. Frequency Range Check.

#### Specification

Frequency Range: 0.0005Hz to 5MHz in decade ranges

#### NOTE

*This check requires 40 to 45 minutes to complete because of the time required to check the lowest output frequency. If desired the check may be omitted.*

5-9. Terminate the HIGH output of the Model 3310A/B in 50 ohms and connect this output to the d.c. input of an electronic counter.

5-10. Set the Model 3310A/B Controls as follows:

OUTPUT LEVEL ..... Approximately  
1/2 of maximum  
FUNCTION ..... SQ (square wave)  
RANGE ..... X.0001  
OFFSET LEVEL ..... 0

5-11. Turn the frequency dial to the full clockwise position and measure the period of the 3310A/B output using the 5245L Electronic Counter. A period  $\geq 2000$  seconds should be observed.

5-12. Set the Model 3310A/B RANGE dial to X100K.

5-13. Turn the frequency dial to the full counterclockwise position and measure the frequency of the 3310A/B output using the 5245L Electronic Counter. A frequency  $\geq 5$ MHz should be observed.

#### 5-14. Sine Wave Frequency Response Check.

#### Specification

Sine wave frequency response: reference,  
1 kHz at full output into 50 ohms.  
0.0005Hz to 50kHz:  $\pm 1\%$   
50kHz to 5MHz:  $\pm 3\%$

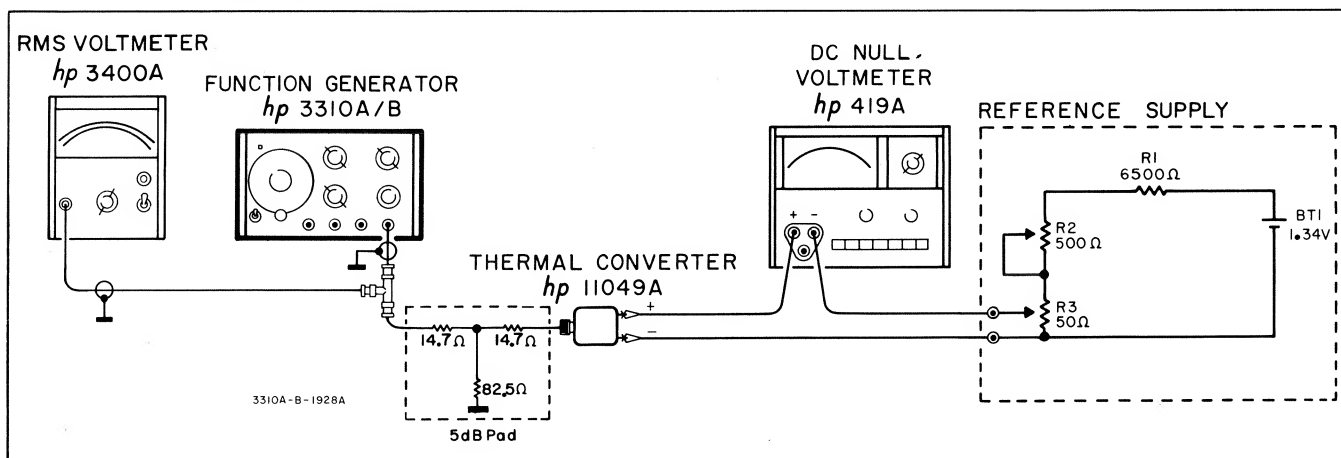


Figure 5-1. Frequency Response Check.

## NOTE

An 11049A Thermal Converter will be required for this check. The thermal converter is theoretically a square-law device. The percent of change of output should, therefore, be 2 times the percent of change of the input. The actual factor is less than 2, typically 1.7. This is called the "converter multiplier" (k).

5-15. If the converter multiplier (k) of your device is not known, determine it in the following manner:



**DO NOT EXCEED RATED INPUT OF THERMAL CONVERTER. ANY OVERLOAD OR HIGH VOLTAGE TRANSIENT MAY DESTROY THERMOELEMENT.**

a. Connect equipment as shown in Figure 5-1 and set the coarse control (R3) to minimum resistance.

b. Set the RF output to 2.5 V rms.

c. Record reading of dc voltmeter ( $E_i$ ).

d. Increase the RF output to 5 V rms.

e. Record reading of dc voltmeter ( $E_f$ ).

f. The formula below may then be applied to determine (k):

$$k = E_f / 2E_i$$



**THE MODEL 3310A OUTPUT LEVEL SHOULD BE REDUCED SUBSTANTIALLY BEFORE SWITCHING FREQUENCY RANGES; OTHERWISE, TRANSIENTS MAY DAMAGE THE THERMAL CONVERTER. THIS OPERATION SHOULD BE PERFORMED QUICKLY TO PREVENT THE NECESSITY OF ALLOWING TIME FOR THE THERMAL CONVERTER TO RESTABILIZE.**

5-16. Disconnect the rms voltmeter and set the 3310A/B controls for a 1 kHz sine wave output. Proceed as follows:

a. Adjust the 3310A/B for a full output.

b. Set the null meter to voltmeter function.

c. Adjust the reference supply 50 ohm control for minimum resistance.

d. Record the null meter indication of the thermal converter output.

e. Adjust the reference supply 500 ohm and 50 ohm controls for the best null possible. Do not readjust these controls for the remainder of the check.

f. Allowing 5 seconds settling time before reading the null meter, check several frequencies between 5Hz and 50kHz. Maximum allowable null meter deviation may be determined by the formula:

$$\text{Max Deviation} = 0.01 * X \text{ therm. conv. output} * X \text{ therm. conv. multiplier}$$

Example:

$$\text{Max deviation} = \pm(0.01 * X 7\text{mV} * X 1.7) = \pm 0.119 \text{ mV}$$

g. Check several frequencies above 50kHz. Maximum allowable null meter reading may be determined by the formula:

$$\text{Max deviation} = 0.03 * X \text{ therm. conv. output} * X \text{ therm. conv. multiplier}$$

Example:

$$\text{Max deviation} = \pm(0.03 * X 7\text{mV} * X 1.7) = \pm 0.357 \text{ mV}$$

h. Remove the equipment connected to the thermal converter output.

i. Set the 3310A/B controls for a 1 kHz sine wave.

j. Connect an rms voltmeter across the thermal converter input terminals.

k. Observe the voltmeter and set the 3310A/B output voltage to .5 V rms. (Applied to the thermal converter input.)

l. Disconnect the rms voltmeter and connect a d.c. voltmeter across the thermal converter input terminals.

n. Measure the positive and negative peak of the 3310A/B output using the d.c. voltmeter. Record these values.

m. Set the 3310A/B output frequency to .005 Hz.

o. Calculate the rms voltage of the signal measured in step n by adding the two values together (disregarding sign) and dividing by 2.83.

p. Disconnect the d.c. voltmeter and connect the strip chart recorder (-hp- Model 7127A or equivalent) to the thermal converter input terminals. For frequencies of .05 Hz and below the d.c. voltmeter can be used in place of the strip chart recorder. At very low frequencies (<.001 Hz), however, it is difficult to determine the exact peak of the waveform using a voltmeter. The process is also time consuming. A strip chart recorder is therefore recommended for these checks.

q. Adjust the recorder sensitivity to display the peak to peak value of the 3310A/B output in 9 inches (9 divisions) of the strip chart paper. The peak to peak voltage of this waveform is the sum of the two values noted in step o of this procedure.



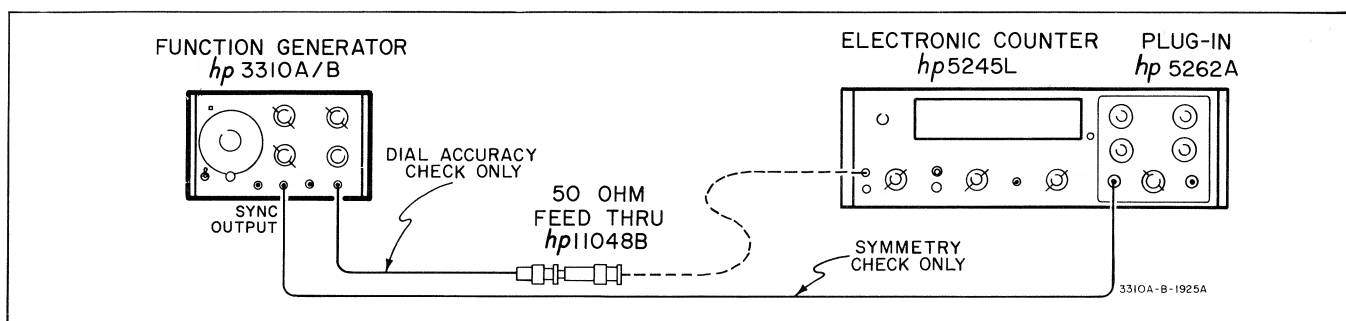


Figure 5-2. Dial Accuracy/Triangle Symmetry Check.

r. Record several frequencies below .005 Hz including .0005 Hz. Measure the peak to peak value, in volts, of the waveform at each frequency checked. Convert each value to rms volts by dividing by 2.83. All voltages measured should be  $500 \text{ mV} \pm 5 \text{ mV}$ .

s. Record several frequencies above .005 Hz including .5 Hz. Measure the peak to peak value, in volts, of the waveform at each frequency checked. Convert each value to rms volts by dividing by 2.83. All voltages measured should be  $500 \text{ mV} \pm 5 \text{ mV}$ .

#### 5-20. Dial Accuracy Check.

##### Specification

Dial Accuracy:  
 0.0005Hz to 500kHz, all functions:  $\pm(1\%$   
 of setting  $+1\%$  of full scale).  
 500kHz to 5MHz, sine, square, triangle:  
 $\pm(3\%$  of setting  $+3\%$  of full scale).  
 500kHz to 5MHz, pulse and ramp:  
 $\pm(10\%$  of setting  $+1\%$  of full scale).

#### 5-17. Triangle Symmetry Check.

##### Specification

Triangle symmetry:  
 0.0005Hz to 20Hz: less than 1%  
 20Hz to 50kHz: less than 0.5%

5-18. Set the 3310A/B FUNCTION switch to TRI. Connect the SYNC OUTPUT of the 3310A/B to the time interval input of an electronic counter as shown in Figure 5-2. Do not connect the 3310A/B output to the electronic counter signal input.

5-19. Symmetry error may be determined by the following formula:

$$E_s = \frac{T_1 - T_2}{T_1 + T_2}$$

where,

$T_1$  = period of positive transition of waveform

$T_2$  = period of negative transition of waveform

a. Check symmetry at several frequencies below 20Hz. This value should not exceed 1%.

b. Check symmetry at several frequencies between 20Hz and 50kHz. Symmetry error should not exceed 0.5%.

Table 5-2. Dial Accuracy Check.

Dial	Range	Counter Indication
5	.0001	1800 to 2240s
30	.0001	324 to 342s
50	.0001	196 to 204s
5	.001	180 to 224s
30	.001	32.4 to 34.2s
50	.001	19.6 to 20.4s
5	.01	18.0 to 22.4s
30	.01	3.24 to 3.42s
50	.01	1.96 to 2.04s
5	.1	1.80 to 2.24s
30	.1	324 to 342ms
50	.1	196 to 204ms
5	1	180 to 224ms
30	1	32.4 to 34.2ms
50	1	19.6 to 20.4ms
5	10	18.0 to 22.4ms
30	10	3.24 to 3.42ms
50	10	1.96 to 2.04ms
5	100	1.80 to 2.24ms
30	100	2920 to 3080Hz
50	100	4900 to 5100Hz
5	1K	4450 to 5550Hz
30	1K	29.20kHz to 30.80kHz
50	1K	49.00kHz to 51.00kHz
5	10K	44.50kHz to 55.50kHz
30	10K	292.0kHz to 308.0kHz
50	10K	490.0kHz to 510.0kHz

Table 5-3. (A and B) High Frequency Dial Accuracy.

A SYMMETRICAL FUNCTIONS			B PULSE and RAMP FUNCTIONS		
Dial	Range	Counter Indication	Dial	Range	Counter Indication
5	100K	345.0kHz to 655.0kHz	5	100K	400kHz to 600kHz
30	100K	2.760MHz to 3.240MHz	30	100K	2.65MHz to 3.35MHz
50	100K	4.700MHz to 5.300MHz	50	100K	4.45MHz to 5.55MHz

5-21. Connect the 3310A/B as shown in Figure 5-2 and set the OUTPUT LEVEL control to mid-range. Do not connect the SYNC output to the counter (symmetry check).

5-22. Set the FUNCTION switch to the full CCW position (negative pulse).

5-23. Measure the frequencies or periods shown in Table 5-2.

5-24. Repeat Paragraph 5-23 for each position of the 3310A/B FUNCTION switch.

5-25. Set the Model 3310A/B FUNCTION switch to SQ and measure the frequencies shown in Table 5-3A.

5-26. Repeat Paragraph 5-25 for the SINE and TRI functions.

5-27. Set the Model 3310A FUNCTION switch to the full CCW position (negative pulse) and measure the frequencies shown in Table 5-3B.

5-28. Repeat Paragraph 5-27 except check the positive pulse and the positive and negative ramps.

#### 5-29. Sine Wave Distortion Check.

##### Specification

Sine wave distortion (below fundamental):

10 Hz to 50 kHz: greater than 46 dB (0.5%)

50 kHz to 500 kHz: greater than 40 dB (1%)

500 kHz to 5 MHz: greater than 30 dB (3%)

5-30. Connect the 3310A/B as shown in Figure 5-3. Set the 3310A/B to SINE function at 10Hz. Distortion should be more than 46dB below the fundamental. Measure distortion at several frequencies between 10Hz and 50kHz. Distortion should be more than 46dB below the fundamental.

5-31. Measure distortion at several frequencies between 50kHz and 500kHz on the X10K range. Distortion should be more than 40dB below the fundamental.

5-32. Connect the equipment as shown in Figure 5-4.

5-33. Set the 3310A/B output control to the full CW position.

5-34. Set the 3310A/B output for a 0dB indication on the RMS voltmeter scale. This is the reference level.

5-35. Readjust the 3310A/B frequency to 5MHz.

5-36. Observe the voltmeter and adjust the coil in the 5MHz filter for a null. This reading should be equal to or less than 30dB below the reference level noted in Paragraph 5-34.

#### 5-37. Square Wave And Pulse Response Checks.

##### Specification

Square wave and pulse response:

less than 30ns rise and fall times at full output.

less than 35ns rise and fall times at less than full output.

less than 5% total aberration.

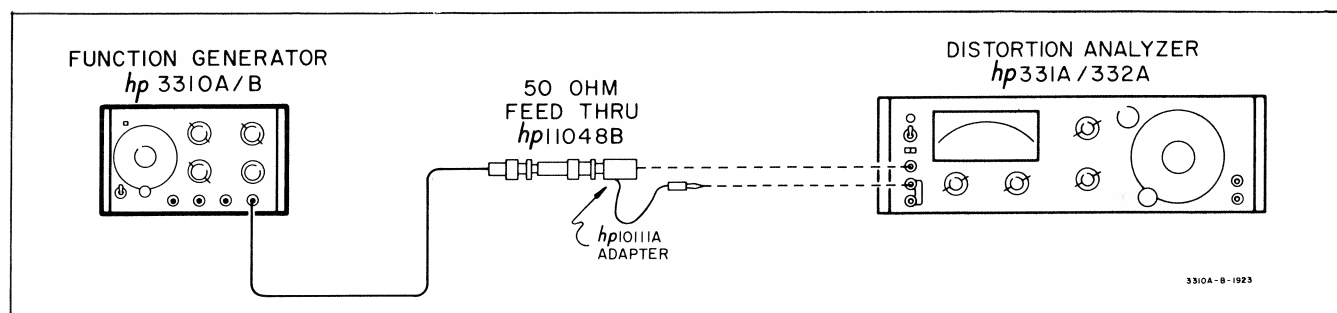


Figure 5-3. Distortion Check.

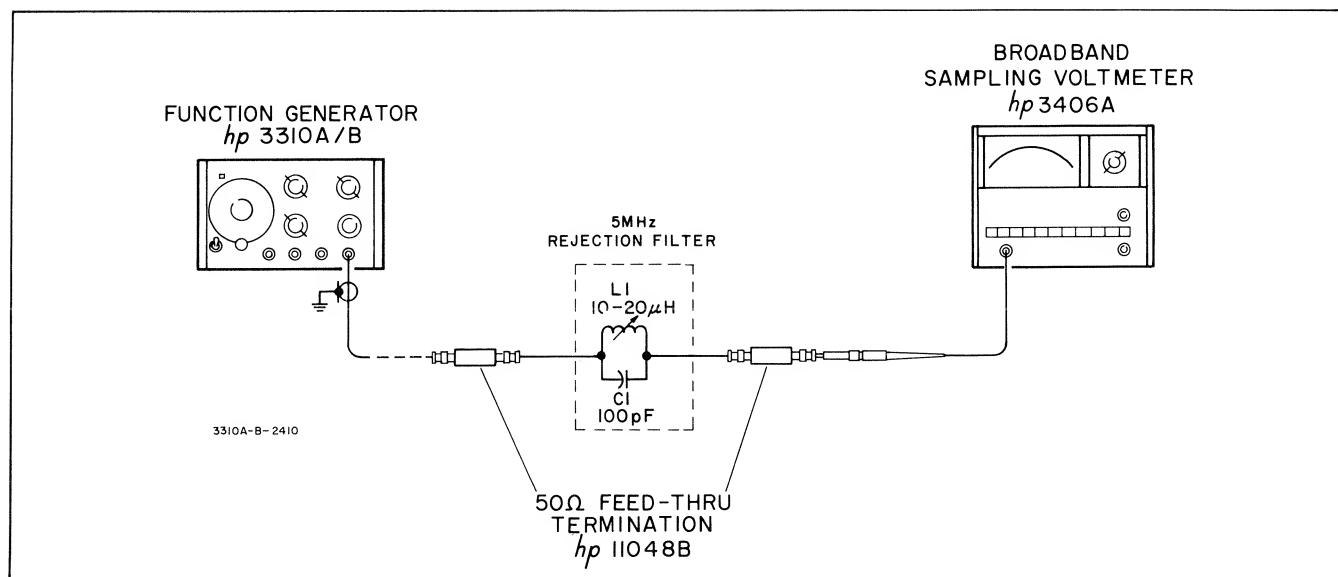


Figure 5-4. 5 MHz Distortion Check.

5-38. Connect the 3310A/B as shown in Figure 5-5 (Connect the HIGH output only). Set the OUTPUT LEVEL fully CW and the FUNCTION switch to SQ. Check the rise time and fall time at 1 kHz. Time required for the transition between 10% and 90% of the square wave amplitude should be less than 30ns. Change the function switch to a pulse position. The rise and fall times should still be less than 30ns.

5-39. Repeat the rise and fall time check for both square wave and pulse functions at several other frequencies to assure less than 30ns.

5-40. Reduce the OUTPUT LEVEL to center position. Measure rise and fall times for square waves and pulses at several different frequencies. These rise times should be less than 35ns.

5-41. Set the 3310A/B controls for a 5MHz square wave. Set the output to the full CW position.

5-42. Observe the oscilloscope and measure the voltage difference between the voltage points shown as V p-p in Figure 5-6. Record this value.

5-43. Again observe the oscilloscope and measure the voltage difference between the minimum and maximum voltage points at the top of the waveform ( $V_{ab}$ ).

5-44. Using the following formula calculate percent of aberration.

$$\text{Aberration (\%)} = V_{ab}/V_{p-p} \times 100.$$

This value should not exceed 5%.

5-45. Repeat steps 5-42 thru 5-44 except measure the voltage points at the bottom of the waveform.

5-46. Set the 3310A/B for a positive pulse of .1  $\mu\text{sec}$ . duration as observed on the oscilloscope.

5-47. Repeat steps 5-42 thru 5-45.

5-48. Set the 3310A/B for a negative pulse of .1  $\mu\text{sec}$ . duration. Again repeat steps 5-42 thru 5-45.

#### NOTE

If the aberration specification cannot be met refer to A3C26\* in Table 5-4 (Starred Value Components).

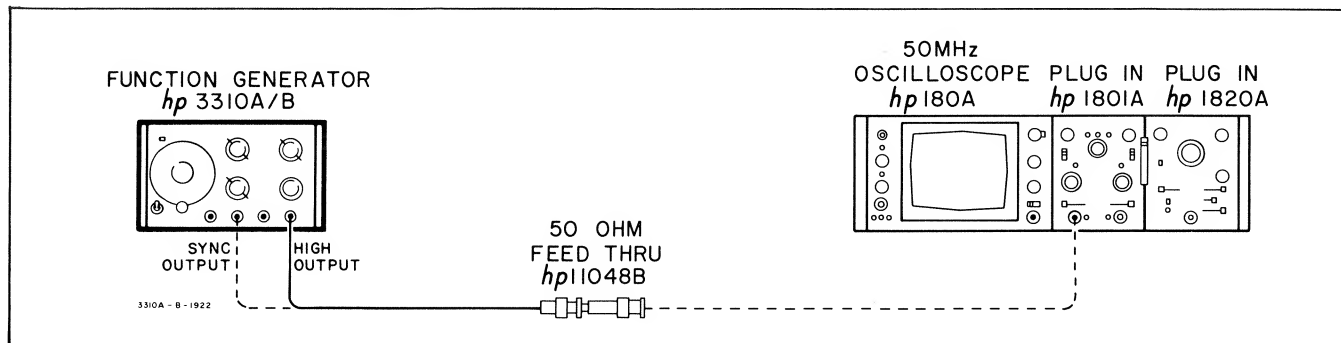


Figure 5-5. Rise Time Check.

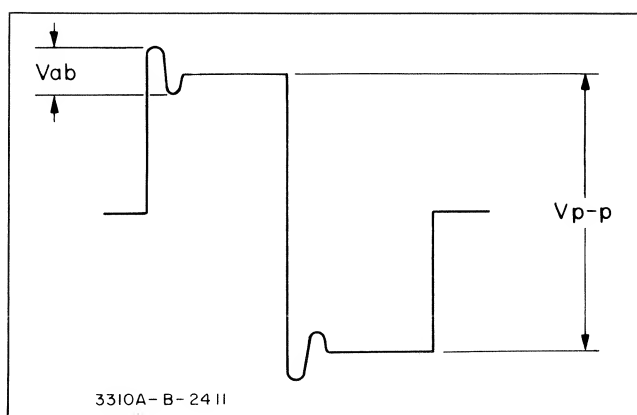


Figure 5-6. Aberration Check.

**5-49. SYNC OUTPUT Response Check****Specification**

Sync output response:  
less than 20ns rise and fall times.

5-50. Connect the equipment as shown in Figure 5-5. (Connect to the SYNC OUTPUT only.)

5-51. Set the Model 3310A/B controls for a 1kHz sine wave.

5-52. Check the rise and fall times of the SYNC OUTPUT pulse using the oscilloscope. The time required for the transition between 10% and 90% of the leading edge of the sync output pulse should be  $\leq 20$ ns. Time required for the transition between 90% and 10% of the trailing edge of the sync output pulse should also be  $\leq 20$ ns.

**5-53. Maximum HIGH Output (except pulses greater than 2MHz), and OUTPUT LEVEL Range Check.****Specification**

Maximum HIGH output (except pulses greater than 2MHz):  
greater than 15V p-p into 50 ohms (5.3V rms for sine function)  
greater than 30V p-p open circuit. (10.6V rms for sine function)  
OUTPUT LEVEL control: greater than 30dB range controlling HIGH and LOW outputs.

5-54. Terminate the HIGH output of the Model 3310A/B in 50 $\Omega$  and connect to an RMS voltmeter. Set the 3310A/B controls as follows:

OUTPUT LEVEL ..... Full CW  
FUNCTION ..... SINE  
RANGE ..... X100K  
frequency dial ..... 50  
OFFSET LEVEL ..... 0

5-55. The voltmeter indication should be greater than 5.3V rms.

5-56. Remove the 50 $\Omega$  load and connect the Model 3310A/B output directly to the voltmeter. The voltmeter indication should now be greater than 10.6V rms. Record this indication in dB.

5-57. Turn the OUTPUT LEVEL control to the full CCW position and observe the meter. The meter indication should now be greater than 30dB below the indication recorded in step 5-56.

5-58. Set the 3310A/B controls for a 2 MHz pulse and turn OUTPUT LEVEL full CW. Connect the HIGH output (terminated in 50 $\Omega$ ) to an oscilloscope. A pulse with a peak to peak amplitude of greater than 10 V should be noted.

5-59. Remove the 50 $\Omega$  termination and again observe the oscilloscope. A pulse with a peak to peak amplitude of 30 V should be noted.

**5-60. Maximum HIGH Output Check (pulses greater than 2MHz.)****Specification**

Maximum HIGH output (pulses greater than 2MHz):  
greater than 12V p-p into 50 ohms  
greater than 24 V p-p open circuit

5-61. Connect the HIGH output of the Model 3310A/B to a 50 $\Omega$  resistor (11048B) and connect this output to an oscilloscope.

5-62. Set the 3310A/B controls for a 5MHz pulse. (Ensure OUTPUT LEVEL is in full CW position.)

5-63. A pulse, with a peak to peak amplitude of greater than 12V, should be observed on the oscilloscope.

5-64. Remove the 50 $\Omega$  resistor and reconnect the 3310A/B HIGH output to the oscilloscope. A pulse, with a peak to peak amplitude of greater than 24V, should be observed.

**5-65. Minimum LOW Output Check.****Specification**

Minimum LOW output:  
less than 15mV p-p into 50 ohms.  
less than 30mV p-p open circuit.

5-66. Terminate the LOW output of the Model 3310A/B in 50 $\Omega$  and connect this output to an RMS voltmeter (-hp-3400A).

5-67. Set the Model 3310A/B controls as indicated in Paragraph 5-54, except set OUTPUT LEVEL full CCW.

5-68. Observe the voltmeter, an indication of less than 5.3mV rms (15 mV p-p) should be noted.

5-69. Remove the 50 $\Omega$  load and reconnect the 3310A/B to the RMS voltmeter. An output voltage of less than 10.6mV rms (30 mV p-p) should be observed.

#### 5-70. SYNC OUTPUT Amplitude Check.

##### Specification

SYNC output amplitude:  
greater than 2V p-p into 50 ohms.  
greater than 4V p-p open circuit.

5-71. Terminate the SYNC OUTPUT of the Model 3310A/B in 50 $\Omega$  and connect this output to an RMS voltmeter.

5-72. Set the Model 3310A/B controls as indicated in Paragraph 5-54.

5-73. Observe the voltmeter, an indication of greater than .707V rms (2 V p-p) should be noted.

5-74. Remove the 50 $\Omega$  termination and reconnect the Model 3310A/B SYNC OUTPUT to the RMS voltmeter.

5-75. Observe the voltmeter, and indication of greater than 1.41 V rms (4 V p-p) should be noted.

#### 5-76. Ext. Gate Sensitivity (3310B only).

##### Specification

Triggering occurs with an input  $\geq +1V$  but  $\leq +30V$ . A maximum voltage of  $\pm 30V$  can be applied to the EXT. GATE input.

5-77. Connect the equipment as shown in Figure 5-7. (The positive output of the power supply goes to the center terminal of the EXT. GATE jack.)

5-78. Set the 3310B controls as follows:

RANGE ..... X100K  
frequency dial ..... 10  
FUNCTION ..... SINE  
DC OFFSET LEVEL ..... 0  
OUTPUT LEVEL ..... MAX

5-79. Set the 721 A power supply output to approximately 10V as observed on the 427A. A sine wave should appear on the oscilloscope.

5-80. Turn the power supply output to minimum. The 3310B should stop triggering (waveform will disappear from the oscilloscope).

5-81. Slowly increase the Model 721 A output until the 3310B just begins to trigger. Observe the d.c. voltmeter, a voltage  $\leq .1V$  should be observed. This verifies the minimum triggering voltage specification of +1V.

5-82. Set the power supply output to 30V.

5-83. Observe the oscilloscope. A sine wave should be noted indicating the 3310B is triggering on the 30V input.

5-84. Reverse the polarity of the power supply input. The 3310B should stop triggering as indicated by the absence of the sine wave pattern on the oscilloscope.

5-85. Again reverse the power supply polarity. The 3310B should again generate a sine wave output indicating triggering. This verifies the  $\pm 30V$  limits of the EXT. GATE input.

#### 5-86. Ext. Trigger Check (3310B only).

##### Specification

Triggering occurs with input pulses  $\geq 1 V$  (p-p) but  $\leq 30 V$  (p-p).

5-87. Connect the equipment as shown in Figure 5-8. Set the 211B square wave generator output to minimum.

5-88. Set the 3310B controls as follows:

RANGE ..... X10K  
frequency dial ..... 10  
FUNCTION ..... SINE  
D.C. OFFSET LEVEL ..... 0  
START-STOP PHASE ..... full CW  
OUTPUT LEVEL ..... MAX

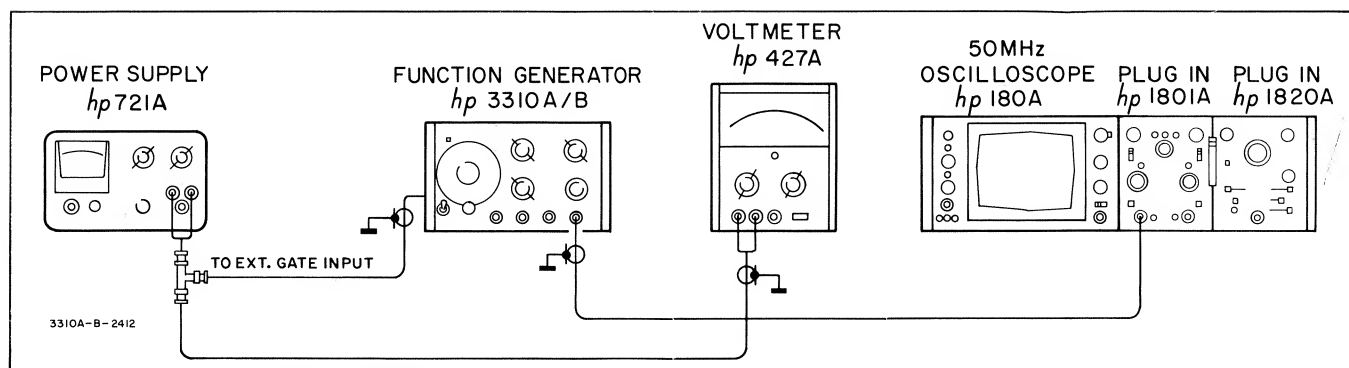


Figure 5-7. EXT. GATE Sensitivity Check.

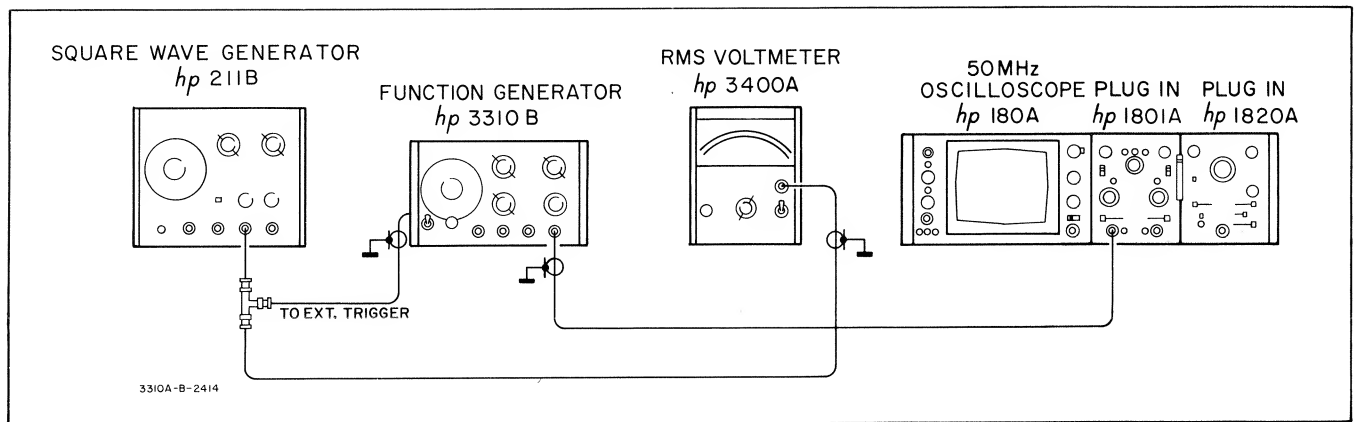


Figure 5-8. EXT. TRIGGER Check.

5-7

5-89. Adjust the output frequency of the square wave generator to 20kHz and the output level to .5V rms as observed on the RMS Voltmeter.

5-90. Observe the oscilloscope. Repetitive half cycles of a sine wave should be noted, indicating the 3310B is triggering on a 1V p-p square wave.

5-91. Adjust the square wave generator to 15V rms as observed on the RMS Voltmeter.

5-92. Again observe the oscilloscope. The oscilloscope pattern noted in Paragraph 5-90 should remain indicating the 3310B is triggering on a 30V p-p square wave.

### 5-93. CHECKS OF GENERAL OPERATING CHARACTERISTICS.

#### NOTE

Paragraphs 5-94 thru 5-118 provide checks for some of the more important general operating characteristics of the Model 3310A/B. (Listed in Table 1-2.) These checks are not intended to be, nor should they be construed to be specification performance checks. These procedures will, however, provide useful information relating to the instrument.

#### 5-94. Low Output Check (30 dB Separation).

5-95. Terminate the HIGH output of the Model 3310A/B in 50Ω. Connect this output to an A.C. Voltmeter.

5-96. Set the 3310A/B controls for a 1kHz sine wave and adjust the OUTPUT LEVEL to maximum. Note the voltmeter indication.

5-97. Disconnect the A.C. Voltmeter and the 50Ω termination from the HIGH output and connect to the LOW output.

5-98. Again note the A.C. Voltmeter indication. It should be approximately 30dB below the voltmeter indication noted in Paragraph 5-96.

5-99. Repeat Paragraphs 5-95 thru 5-98 for several other settings of the OUTPUT LEVEL control.

#### 5-100. Output Impedance Checks.

5-101. Set the 3310A/B output frequency to 1kHz and adjust the OUTPUT LEVEL to approximately 1/2 of maximum. (Output should be unterminated.)

5-102. Connect an ac voltmeter to the HIGH output. Observe and record the voltmeter indication.

5-103. Remove the ac voltmeter and connect a 50Ω terminating resistor to the HIGH output.

5-104. Reconnect the ac voltmeter to the terminated output and record the voltmeter indication.

5-105. Calculate the output impedance according to the formula below:

$$Z_o = \frac{(V_{oc} - V_t)50}{V_t}$$

where:

$V_{oc}$  = open circuit voltage (measured in Paragraph 5-102).

$V_t$  = Voltage with 50Ω termination connected (measured in Paragraph 5-104).

5-106. Using the method outlined in Paragraphs 5-101 thru 5-105 check the output impedance of the LOW and SYNC outputs.

#### 5-107. D.C. Offset Check.

5-108. Set the Model 3310A/B controls as follows:

FUNCTION . . . . . SQ (square wave)  
D.C. OFFSET LEVEL . . . . . 0  
Frequency dial . . . . . 10  
RANGE . . . . . X100

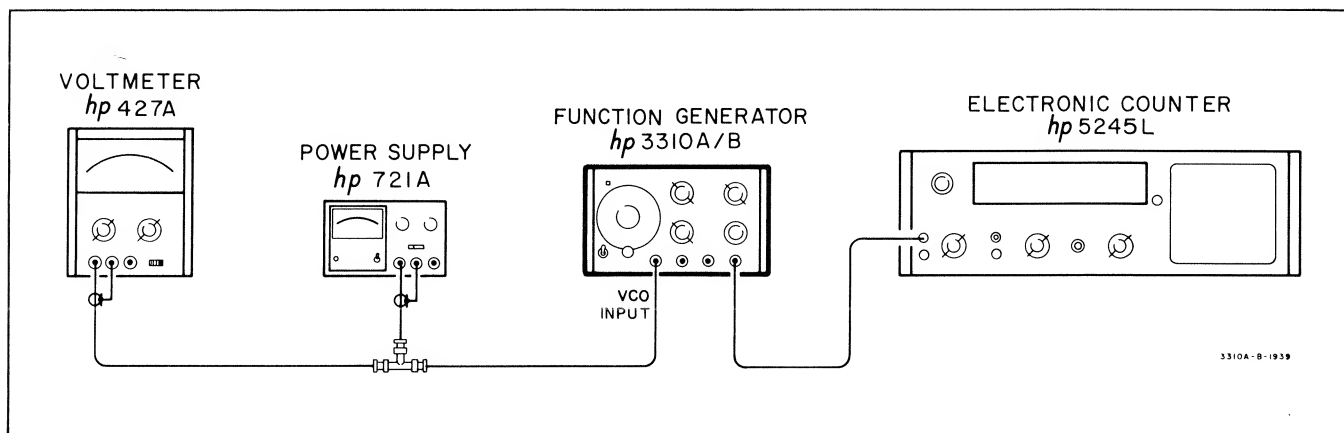


Figure 5-9. External Frequency Control Check.

5-109. Connect an oscilloscope directly to the HIGH output of the 3310A/B.

5-110. Observe the oscilloscope and adjust the 3310A/B output for approximately 3V p-p.

5-111. Set the bottom of the waveform on the horizontal center line of the oscilloscope.

5-112. Turn the D.C. OFFSET vernier to the full clockwise position and set the D.C. offset control to (+).

5-113. Again observe the oscilloscope. The bottom of the waveform should have shifted upward approximately 10V from its original position.

5-114. Set the D.C. OFFSET control to (-). The bottom of the waveform should now be approximately 10V below the horizontal center line of the oscilloscope.


5-115. Terminate the 3310A/B HIGH output in 50Ω and repeat steps 5-111 thru 5-114. The offsets noted in steps 5-113, and 5-114 should be approximately 5V with the 3310A/B terminated in 50 Ω.

#### 5-116. External Frequency Control Check.

5-117. Connect the 3310A/B as shown in Figure 5-9. Set the 3310A/B to the X1K range and the OUTPUT LEVEL control to mid-position. Disconnect the VCO input and adjust the Frequency Dial until the counter indicates 50.0kHz. Reconnect the VCO input and adjust the power supply for a negative dc output. Increase the negative dc output until the counter indicates 1.0kHz. The dc voltage should be -10V ±1.0V.

5-118. With the VCO input disconnected, adjust the Frequency Dial for a counter indication of 1.0kHz. Apply a positive dc voltage until the counter reads 50.0kHz. The dc voltage should be +10V ±1.0V.

#### 5-119. ADJUSTMENT PROCEDURE.

5-120. The following paragraphs contain a complete adjustment procedure for the Model 3310A/B Function Generators. This procedure should be performed only if it has been determined by the Performance Checks that the instrument is not operating within its published specifications. A condensed adjustment procedure (Table 5-5) is provided for persons who are already familiar with the instruments. The table provides brief information on the test point to be checked, the nominal value expected, and the adjustment involved. Voltage measurements are referenced to chassis ground (  ).

#### NOTE

*Unless otherwise indicated the Model 3310B START/STOP PHASE control should be set to "FREE RUN" for these adjustments.*

#### 5-121. Cover Removal.

5-122. To remove the top or bottom cover, remove the screws, slide the cover to the rear, and lift off. A side cover may be removed by removing the screws and lifting the cover off.

#### 5-123. Power Supply Adjustment.

5-124. Connect the 3310A/B to the power line and turn the instrument on. Connect the digital voltmeter to A3 Pin 3 and proceed with the following.

- Adjust A3R101 for + 10.00 V ± 10 mV.
- Measure A3 Pin 5 to confirm - 10.00 V ± 50 mV.
- Measure A3TP1 to confirm + 25.0 V ± 1.0 V.
- Measure A3TP3 to confirm - 25.0 V ± 1.0 V.

5-125. If any of the last three voltage measurements are out of tolerance, troubleshoot the power supply before trying to perform further adjustment and calibration.

**5-126. Triangle Amplifier Bias Adjustment.**

5-127. Set the 3310A/B controls to the X10 range and square wave function. Connect an oscilloscope to the A1TP11 and adjust A1R56 until the positive peak of the triangle is at  $0\text{ V} \pm 0.1\text{ V}$ .

**5-128. Symmetry Adjustment.**

5-129. Connect the SYNC output of the 3310A/B to the input of the time interval counter as shown in Figure 5-2. (Symmetry Check).

5-130. Set the 3310A/B RANGE to 100, the dial to 50, and the FUNCTION to SQ.

5-131. Measure the time interval of each half cycle. Adjust A1R24 until the time intervals for both half cycles are within  $1.0\text{ }\mu\text{s}$  of each other.

5-132. Set the 3310A/B dial to 5 and adjust A1R26 until the time intervals for both half cycles are within  $10.0\text{ }\mu\text{s}$  of each other.

**NOTE**

*A1R24 and A1R26 interact. It may be necessary to repeat these adjustments to achieve symmetry at both ends of the dial.*

5-133. Set the 3310A/B frequency dial to 5 and the RANGE to the X1 position. Adjust A1R162 for best symmetry. Set the dial to 50 and assure that the time intervals are within 20.0 ms of each other. If not, repeat all steps of this symmetry adjustment.

**5-134. Dial Calibration.**

5-135. Connect the digital voltmeter to the center terminal of the 3310A/B frequency dial tuning potentiometer (blue wire).

5-136. Set the frequency dial to 5, and confirm that the digital voltmeter reads between 850 mV and 950 mV. If not, the dial should be slipped by loosening its set screws until a reading of 850 mV to 950 mV is obtained at the 5 setting.

5-137. Set the frequency dial to the full CW position. A voltmeter reading between 100 and 170 mV should be noted.

5-138. With the frequency dial set to 5, measure and record the center terminal voltage reading. Subtract 900 mV from this reading and record the difference.

5-139. Adjust A1R17 for a reading of A1TP1 equal to the difference voltage above. For example if the center terminal voltage is 875 mV, A1R17 should be adjusted so that A1TP1 reads - 25 mV ( $875\text{ mV} - 900\text{ mV}$ ).

**5-140. Frequency Calibration.**

5-141. Connect the SYNC output of the 3310A/B to counter. Set the 3310A/B dial to 50, the RANGE to X100K, and the FUNCTION switch to SINE. Adjust A1R6 for a  $5.000\text{ MHz} \pm 20\text{ kHz}$  indication.

5-142. Change the 3310A/B RANGE to X10K. Adjust A1R5 for an indication of  $500\text{ kHz} \pm 2\text{ kHz}$ .

5-143. Change the 3310A RANGE to X1 K and adjust A1R4 for an indication of  $50\text{ kHz} \pm 200\text{ Hz}$ .

5-144. Turn the 3310A/B FUNCTION switch fully CW to the negative ramp position. Adjust A2R6 for a reading of  $50\text{ kHz} \pm 200\text{ Hz}$ .

5-145. Switch the 3310A/B FUNCTION back to sine wave and the RANGE to X100. Adjust A1R3 for an indication of  $5000\text{ Hz} \pm 20\text{ Hz}$ .

5-146. Change the 3310A/B RANGE to X10 and adjust A1R2 for an indication of  $2000\text{ }\mu\text{s} \pm 10\text{ }\mu\text{s}$ .

5-147. Change the 3310A/B RANGE to X1 and adjust A1R1 for an indication of  $20,000\text{ }\mu\text{s} \pm 100\text{ }\mu\text{s}$ .

**5-148. Distortion Adjustment.**

5-149. Set the 3310A/B RANGE to X100, the Dial to 50, OUTPUT LEVEL to approximately 1/2 of maximum, and the FUNCTION switch to SINE. Using a  $50\text{ }\Omega$  load, connect the HIGH output of the 3310A/B to the distortion analyzer. Adjust A3R4 and A3R27 for best distortion readings. The distortion measurement should be greater than 46 dB below the fundamental.

**5-150. D.C. Offset Adjustment (SINE function).**

5-151. Connect a digital voltmeter to the output of the Model 3310A/B and adjust the OUTPUT CONTROL for full output.

5-152. Set the 3310A/B for a 1 kHz Sine Wave output.

5-153. Set the D.C. OFFSET LEVEL control to 0 and adjust A2R23 for  $0\text{ V} \pm 75\text{ MV}$  as observed on the voltmeter. The offset should be set as close to 0 V as possible.

**5-154. Square Wave And Pulse Aberration Adjustment.**

5-155. Set the 3310A/B for a 1 kHz square wave output, and set the OUTPUT LEVEL control to the full CW position.

5-156. Terminate the output in  $50\text{ }\Omega$  and connect an oscilloscope to the terminated output.



5-157. Check the aberration as described in Paragraphs 5-41 through 5-45. If it is out of specification, manually adjust the spacing between A3C26\* and A3Q10 until the specification is met.

#### 5-158. Frequency Response Adjustment.

5-159. Connect the 3310A/B as shown in Figure 5-1. Using the procedure in Paragraph 5-16, determine the maximum frequency response variation of the X100 K frequency range. Adjust A2C3 for best frequency response with maximum variation from the reference level being less than  $\pm 3\%$ . (See example Paragraph 5-16 g.)

#### 5-160. START/STOP PHASE Limit Adjustment (3310B only).

5-161. Connect an oscillator or other signal source capable of providing at least 1 V rms across an impedance of 500  $\Omega$  to the 3310B EXT. GATE input.

5-162. Connect the 3310B output to an oscilloscope and adjust the output frequency and external gating source so that the instrument is providing a single cycle output.

5-163. Turn the START/STOP PHASE control fully clockwise.

5-164. Turn A5R4 clockwise until the 3310B begins to free run. Then turn A5R4 counterclockwise about 1/8 turn, until the 3310B stops free running and the single cycle begins as near as possible to the top of the waveform.

5-165. Turn the START/STOP PHASE control counterclockwise as far as possible without setting the instrument to FREE RUN.

5-166. Adjust A5R8 until the single cycle begins as near as possible to the bottom of the waveform.

#### 5-167. TROUBLESHOOTING.

5-168. This troubleshooting procedure is divided into two major sections; (1) General Troubleshooting Information, (2) Specific Troubleshooting Aids and Maintenance Tips. Section one contains Front Panel Checks. These checks will aid the troubleshooter in identifying and isolating a trouble to a major section of the instrument. The troubleshooting trees in section two provide a method of quick identification and isolation of most troubles encountered in the 3310A/B. Troubleshooting the 3310A/B will be much easier if you have obtained a good basic knowledge of the instrument. If information on the theory of operation of the Model 3310A/B is desired refer to Section IV of this manual. Figure 4-1 is the block diagram for the instrument. Schematic diagrams of the various circuits including waveforms and voltage levels, can be found in Section VII.

#### 5-169. GENERAL TROUBLESHOOTING INFORMATION.

##### 5-170. Front Panel Checks.

5-171. Front panel checks (below) are useful in isolating troubles of a recurrent or continuous nature. Using this type of procedure a trouble can often be isolated to a particular circuit within the instrument. The section on circuit troubleshooting (paragraph 5-178) can be referred to for specific helps. If the front panel troubleshooting procedure proves inadequate refer to Troubleshooting Tree Nos. 1 and 2 for more precise help.

a. Set the 3310A/B controls for a 100 Hz triangle wave output. Connect the HIGH output to an oscilloscope, and set the OUTPUT LEVEL fully CW. If a 100 Hz triangle wave is observed on the oscilloscope, go to step b. If not, go to step i.

b. Change the 3310A/B to SINE function. If a 100 Hz sine wave is observed, go to step c. If not, go to step h.

c. Change the 3310A/B RANGE to X100 and the FUNCTION to triangle wave output. If the triangle wave is normal, go to step d. If not, go to step i.

d. Change the 3310A/B RANGE to X1 K. If the triangle wave is normal, (not noticeably distorted), go to step e. If not, go to step i.

e. Check for proper triangle output on X10 K and X100 K ranges. If normal, go to step f. If not, go to step g.

f. Check for proper output on the X.1 range. If normal, check the X.01, X.001, and X.0001 ranges. If any of these ranges have problems, troubleshoot the Low Frequency Feedback Amplifier.

g. If only the X10 K and X100 K have abnormal operation, troubleshoot the High Frequency Level Detector.

h. If square and triangle outputs are normal and the sine wave is abnormal, troubleshoot the Sine Shaping Network and the Sine Shaper Amplifier.

i. If the triangle wave output is abnormal on the X10, X100, or X1 K range, a number of circuits could be responsible. Set the RANGE to X10 and switch in +DC OFFSET. While monitoring the HIGH output with a dc voltmeter, vary the dc offset from limit to limit. If a  $\pm 10$  volt variation is observed, go to step j. If not, troubleshoot the Output Amplifier.

j. Set the Frequency Dial to 50 and connect - 5 V dc to the VCO input. If the output is normal with the - 5 V input and there is no output when the VCO input is removed, troubleshoot the Frequency Dial potentiometer and Range switch. Otherwise troubleshoot the Tuning Amplifier, Current Sources, Triangle Amplifier, and  $\pm 5$  Volt Level Detector. Figures 7-2 through 7-7 show dc voltage levels to aid in troubleshooting.

## NOTE

*This table provides selection information for components whose optimum value is chosen at the factory. Due to changing parameters within an instrument or after a repair or calibration it may be necessary to change the value of one or more of these components. The component value should not, however, exceed limits indicated in the "nominal value" column.*

Table 5-4. Starred Value Components.

Component	Purpose	Nominal Value
A1C17*	Frequency error on X100 k range. (Can also be caused by High Freq. Level Detector.) Feedback Capacitance on X100 k range must be 100 pF for proper frequency tracking. A1C17* adds to the junction capacitance of A1Q12, A1Q5 and A1Q6 to form a total of 100 pF.	68 pF $\pm$ 10 pF
A1C20*	Prevents high freq, ( $\approx$ 40 MHz) oscillations in Triangle Amplifier. Increase value 1 or 2 pF if oscillations occur.	3.3 pF + 2 pF
A2C1*	Adjust for symmetry error on X100 k Range.	.68 pF $\pm$ .3 pF
A2C2* and A2R9*	Triangle and Ramp Amplitude or flatness. A2R20 Amplitude Pot has some inherent capacitance. A2R20, A2C2* and A2R9* form a compensated attenuator for Triangle and Ramp functions.	A2C2*- 62 pF $\pm$ 10 pF A2R9*- 464 $\Omega$ $\pm$ 50 $\Omega$
A2C6*	Pad for A2C3. Sine Flatness at 5 MHz	10 pF $\pm$ 2 pF
A2R18*	Sine Amplitude	1780 $\Omega$ $\pm$ 100 $\Omega$
A3R69*	Square Wave and Pulse Amplitude Control If A3R69* is changed, other functions' amplitudes are affected and may have to be corrected.	5.760 $\Omega$ $\pm$ 200 $\Omega$
A3C26*	Square and Pulse overshoot at full output, into 50 $\Omega$ . (Make sure DC offset is zero and that total amplitude is $\leq$ 33 V p-p.)  <i>NOTE: A3C26* was not usually installed prior to installation of output protection circuit. Value is not important, the amount of coupling with case of A3Q10 provides adjustment of <math>C_{dist}</math></i>	10 pF*
A3R32*	Adjusts amount of DC OFFSET available with R2.	5.49 k $\Omega$ $\pm$ 400 $\Omega$

**Table 5-5. Condensed Adjustment Procedure**  
*NOTE: Follow in sequence for complete calibration.*

STEP	CIRCUIT OR PURPOSE	TEST POINT (Use DCVM unless otherwise specified)	SPECIAL TEST CONDITIONS	NOMINAL VALUE	ADJUSTMENT
1	Power Supply	A3 Pin 3		+ 10 V $\pm$ 10 mV	A3R101
2	Power Supply	A3 Pin 5		- 10 V $\pm$ 50 mV	None: referenced to + 10 V supply
3	Power Supply	A3TP3		- 25 V $\pm$ 1.0 V	None: referenced to + 10 V supply
4	Power Supply	A3TP1		+ 25 V $\pm$ 1.0 V	None: referenced to - 10 V supply
5	Input Circuit	R1 Freq. Pot Center Terminal (Blue Wire)	3310A/B Freq. Dial at 5	900 mV $\pm$ 50 mV (record for use in Step 7)	Rotate R1
6	Input Circuit	R1 Freq Pot Center Terminal	3310A/B Freq. Dial Max CW	135 mV $\pm$ 35 mV	None (may require replacing R1)
7	Tuning Amplifier	A1TP1	3310A Freq. Dial at 5	subtract 900 mV from reading in Step 5	A1 R17
8	Triangle Amplifier	A3CR3 Cathode Use Oscilloscope	X10 Range: Square Wave	Positive peak of triangle at 0 V $\pm$ 0.1 V	A1 R56 (see note 1)
9	Upper Dial Symmetry	Sync Output Use Time Interval Recorder or Equiv.	X100 Range: Square Wave Dial at 50	Both half cycle periods within 1 $\mu$ s of each other	A1 R24 (see note 2)
10	Lower Dial Symmetry	Sync Output, Use Time Interval Recorder or Equivalent	X100 Range: Square Wave Dial at 5	Half Cycle Periods within 10 $\mu$ s	A1 R26
11	Low Freq. Symmetry	Sync Output Use Time Interval Recorder	X1 Range: Square Wave Dial at 5	Best Symmetry	A1R162
12	Low Freq. Symmetry	Sync Output Use Time Interval Recorder	X1 Range: Square Wave Dial at 50	Half Cycles within 200 ms	None - may have to repeat steps 9-12
13	Freq. Calib. 5 kHz	(Sync Output Use Counter)	X100 K Range, Sine Function Dial at 50	5.00 MHz $\pm$ 20 kHz	A1 R6
14	Freq. Calib. 500 kHz	(Sync Output Use Counter)	X10 K, Sine Function, Dial at 50	500 kHz $\pm$ 2 kHz	A1 R5
15	Freq. Calib. 50 kHz	(Sync Output Use Counter)	X1 K, Sine Function, Dial at 50	50 kHz $\pm$ 200 Hz	A1 R4
16	Freq. Calib. 5 kHz	(Sync Output Use Counter)	X100, Sine Function Dial at 50	5 kHz $\pm$ 20 Hz	A1 R3

Table 5-5. Condensed Adjustment Procedures (cont'd).

STEP	CIRCUIT OR PURPOSE	TEST POINT (Use DCVM unless otherwise specified)	SPECIAL TEST CONDITIONS	NOMINAL VALUE	ADJUSTMENT
17	Freq. Calib. 500 Hz	(Sync Output Use Counter)	X10, Sine Function, Dial at 50	$2000 \mu s \pm 10 \mu s$	A1R2
18	Freq. Calib. 50 Hz	(Sync Output Use Counter)	X1, Sine Function, Dial at 50	$20,000 \mu s \pm 100 \mu s$	A1R1
19	Distortion	High Output Use $50 \Omega$ Load and Distortion Analyzer.	X100 Range, Sine Function, Dial at 50	$>46$ dB down	A3R4 and A3R27
20	Freq; Response	Connect as shown in Figure 5-1	Use Procedure given in Para. 5-16	$\pm 3\%$ on Top Ranges (1 kHz Reference)	A2C3
21	Square Wave and Pulse Abberation	HIGH output (use oscilloscope)	X100 RANGE Freq. Dial to 10	Aberration $< 5\%$ of p-p value of waveform	spacing between A3C26* and Heat Sink of A3Q10.

## NOTES

1. If triangle peak cannot be adjusted to  $0 V \pm 0.1 V$ , two possible fixes are available:
  - A. Select FET for A1Q12 which can be adjusted. (IDSS of individual FETs causes this problem.)
  - B. In 3310A's S/N 920-00550 and below:
    - a. Change A1R55 to  $270 \Omega$  (-hp- Stock No. 0684-2771).
    - b. Change A1R54 to  $4.7 k\Omega$  (-hp- Stock No. 4721).  
This change allows for a wider range on A1Q12 FET IDSS.
2. Steps 9 and 10 adjustments interact.

**5-172. SPECIFIC CIRCUIT TROUBLESHOOTING AIDS AND MAINTENANCE TIPS.****5-173. Circuit Troubleshooting.**

**5-174. Power Supply.** The four supply voltages are ultimately referenced to the +10 V supply. Each supply is basically a series regulator; and, if any of the four supplies fail, all four voltages will be affected. If the supply voltages are out of specification, the following steps might be followed until the trouble is isolated:

- a. Ascertain that the  $\pm 25V$  power supplies are not in current limit due to a short in another part of the circuit. This can be accomplished by checking the base-emitter voltage on A3Q19 and A3Q23. A forward bias voltage of

approximately .7 V would indicate that the power supplies are in current limit. The  $\pm 10 V$  power supplies can be checked in a similar manner by measuring the base-emitter voltages of A3Q27 (-10 V supply) and A3Q32 (+10 V supply).

- b. Try adjusting A3R101 for proper voltages (see step 1 of condensed adjustment procedures).
- c. Check for proper input voltages shown on Figure 7-5.
- d. Lift negative side of A3R75 and apply -10 V to lifted lead. Turn 3310A/B on and +25 V supply should operate properly. If +25 V supply is good, go to step e after replacing R75 lead. If +25 V is bad, fix the supply, replace R75 lead and see if all four voltages are now good. If the voltages are still bad go to step e.

e. Lift positive side of R80 and apply +10 V to lifted lead. -25 V supply should now operate properly. If the -25 V is working, replace R80 lead and go to step f.

f. If the  $\pm 25$  V supplies are good above, the trouble must be in  $\pm 10$  V supplies. Check the +10 V supply by lifting one side of R91 and again lifting the negative side of R75 and applying -10 V at that lifted lead. Turn the 3310A/B on and the +10 V and  $\pm 25$  V supplies should operate. If they do, the trouble is in the -10 V supply. If not, the +10 V supply is bad.

#### NOTE

CR21 and CR23 in the +25 V and -25 V supplies are constant current devices.

**5-175. Input Circuits.** Check for proper output from frequency potentiometer (see Dial Calibration Procedure, paragraph 5-138).

**5-176. Tuning Amplifier and Inverting Amplifier.** Voltage checks are best here. Pins 2 and 3 of IC1 should be at the same potential if the IC is good. The same is true of IC2.

Note that troubles in the current sources may be reflected back to these amplifiers and make it seem that the amplifiers are bad.

**5-177. Current Sources, Triangle Amplifier, and Level Detector.** If any one of these circuits fails, the output will be directly affected. The circuits are dependent on each other for operation and troubles may normally be isolated to one of the three circuits as follows:

a. From an external source apply a 1 kHz 2 V p-p offset triangle wave, varying from 0 V to -2 V, to the cathode of A1CR3. Go to 1 kHz on 3310A and Triangle Output.

b. Scope to A1TP4 and check for 10 V p-p triangle wave varying from -5 V to +5 V. If waveform is present, go on to step e; if not, go to step c.

c. Triangle wave not present at A1TP4. With offset triangle wave from step a still connected to A1CR3 cathode, place scope input at A1Q14 emitter. If a triangle wave is not present at this point, try adjusting A1R56. If this does not help, a problem exists in A1Q12-Q14 circuitry. If a triangle wave is present before adjusting A1R56, go to step d. If a triangle wave is present only after adjusting A1R56, remove the driving source (connected in step a) and check 3310A/B outputs. If still bad, go to step d.

d. Short A1Q16 Emitter and Base Leads together. A1TP4 voltage should go to (or remain at)  $\leq 5$  V dc. Short A1Q17 E to B. A1TP4 should go to (or remain at)  $\geq +5$  V. If these results are good, Q16-Q20 are good. Voltage checks should help isolate any further problems in the Triangle Amplifier.

e. Lift the cathode lead of A1CR4 and apply a 1 kHz 4 V p-p offset square wave, varying from +1 V to -3 V, to the lifted lead. If a triangle waveform is present at A1TP4, the current sources are working properly. In this case go to step f. If no triangle wave is present at TP4, voltage checks should help isolate the problem in the current sources.

f. Since the Triangle Amplifier and the Current Sources are working properly, a problem must exist in the  $\pm 5$  V level detector.

1. Check A1CR21 and A1CR22 in circuit as follows: Turn off 3310A/B power and apply (+) lead from 412A ohmmeter (use 1 k $\Omega$  range) to anode of either tunnel diode FIRST. Apply (-) lead to cathode LAST.

Indications:

about 750 $\Omega$	Diode is O.K.
about 1 k $\Omega$	Diode is open
0 $\Omega$	Diode is shorted or you applied ohmmeter leads in wrong order.

Another method of checking the tunnel diodes A1CR21 and A1CR22 is shown below. Figure 5-10.

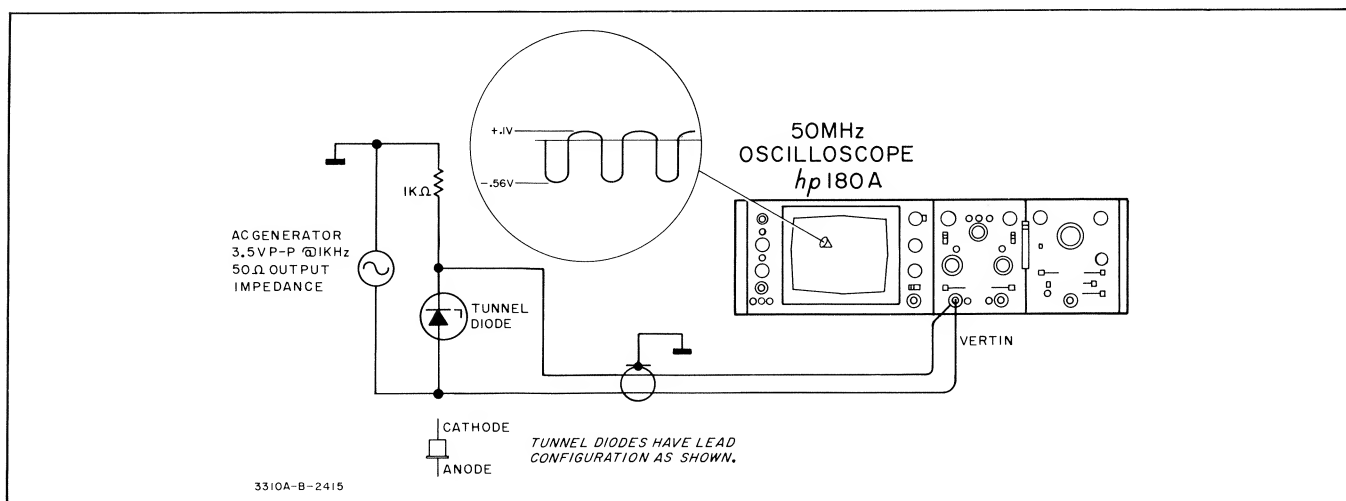


Figure 5-10. Tunnel Diode Check.

**NOTE**

*The tunnel diodes must be removed from the instrument for this check. All grounds should be carefully checked to insure they are connected as shown. If the diode is functioning properly, the waveform shown should appear.*

2. If both tunnel diodes check O.K. but it is suspected that one or both diodes are not firing when the 3310A/B is turned on, lift base lead of A1Q33 or A1Q36 (depending on which diode does not fire) and check for diode firing. If the diode(s) then fire, the remainder of the level detector may be checked by:
  - a. Driving transistors with proper waveforms shown on Figure 7-3 while checking for proper TP5 waveform.
  - b. Voltage checks.

**5-178. Output Amplifier.** Two methods for troubleshooting this circuit are:

- a. Apply proper 10 V p-p triangle at A1TP4; use triangle function and check waveforms in output amplifier, as shown on schematic (Figure 7-4).

- b. Using the DC offset function, check for the following approximate DC levels. (The A1 Board was removed when the levels were obtained using a scope with a X10 probe.)

**5-179. Sine Shaping Network and Amplifier.** Check for proper DC levels and AC waveforms shown on the schematic. A few waveforms are shown in the diode shaping network.

**5-180. High Frequency Level Detector.** Check AC waveforms and DC levels.

**5-181. Low Frequency Level Detector.** Check DC levels.

**5-182. TROUBLESHOOTING THE 3310B.**

5-183. Troubles occurring in the 3310B should be checked by first operating the instrument in "FREE RUN" mode. This will enable the troubleshooter to determine whether the problem is in the triggering mechanism of the 3310B or in the function generator portion of the instrument. If the trouble occurs with the instrument in FREE RUN mode the 3310B should be checked using the methods previously outlined for the 3310A/B (paragraphs 5-169 through 5-181). Failure of any transistor in the 3310B Tone Burst Gate will usually cause the 3310B to either free run or stop oscillating completely. The following method is useful in troubleshooting the 3310B TONE BURST GATE:

1. Set the 3310B controls for a 1 kHz sine wave.
2. Turn the START/STOP PHASE control just off "FREE RUN" position and connect an oscilloscope to the HIGH output.
3. Depress and hold the MANUAL TRIGGER button while observing the oscilloscope. A 1 kHz sine wave should appear.
4. Release the MANUAL TRIGGER control. The waveform should disappear.
5. If the proper indications, as outlined in paragraphs 5-183 (3) and (4), are not observed proceed as follows:
  - a. Connect any voltage between +1 V and +30 V to the EXT. GATE input.
  - b. Check the components listed in Table 5-7 for the approximate voltages indicated.
  - c. Remove the EXT. GATE voltage and recheck the components listed for the voltages indicated in Table 5-8.

**Table 5-6. D.C. Voltages on A1 Assembly With and Without Offset.**

	Maximum Negative DC Offset	Zero DC Offset	Maximum Positive DC Offset
A3Q9 Base	+ 20 V	+ 20 V	+ 20 V
A3Q10 Emmitter	+ 20 V	+ 20 V	+ 20 V
A3Q13 Base	- 8.5 V	+ 1.4 V	+ 11.5 V
Q1 Base	- 9.5 V	+ .7 V	+ 10.5 V
A3Q12 Base	- 20 V	- 20 V	- 20 V
A3Q11 Base	- 20 V	- 20 V	- 20 V
A3Q14 Base	- 8.5 V	- 1.4 V	+ 11.5 V
Q2 Base	- 9.5 V	- .7 V	+ 10.5 V

Table 5-7. D.C. Voltages for Tone Burst Circuit (A5 Assembly) With EXT. GATE Input.

	Q <sub>1</sub>	Q <sub>2</sub>	Q <sub>3</sub>	Q <sub>4</sub>	Q <sub>5</sub>	Q <sub>6</sub>	Q <sub>7</sub>	Q <sub>8</sub>	Q <sub>9</sub>	Q <sub>10</sub>	IC 1	
Emitter	-.1	.44	5.7	5.9	.9	.86	gnd	gnd	gnd	gnd	Pin 2	.09
Base	-1.1	1.1	5.0	5.2	1.6	.22	-.38	.7	.082	.67	Pin 13	1.6
Collector	10	5.2	.06	1.6	10	-10	4.7	.09	1.6	.082	Pin 8	.09

Table 5-8. D.C. Voltages for Tone Burst Circuit (A5 Assembly) Without EXT. GATE Input.

	Q <sub>1</sub>	Q <sub>2</sub>	Q <sub>3</sub>	Q <sub>4</sub>	Q <sub>5</sub>	Q <sub>6</sub>	Q <sub>7</sub>	Q <sub>8</sub>	Q <sub>9</sub>	Q <sub>10</sub>	IC 1	
Emitter	-2.6	-2.5	-5.7	7.1	-2.0	-2.0	N/A	N/A	N/A	N/A	Pin 2	1.6
Base	-2	-1.9	-5.0	6.4	-1.4	-2.7	.71	.12	.16	.12	Pin 13	1.7
Collector	10	6.4	-2.7	-1.4	10	-10	.07	1.6	1.7	.16	Pin 8	3.0 V

**5-184. MAINTENANCE TIPS.****5-185. A1 Board Removal.****NOTE**

*A1 Board removal gives easy access to the back of the A3 Board.*

- Remove Range Switch knob and holding nut.
- Remove screw on rear corner of A1 Board.
- Work board out of connector then up and out of instrument. *AVOID UNDUE FLEXING OF BOARD AS THIS MAY CAUSE BROKEN INTERNAL TRACES.*

**5-186. Broken Trace Repair.**

5-187. If one or more internal traces are open or have high resistance, the connection should be hard wired on the back of the board whenever possible.





*USE LOW WATTAGE SOLDERING IRONS WHEN REPLACING PARTS. THIS WILL HELP AVOID DAMAGE TO MULTILAYER BOARDS. HANDLE BOARDS CAREFULLY AND AVOID CONTAMINATION.*






ot Output Amplifier.  
).

TPUT LEVEL control (A2R20). Check  
2C2\*, A1R31 and all interconnecting

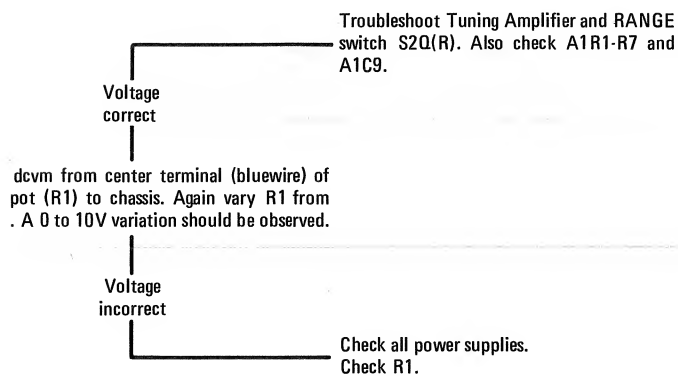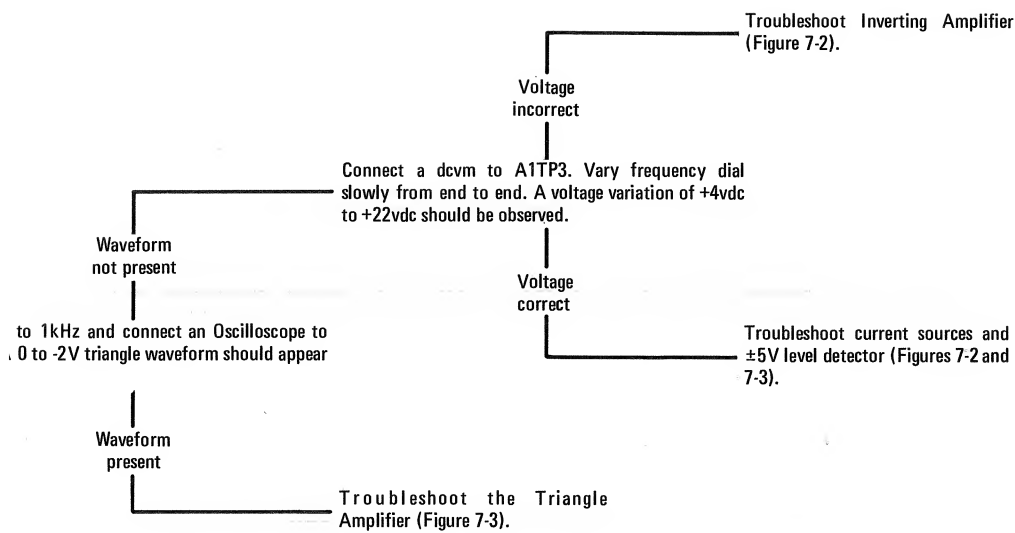

3310A-C-2382

No output obtainable on one or more of the following functions (choose one).

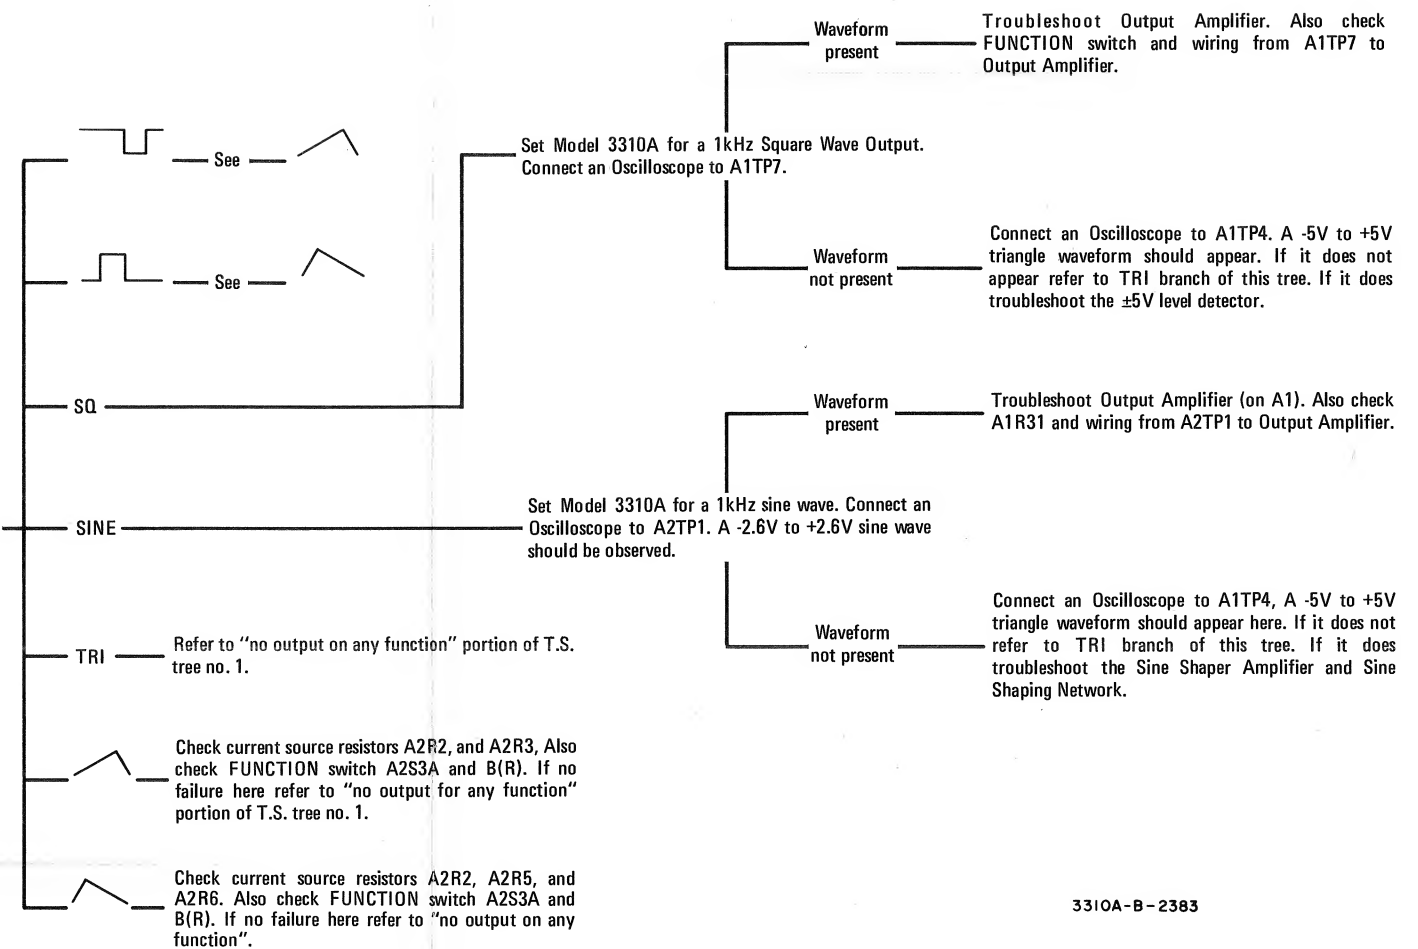

3310A-B-2383

Figure 5-12. Troubleshooting Tree No. 2. Output Not Obtainable on All Functions.

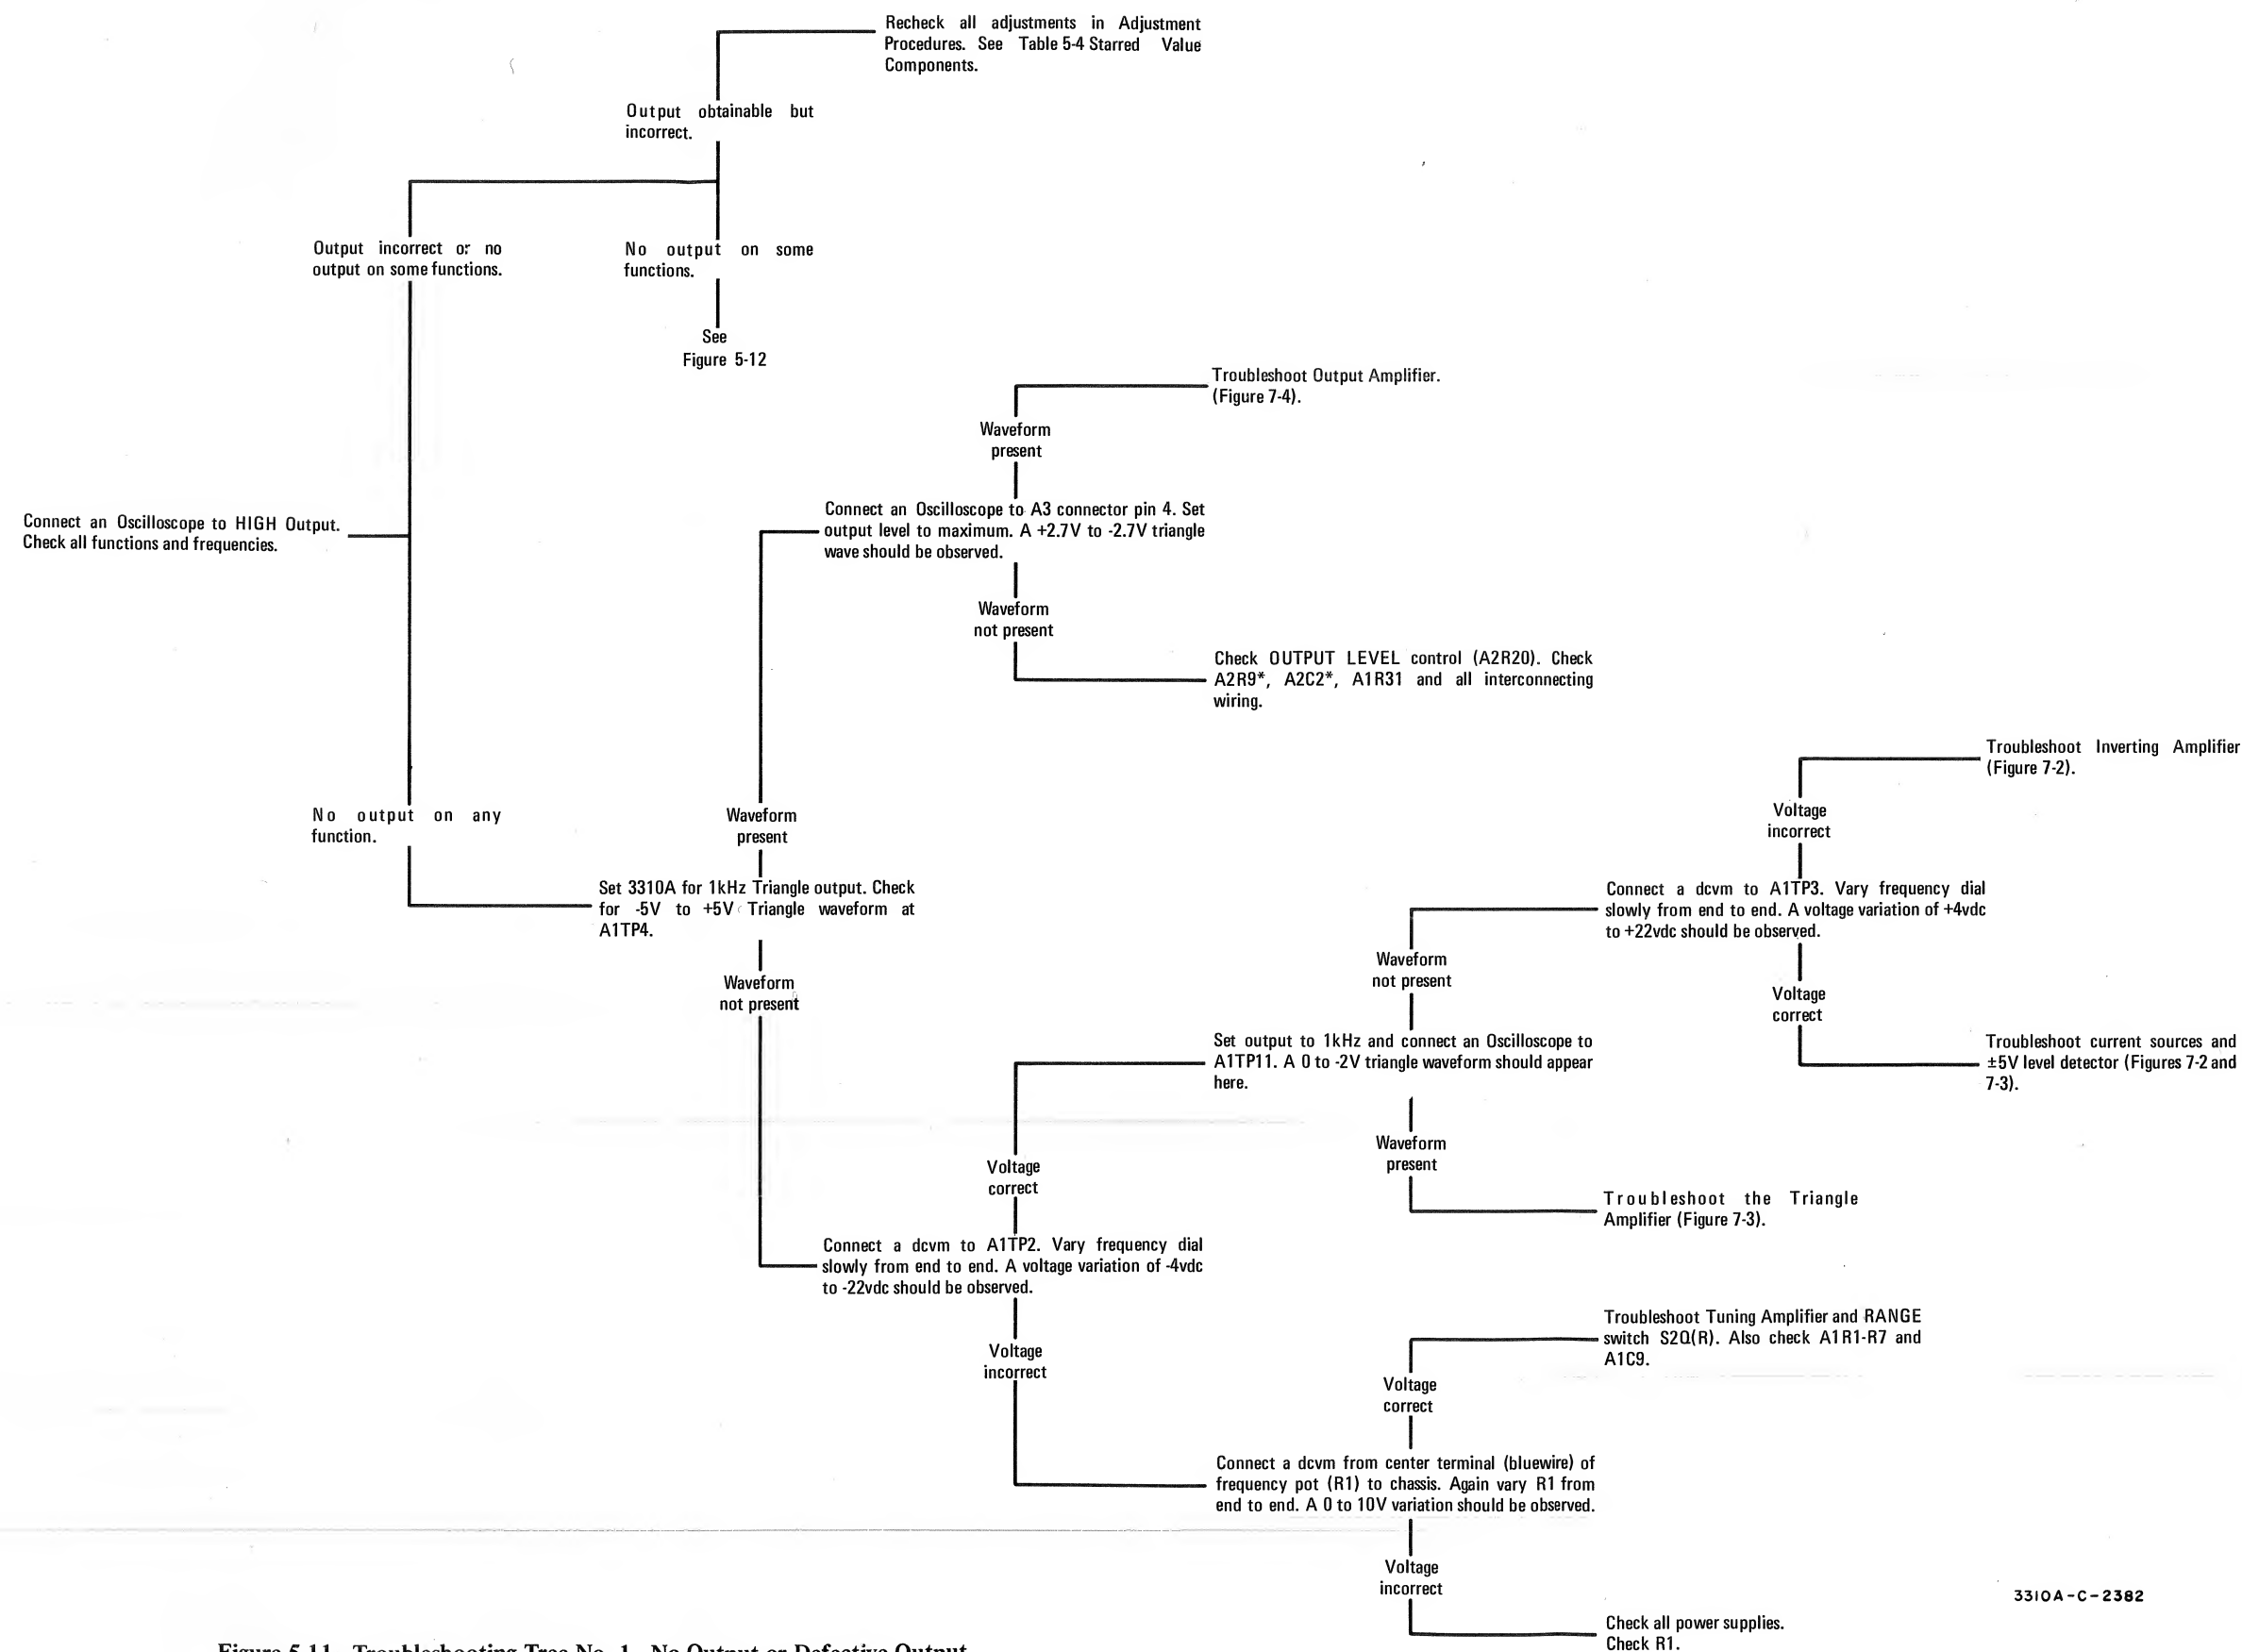


Figure 5-11. Troubleshooting Tree No. 1. No Output or Defective Output.

# PERFORMANCE CHECK TEST CARD

Hewlett-Packard Model 3310 A and B  
Function Generators  
Serial No. \_\_\_\_\_

Test Performed By \_\_\_\_\_

Date \_\_\_\_\_

CHECK DESCRIPTION	SPECIFICATION	INDICATION																																																										
FREQUENCY RANGE CHECK	Freq. (min) $\leq$ .0005 Hz Freq. (max) $\geq$ 5 MHz	_____ $\geq$ 2000 $\mu$ s _____ $\geq$ 5 MHz																																																										
SINE WAVE FREQ. RESPONSE CHECK	5 Hz to 50 kHz: $\pm$ 1 % 50 kHz to 5 MHz: $\pm$ 3 %	_____ $\pm$ 1 % _____ $\pm$ 3 %																																																										
TRIANGLE SYMMETRY CHECK	0.0005 Hz to 20 Hz: $<$ 1 % 20Hz to 50 kHz: $<$ 0.5 %	_____ $<$ 1 % _____ $<$ 0.5 %																																																										
DIAL ACCURACY CHECK	<table><thead><tr><th></th><th>Dial</th><th>Range</th></tr></thead><tbody><tr><td rowspan="24"><math>\pm</math> (1 % of setting + 1 % of full scale)</td><td>5</td><td>.0001</td></tr><tr><td>30</td><td>.0001</td></tr><tr><td>50</td><td>.0001</td></tr><tr><td>5</td><td>.001</td></tr><tr><td>30</td><td>.001</td></tr><tr><td>50</td><td>.001</td></tr><tr><td>5</td><td>.01</td></tr><tr><td>30</td><td>.01</td></tr><tr><td>50</td><td>.01</td></tr><tr><td>5</td><td>.1</td></tr><tr><td>30</td><td>.1</td></tr><tr><td>50</td><td>.1</td></tr><tr><td>5</td><td>1</td></tr><tr><td>30</td><td>1</td></tr><tr><td>50</td><td>1</td></tr><tr><td>5</td><td>10</td></tr><tr><td>30</td><td>10</td></tr><tr><td>50</td><td>10</td></tr><tr><td>5</td><td>100</td></tr><tr><td>30</td><td>100</td></tr><tr><td>50</td><td>100</td></tr><tr><td>5</td><td>1K</td></tr><tr><td>30</td><td>1K</td></tr><tr><td>50</td><td>1K</td></tr><tr><td>5</td><td>10K</td></tr><tr><td>30</td><td>10K</td></tr><tr><td>50</td><td>10K</td></tr></tbody></table>		Dial	Range	$\pm$ (1 % of setting + 1 % of full scale)	5	.0001	30	.0001	50	.0001	5	.001	30	.001	50	.001	5	.01	30	.01	50	.01	5	.1	30	.1	50	.1	5	1	30	1	50	1	5	10	30	10	50	10	5	100	30	100	50	100	5	1K	30	1K	50	1K	5	10K	30	10K	50	10K	_____ 1800 to 2240s _____ 324 to 342s _____ 196 to 204s _____ 180 to 224s _____ 32.4 to 34.2s _____ 19.6 to 20.4s _____ 18.0 to 22.4s _____ 3.24 to 3.42s _____ 1.96 to 2.04s _____ 1.80 to 2.24s _____ 324 to 342ms _____ 196 to 204ms _____ 180 to 224ms _____ 32.4 to 34.2ms _____ 19.6 to 20.4ms _____ 18.0 to 22.4ms _____ 3.24 to 3.42ms _____ 1.96 to 20.4ms _____ 1.80 to 2.24ms _____ 2920 to 3080 Hz _____ 4900 to 5100 Hz _____ 4450 to 5550 Hz _____ 29.20 Hz to 30.80 kHz _____ 49.00 kHz to 51.00 kHz _____ 44.50 kHz to 55.50 kHz _____ 292.0 kHz to 308.9 kHz _____ 490.0 kHz to 510.0 kHz
	Dial	Range																																																										
$\pm$ (1 % of setting + 1 % of full scale)	5	.0001																																																										
	30	.0001																																																										
	50	.0001																																																										
	5	.001																																																										
	30	.001																																																										
	50	.001																																																										
	5	.01																																																										
	30	.01																																																										
	50	.01																																																										
	5	.1																																																										
	30	.1																																																										
	50	.1																																																										
	5	1																																																										
	30	1																																																										
	50	1																																																										
	5	10																																																										
	30	10																																																										
	50	10																																																										
	5	100																																																										
	30	100																																																										
	50	100																																																										
	5	1K																																																										
	30	1K																																																										
	50	1K																																																										
5	10K																																																											
30	10K																																																											
50	10K																																																											
SINE WAVE DISTORTION CHECK	10 Hz to 50 kHz: 0.1 % 50 kHz to 500 kHz: 1 % 5 MHz: 3 %	_____ $>$ 46 dB _____ $>$ 40 dB _____ $>$ 30 dB																																																										
SQUARE WAVE AND PULSE RESPONSE CHECKS	$<$ 30ns rise and fall times at full output $<$ 35ns rise and fall times at $<$ full output $<$ 5 % total aberration	_____ $<$ 30ns (rise) _____ $<$ 30ns (fall) _____ $<$ 35ns (rise) _____ $<$ 35ns (fall) _____ $<$ 5 %																																																										
SYNC OUTPUT RESPONSE CHECK	$<$ 20ns rise and fall times	_____ $<$ 20ns (rise) _____ $<$ 20ns (fall)																																																										
MAXIMUM HIGH OUTPUT CHECK (except pulses $>$ 2 MHz). OUTPUT LEVEL RANGE	$>$ 15 V p-p into 50 $\Omega$ (5.3 Vrms, sine function) $>$ 30 V p-p open circuit (10.6 Vrms, sine function) $>$ 30 dB controlling HIGH and LOW output	_____ $>$ 5.3 Vrms _____ $>$ 10.6 Vrms _____ $>$ 30 dB																																																										
MINIMUM LOW OUTPUT CHECK	$<$ 15 mV p-p into 50 $\Omega$ $<$ 30 mV p-p open circuit	_____ $<$ 15 mV p-p _____ $<$ 30 mV p-p																																																										

**PERFORMANCE CHECK TEST CARD (cont'd)**

CHECK DESCRIPTION	SPECIFICATION	INDICATION
SYNC OUTPUT AMPLITUDE CHECK	> 2 V p-p into 50 $\Omega$ > 4 V p-p open circuit	_____ > 2 V p-p _____ > 4 V p-p
EXT. GATE SENSITIVITY (3310B only)	Triggering occurs with an input $\geq +1$ V but $\leq +30$ V. A maximum voltage of $\pm 30$ V can be applied to the EXT. GATE input.	_____ + 1 V _____ + 30 V Max, input voltage $\pm 30$ V
EXT TRIGGER CHECK (3310B only)	Triggering occurs with input pulses $\geq 1$ V p-p but $\leq 30$ V p-p.	_____ 1 V p-p _____ 30 V p-p

## SECTION VI REPLACEABLE PARTS

### 6-1. INTRODUCTION.

6-2. This section contains information for ordering replacement parts. Table 6-1 lists parts in alphameric order of their reference designators and indicates the description, -hp-part number of each part, together with any applicable notes, and provides the following:

- a. Total quantity used in the instrument (TQ column). The total quantity of a part is given the first time the part number appears.
- b. Description of the part. (See list of abbreviations below.)
- c. Typical manufacturer of the part in a five-digit code. (See Appendix A for list of manufacturers.)
- d. Manufacturer's part number.

6-3. Miscellaneous parts are listed at the end of Table 6-1.

### 6-4. ORDERING INFORMATION.

6-5. To obtain replacement parts, address order or inquiry to your local Hewlett-Packard Field Office. (See Appendix B for list of office locations.) Identify parts by their Hewlett-Packard part numbers.

### 6-6. NON-LISTED PARTS.

6-7. To obtain a part that is not listed, include:

- a. Instrument model number.
- b. Instrument serial number.
- c. Description of the part.
- d. Function and location of the part.

ABBREVIATIONS									
Ag	silver	ID	inside diameter	ns	nanosecond(s) = 10 <sup>-9</sup> seconds	SPDT	single-pole double-throw		
Al	aluminum	imp	impregnated	nsr	not separately replaceable	SPST	single-pole single-throw		
A	ampere(s)	incl	incandescent			Ta	tantalum		
Au	gold	ins	insulation(ed)	Ω	ohm(s)	TC	temperature coefficient		
C	capacitor	kΩ	kiloohm(s) = 10 <sup>3</sup> ohms	obd	order by description	TiO <sub>2</sub>	titanium dioxide		
cer	ceramic	kHz	kiloherzt = 10 <sup>3</sup> hertz	OD	outside diameter	tog	toggle		
coef	coefficient	L	inductor	P	peak	tol	tolerance		
com	common	lin	linear taper	pA	picoampere(s)	trim	trimmer		
comp	composition	pc	printed circuit	PC	printed circuit	TSTR	transistor		
conn	connection	log	logarithmic taper	pF	picofarad(s) 10 <sup>-12</sup> farads	V	volt(s)		
dep	deposited	mA	milliampere(s) = 10 <sup>-3</sup> amperes	piv	peak inverse voltage	vacw	alternating current working voltage		
DPDT	double-pole double-throw	MHz	megahertz = 10 <sup>6</sup> hertz	p/o	part of	var	variable		
DPST	double-pole single-throw	MΩ	megohm(s) = 10 <sup>6</sup> ohms	pos	position(s)	vw	direct current working voltage		
elect	electrolytic	met film	metal film	pot	potentiometer	W	watt(s)		
encap	encapsulated	mfr	manufacturer	P-p	peak-to-peak	w/	with		
F	farad(s)	ms	millisecond	ppm	parts per million	w/v	working inverse voltage		
FET	field effect transistor	mtg	mounting	prec	precision (temperature coefficient, long term stability, and/or tolerance)	w/o	without		
fxd	fixed	mV	millivolt(s) = 10 <sup>-3</sup> volts	R	resistor	ww	wirewound		
GaAs	gallium arsenide	μF	microfarad(s)	Rh	rhodium	*	optimum value selected at factory, average value shown (part may be omitted)		
GHz	gigahertz = 10 <sup>9</sup> hertz	μs	microsecond(s)	rms	root-means-square	**	no standard type number assigned (selected or special type)		
gd	guard(ed)	μV	microvolt(s) = 10 <sup>-6</sup> volts	rot	rotary				
Ge	germanium	my	Mylar ®	Se	selenium				
grd	ground(ed)	nA	nanoampere(s) = 10 <sup>-9</sup> amperes	sect	section(s)				
H	henry(ies)	NC	normally closed	Si	silicon				
Hg	mercury	Ne	neon	sl	slide				
Hz	hertz (cycle(s) per second)	NO	normally open						
		NPO	negative positive zero (zero temperature coefficient)						
DECIMAL MULTIPLIERS									
Prefix	Symbols	Multiplier	Prefix	Symbols	Multiplier				
tera	T	10 <sup>12</sup>	centi	c	10 <sup>-2</sup>				
giga	G	10 <sup>9</sup>	milli	m	10 <sup>-3</sup>				
mega	M or Meg	10 <sup>6</sup>	micro	μ	10 <sup>-6</sup>				
kilo	K or k	10 <sup>3</sup>	nano	n	10 <sup>-9</sup>				
hecto	h	10 <sup>2</sup>	pico	p	10 <sup>-12</sup>				
deka	da	10	femto	f	10 <sup>-15</sup>				
deci	d	10 <sup>-1</sup>	atto	a	10 <sup>-18</sup>				
DESIGNATORS									
A	assembly	FL	filter	Q	transistor	TS	terminal strip		
B	motor	HR	heater	QCR	transistor-diode	V	vacuum tube, neon bulb, photocell, etc.		
BT	battery	IC	integrated circuit	R	resistor	W	wire		
C	capacitor	J	jack	RT	thermistor	X	socket		
CR	diode	K	relay	S	switch	XDS	lampholder		
DL	delay line	L	inductor	T	transformer	XF	fuseholder		
DS	lamp	M	meter	TB	terminal board	Y	crystal		
E	misc electronic part	MP	mechanical part	TC	thermocouple	Z	network		
F	fuse	P	plug	TP	test point				

® Dupont de Nemours

Rev I

Table 6-1. Replaceable Parts

REFERENCE DESIGNATOR	-hp- PART NO.	TQ	DESCRIPTION	MFR.	MFR. PART NO.
<b>A1</b>	<b>03310-66501</b>	<b>1</b>	<b>P.C. Board: Oscillator</b>	<b>-hp-</b>	
C1	0180-0116	2	C: fxd 6.8 $\mu$ F 10 % 35 vdcw	56289	150D685X9035B2-DYS
C2, C3	0180-1719	2	C: fxd 22 $\mu$ F 10 % 25 vdcw	56289	109D226X9025C2
C4	0180-0116		C: fxd 6.8 $\mu$ F 10 % 35 vdcw	56289	150D685X9035B2-DYS
C5	0180-0100	2	C: fxd 4.7 $\mu$ F 10 % 35 vdcw	56289	150D475X9035B2-DYS
C6	0180-0161	2	C: fxd 3.3 $\mu$ F 20 % 35 vdcw	56289	150D335X0035B2-DYS
C7	0180-0100		C: fxd 4.7 $\mu$ F 10 % 35 vdcw	56289	150D475X9035B2-DYS
C8	0180-0161		C: fxd 3.3 $\mu$ F 20 % 35 vdcw	56289	150D335X0035B2-DYS
C9	0150-0093	7	C: fxd cer 0.01 $\mu$ F + 80 % - 20 % 100 vdcw	91418	TA obd
C10	0140-0199	1	C: fxd mica 240 pF 5 %	72136	obd
C11	0160-3077	1	C: fxd mylar 0.027 $\mu$ F 10 % 100 vdcw	56289	225R2739W31-PWM
C12	0160-0938	4	C: fxd mica 1000 pF 5 %	14655	obd
C13	0160-0945	1	C: fxd mica 910 pF 5 %	00853	obd
C14	0160-3544	1	C: fxd 0.01 $\mu$ F 5 % 30 vdcw	84411	HEW 196 obd
C15	0160-3399	1	C: fxd 0.1 $\mu$ F 5 % 200 vdcw	84411	HEW 249 obd
C16	0160-3402	1	C: fxd 1.0 $\mu$ F 5 % 50 vdcw	84411	HEW 249 obd
C17*	0140-0192	1	C: fxd mica 68 pF 5 %	14655	obd
C18, C19			Not assigned		
C20*	0150-0022	1	C: fxd 3.3 pF 10 % 500 vdcw	78488	Type GA obd
C21	0160-0938		C: fxd mica 1000 pF 5 %	14655	obd
C22	0180-0291	6	C: fxd 1.0 $\mu$ F 10 % 35 vdcw	05397	T110A105K035KS
C23	0160-0170	2	C: fxd cer 0.22 $\mu$ F + 80 % - 20 % 25 vdcw	56289	5C93-CML
C24			Not assigned		
C25	0160-0938		C: fxd mica 1000 pF 5 %	14655	obd
C26	0180-0291		C: fxd 1.0 $\mu$ F 10 % 35 vdcw	05397	T110A105K035KS
C27	0160-0170		C: fxd cer 0.22 $\mu$ F + 80 % - 20 % 25 vdcw	56289	5C93-CML
C28 thru C31	0140-0202	5	C: fxd mica 15 pF 5 %	14655	obd
C32	0160-0763	1	C: fxd cer 5 pF + 80 % - 20 % 500 vdcw	56289	5C9B-CML
C33 thru C36	0150-0093		C: fxd cer 0.01 $\mu$ F + 80 % - 20 % 100 vdcw	91418	TA obd
C37, C38			Not assigned		
C39	0160-0938		C: fxd mica 1000 pF 5 %	14655	obd
C40	0140-0198	1	C: fxd mica 200 pF 5 %	72136	obd
C41	0160-3401	1	C: fxd 2.0 $\mu$ F 5 % 50 vdcw	84411	HEW-146 obd
CR1, CR2	1902-0049	2	Diode: breakdown 6.19 V 10 %	04713	SZ10939-139
CR3, CR4	1901-0518	5	Diode: hot carrier	-hp-	
CR5 thru CR8			Not assigned		
CR9 thru CR12	1901-0025	19	Diode: Si 100 wiv 12 pF 100 mA	07263	FD 2387
CR13 thru CR16	1901-0040	27	Diode: Si 30 wiv 12 pF, 100 mA	07263	FDG 1088
CR17, CR18			Not assigned		
CR19, CR20	1901-0040		Diode: Si 30 wiv 12 pF, 30 mA 2 ns	07263	FDG 1088
CR21, CR22	1912-0016	2	Diode: tunnel, germanium 1N3713	01002	obd
CR23 thru CR30	1901-0025		Diode: Si 100 wiv 12 pF 100 mA	07263	FD2387
IC1, IC2	1820-0203	3	Integrated Circuit MA741C Amp.	07263	SL8940
J1 thru J6	1251-2194	6	Connector: single contact	00779	3-331272-0
L1 thru L5			Not assigned		
L6	9140-0018	2	Coil-RF: choke	82142	10100-31
L7			Not assigned		
L8	9140-0018		Coil RF: choke	82142	10100-31
L9	9170-0016	1	Ferrite bead	02114	obd

Table 6-1. Replaceable Parts (Cont'd)

REFERENCE DESIGNATOR	-hp- PART NO.	TQ	DESCRIPTION	MFR.	MFR. PART NO.
<b>A1 (cont'd)</b>					
Q1	1853-0086	2	TSTR: Si PNP	04713	SPS3322
Q2	1854-0215	11	TSTR: Si NPN 2N3904	04713	SPS3611
Q3	1854-0221	1	TSTR: Si NPN Dual	32293	ITS1015
Q4	1854-0071	8	TSTR: Si NPN	01295	SKA1124
Q5	1853-0086		TSTR: Si PNP	04713	SPS3322
Q6	1854-0392	1	TSTR: Si NPN 2N5088	04713	obd
Q7 thru Q11			Not assigned		
Q12	1855-0081	1	TSTR: Field Effect 2N5245	01295	obd
Q13	1954-0071		TSTR: Si NPN	01295	SKA1124
Q14	1854-0019	3	TSTR: Si NPN	04713	SS2188
Q15	1854-0092	5	TSTR: Si NPN	04713	SPS3318
Q16	1853-0034	5	TSTR: Si PNP 2N3634	04713	SM3197
Q17, Q18	1854-0092		TSTR: Si NPN 2N3563	04713	SPS3318
Q19	1854-0019		TSTR: Si NPN	04713	SS2188
Q20	1853-0034		TSTR: Si PNP 2N3634	04713	SM3197
Q21	1854-0215		TSTR: Si NPN 2N3904	04713	SPS3611
Q22 thru Q25	1853-0036	16	TSTR: Si PNP 2N3906	04713	SPS3612
Q26 thru Q28	1854-0215		TSTR: Si NPN 2N3904	04713	SPS3611
Q29, Q30			Not assigned		
Q31	1854-0092		TSTR: Si NPN 2N3563	04713	SPS3318
Q32	1854-0019		TSTR: Si NPN	04713	SS2188
Q33	1854-0092		TSTR: Si NPN 2N3563	04713	SPS3318
Q34	1854-0215		TSTR: Si NPN 2N3904	04713	SPS3611
Q35	1853-0036		TSTR: Si PNP 2N3906	04713	SPS3612
Q36	1853-0203	1	TSTR: Si PNP	07263	S24851
Q37	1853-0036		TSTR: Si PNP 2N3906	04713	SPS3612
Q38	1853-0034		TSTR: Si PNP 2N3634	04713	SM3197
Q39	1854-0215		TSTR: Si NPN 2N3904	04713	SPS3611
Q40	1853-0036		TSTR: Si PNP 2N3906	04713	SPS3612
Q41	1854-0215		TSTR: Si NPN 2N3904	04713	SPS3611
Q42	1853-0036		TSTR: Si PNP 2N3906	04713	SPS3612
Q43			Not assigned		
Q44	1854-0087	3	TSTR: Si NPN	01002	X16N2989
Q45	1853-0012	1	TSTR: Si PNP 2N2904A	04713	2N2904A
Q46	1854-0087		TSTR: Si NPN	01002	X16N2989
Q47, Q48	1854-0071		TSTR: Si NPN	01295	SKA1124
Q49, Q50	1853-0036		TSTR: Si PNP 2N3904	04713	SPS3612
Q51	1855-0308	1	TSTR: Field Effect - dual Si N channel	17856	DN324
R1 thru R6	2100-1738	8	R: var 10 k $\Omega$ 10 % 1/2 W	73138	62-209-1
R7	0698-6906	1	R: fxd flm 41.2 k $\Omega$ 0.5 % 1/8 W	75042	CEA T-2
R8	0698-1235	1	R: fxd comp 12 k $\Omega$ 5 % 1/4 W	01121	CB1235
R9	0757-0458	1	R: fxd flm 51.1 k $\Omega$ 1 % 1/8 W	14674	C4 T-0
R10, R11	0698-7311	4	R: fxd met flm 85.6 k $\Omega$ .2 W	91637	KT-35
R12	0698-3455	1	R: fxd flm 261 k $\Omega$ 1 % 1/8 W	14674	C4 T-0
R13 thru R15			Not assigned		
R16	0750-0453	1	R: fxd flm 30.1 k $\Omega$ 1 % 1/8 W	14674	C4 T-0
R17	2100-1738		R: var 10 k $\Omega$ 10 % 1/2 W	73138	62-209-1
R18	0757-0279	1	R: fxd flm 3.16 k $\Omega$ 1 % 1/8 W	14674	C4 T-0
R19	0757-0407	2	R: fxd flm 200 $\Omega$ 1 % 1/8 W	14674	C4 T-0
R20	0698-3245	1	R: fxd flm 20.5 k $\Omega$ 1 % 1/8 W	14674	C4 T-0
R21	0683-1035	4	R: fxd comp 10 k $\Omega$ 5 % 1/4 W	01121	CB1035
R22	0698-7312	2	R: fxd met flm 15 k $\Omega$ 0.1 % .2 W	91637	KT-35
R23	0757-0398	1	R: fxd flm 75 $\Omega$ 1 % 1/8 W	14674	C5 T-0
R24	2100-2061	1	R: var 200 $\Omega$ 10 % 1/2 W	73138	62-204-1
R25	0698-7312		R: fxd met flm 15 k $\Omega$ 0.1 % .2 W	91637	KT-35
R26	2100-1738		R: var 10 k $\Omega$ 10 % 1/2 W	73138	62-209-1
R27	0757-0472	1	R: fxd flm 200 k $\Omega$ 1 % 1/8 W	14674	C4 T-0
R28	0698-4123	2	R: fxd flm 499 $\Omega$ 1 % 1/8 W	14674	C4 T-0

Table 6-1. Replaceable Parts (Cont'd)

REFERENCE DESIGNATOR	hp-PART NO.	TQ	DESCRIPTION	MFR.	MFR. PART NO.	
<b>A1 (cont'd)</b>						
R29	0698-3518	1	R: fxd flm 7.32 k $\Omega$ 1 % 1/8 W	75042	CEA T-0	obd
R30	0683-1035		R: fxd comp 10 k $\Omega$ 5 % 1/4 W	01121	CB1035	
R31	0698-6918	1	R: fxd flm 64.9 k $\Omega$ 0.5 % 1/8 W	75042	CEA T-2	obd
R32, R33	0698-7311		R: fxd met flm 85.6 k $\Omega$ .2 W	91637	KT-35	obd
R34	0698-6933	1	R: fxd flm 130 k $\Omega$ 0.5 % 1/8 W	75042	CEA T-2	obd
R35	0698-3266	1	R: fxd flm 237 k $\Omega$ 1 % 1/8 W	14674	C4 T-0	obd
R36	0698-4541	1	R: fxd flm 442 k $\Omega$ 1 % 1/8 W	91637	MF-1/10-32 T-1	
R37	0757-0456	1	R: fxd flm 43.2 k $\Omega$ 1 % 1/8 W	91637	CMF-1/10-32 T-1	
R38	0683-3345	1	R: fxd comp 330 k $\Omega$ 5 % 1/4 W	01121	CB3345	
R39	0683-3335	2	R: fxd comp 33 k $\Omega$ 5 % 1/4 W	01121	CB3335	
R40	0698-0083	1	R: fxd flm 1.96 k $\Omega$ 1 % 1/8 W	14674	C4 T-0	obd
R41	0757-0280	7	R: fxd flm 1 k $\Omega$ 1 % 1/8 W	14674	C4 T-0	obd
R42, R43	0683-1005	11	R: fxd comp 10 $\Omega$ 5 % 1/4 W	01121	CB1005	
R44	0683-3305	9	R: fxd comp 33 $\Omega$ 5 % 1/4 W	01121	CB3305	
R45 thru R49			Not assigned			
R50	0683-0475	1	R: fxd comp 4.7 $\Omega$ 5 % 1/4 W	01121	CB47G5	
R51, R52	0683-0275	2	R: fxd comp 2.7 $\Omega$ 5 % 1/4 W	01121	CB27G5	
R53	0683-3325	1	R: fxd comp 3300 $\Omega$ 5 % 1/4 W	01121	CB3325	
R54	0684-4721	1	R: fxd comp 4700 $\Omega$ 10 % 1/4 W	01121	CB4721	
R55	0684-2711	1	R: fxd comp 270 $\Omega$ 10 % 1/4 W	01121	CB2711	
R56	2100-2497	1	R: var 2 k $\Omega$ 10 % 1/2 W	73138	62-207-1	
R57	0757-0422	1	R: fxd flm 909 $\Omega$ 1 % 1/8 W	14674	C4 T-0	obd
R58	0683-8205	3	R: fxd comp 82 $\Omega$ 5 % 1/4 W	01121	CB8205	
R59	0683-2015	4	R: fxd comp 200 $\Omega$ 5 % 1/4 W	01121	CB2015	
R60	0683-8215	2	R: fxd comp 820 $\Omega$ 5 % 1/4 W	01121	CB8215	
R61	0683-1625	1	R: fxd comp 1600 $\Omega$ 5 % 1/4 W	01121	CB1625	
R62 thru R64	0683-2015		R: fxd comp 200 $\Omega$ 5 % 1/4 W	01121	CB2015	
R65	0698-6860	1	R: fxd flm 98 $\Omega$ 0.25 % 1/8 W	75042	CEA T-2	obd
R66	0698-6697	1	R: fxd flm 402 $\Omega$ 0.25 % 1/8 W	75042	CEA T-2	obd
R67	0683-1015	2	R: fxd comp 100 $\Omega$ 5 % 1/4 W	01121	CB1015	
R68	0698-0058	1	R: fxd comp 4.02 k $\Omega$ 1 % 1/4 W	14674	C5 T-0	obd
R69, R70	0683-1005		R: fxd comp 10 $\Omega$ 5 % 1/4 W	01121	CB1005	
R71	0683-1045	4	R: fxd comp 100 k $\Omega$ 5 % 1/4 W	01121	CB1045	
R72	0698-4519	2	R: fxd flm 140 k $\Omega$ 1 % 1/8 W	14674	C4 T-0	obd
R73	0698-4493	2	R: fxd flm 34 k $\Omega$ 1 % 1/8 W	14674	C4 T-0	obd
R74	0757-0281	2	R: fxd flm 2.74 k $\Omega$ 1 % 1/8 W	14674	C4 T-0	obd
R75	0698-3151	2	R: fxd flm 2.87 k $\Omega$ 1 % 1/8 W	91637	CMF-1/10-32 T-1	
R76	0757-0465	3	R: fxd flm 100 k $\Omega$ 1 % 1/8 W	14674	C4 T-0	obd
R77	0757-0739	2	R: fxd flm 2 k $\Omega$ 1 % 1/4 W	14674	C5 T-0	obd
R78	0683-1045		R: fxd comp 100 k $\Omega$ 5 % 1/4 W	01121	CB1045	
R79	0698-7322	2	R: fxd flm 4.25 k $\Omega$ 0.25 % 1/8 W	75042	CEA T-9	obd
R80	0698-7319	2	R: fxd flm 4.08 k $\Omega$ 0.25 % 1/8 W	75042	CEA T-9	obd
R81	0683-1045		R: fxd comp 100 k $\Omega$ 5 % 1/4 W	01121	CB1045	
R82	0698-4519		R: fxd flm 140 k $\Omega$ 1 % 1/8 W	14674	C4 T-0	obd
R83	0698-4493		R: fxd flm 34 k $\Omega$ 1 % 1/8 W	14674	C4 T-0	obd
R84	0757-0281		R: fxd flm 2.74 k $\Omega$ 1 % 1/8 W	14674	C4 T-0	obd
R85	0698-3151		R: fxd flm 2.87 k $\Omega$ 1 % 1/8 W	91637	CMF-1/10-32 T-1	
R86	0757-0465		R: fxd flm 100 k $\Omega$ 1 % 1/8 W	14674	C4 T-0	obd
R87	0757-0739		R: fxd flm 2 k $\Omega$ 1 % 1/4 W	14674	C5 T-0	obd
R88	0683-1045		R: fxd comp 100 k $\Omega$ 5 % 1/4 W	01121	CB1045	
R89	0698-7322		R: fxd flm 4.25 k $\Omega$ 0.25 % 1/8 W	75042	CEA T-9	obd
R90	0698-7319		R: fxd flm 4.08 k $\Omega$ 0.25 % 1/8 W	75042	CEA T-9	obd
R91, R92			Not assigned			
R93, R94	0698-3240	2	R: fxd flm 500 $\Omega$ 1 % 1/8 W	91637	CMF-1/10-32 T-1	
R95	0698-6624	2	R: fxd flm 2 k $\Omega$ 0.1 % 1/8 W	75042	CEA T-9	obd
R96	0698-7393	2	R: fxd flm 301 $\Omega$ 0.25 % 1/8 W	75042	CEA T-2	obd
R97, R98	0698-7394	2	R: fxd flm 698 $\Omega$ 0.1 % 1/8 W	75042	CEA T-9	obd
R99	0698-7393		R: fxd flm 301 $\Omega$ 0.25 % 1/8 W	75042	CEA T-2	obd
R100	0698-6624		R: fxd flm 2 k $\Omega$ 0.1 % 1/8 W	75042	CEA T-9	obd
R101	0698-4458	2	R: fxd flm 590 $\Omega$ 1 % 1/8 W	14674	C4 T-0	obd



Table 6-1. Replaceable Parts (Cont'd)

REFERENCE DESIGNATOR	-hp- PART NO.	TQ	DESCRIPTION	MFR.	MFR. PART NO.
<b>A1 (cont'd)</b>					
R102	0757-0290	2	R: fxd flm 6.19 k $\Omega$ 1 % 1/8 W	91637	CMF-1/10-32 T-1
R103	0757-0280		R: fxd flm 1 k $\Omega$ 1 % 1/8 W	14674	C4 T-0
R104	0757-0410	4	R: fxd flm 301 $\Omega$ 1 % 1/8 W	91637	MF-1/10-32 T-1
R105	0698-4409	2	R: fxd flm 127 $\Omega$ 1 % 1/8 W	14674	C4 T-0
R106	0757-0416	4	R: fxd flm 511 $\Omega$ 1 % 1/8 W	14674	C4 T-0
R107	0757-0410		R: fxd flm 301 $\Omega$ 1 % 1/8 W	91637	MF-1/10-32 T-1
R108	0698-4409		R: fxd flm 127 $\Omega$ 1 % 1/8 W	14674	C4 T-0
R109	0757-0416		R: fxd flm 511 $\Omega$ 1 % 1/8 W	14674	C4 T-0
R110	0757-0290		R: fxd flm 6.19 k $\Omega$ 1 % 1/8 W	91637	CMF-1/10-32 T-1
R111	0698-4458		R: fxd flm 590 $\Omega$ 1 % 1/8 W	14674	C4 T-0
R112	0757-0280		R: fxd flm 1 k $\Omega$ 1 % 1/8 W	14674	C4 T-0
R113	0757-0178	4	R: fxd flm 100 $\Omega$ 1 % 1/4 W	14674	C5 T-0
R114, R115	0683-1005		R: fxd comp 10 $\Omega$ 5 % 1/4 W	01121	CB1005
R116	0757-0178		R: fxd flm 100 $\Omega$ 1 % 1/4 W	14674	C5 T-0
R117, R118			Not assigned		
R119, R120	0757-0416		R: fxd flm 511 $\Omega$ 1 % 1/8 W	14674	C4 T-0
R121	0757-0178		R: fxd flm 100 $\Omega$ 1 % 1/4 W	14674	C5 T-0
R122, R123	0683-1005		R: fxd comp 10 $\Omega$ 5 % 1/4 W	01121	CB1005
R124	0757-0178		R: fxd flm 100 $\Omega$ 1 % 1/4 W	14674	C5 T-0
R125	0683-8215		R: fxd comp 820 $\Omega$ 5 % 1/4 W	01121	CB8215
R126	0683-1025	9	R: fxd comp 1000 $\Omega$ 5 % 1/4 W	01121	CB1025
R127	0683-3915	1	R: fxd comp 390 $\Omega$ 5 % 1/4 W	01121	CB3915
R128, R129	0683-1005		R: fxd comp 10 $\Omega$ 5 % 1/4 W	01121	CB1005
R130, R131			Not assigned		
R132	0698-7487	1	R: fxd flm 1.64 k $\Omega$ 0.5 % 1/4 W	91637	MFF-1/8-32 T-2
R133, R134	0683-4705	4	R: fxd comp 47 $\Omega$ 5 % 1/4 W	01121	CB4705
R135	0683-1535	1	R: fxd comp 15 k $\Omega$ 5 % 1/4 W	01121	CB1535
R136	0683-3315	2	R: fxd comp 330 $\Omega$ 5 % 1/4 W	01121	CB3315
R137	0683-5125	3	R: fxd comp 5100 $\Omega$ 5 % 1/4 W	01121	CB5125
R138	0683-1835	1	R: fxd comp 18 k $\Omega$ 5 % 1/4 W	01121	CB1835
R139	0683-2025	2	R: fxd comp 2000 $\Omega$ 5 % 1/4 W	01121	CB2025
R140	0698-3228	1	R: fxd flm 49.9 k $\Omega$ 1 % 1/8 W	14674	C4 T-0
R141, R142			Not assigned		
R143	0698-7316	1	R: fxd met flm 20 M $\Omega$ 0.5 % 1/2 W	91637	EMF-70-17
R144	0698-7317	1	R: fxd met flm 2 M $\Omega$ 0.5 % 1/2 W	00327	M12D
R145	0698-6090	1	R: fxd flm 199.8 k $\Omega$ 0.1 % 1/8 W	91637	MF-1/10-32 T-2
R146	0698-7313	1	R: fxd flm 19.8 k $\Omega$ 0.1 % 1/8 W	75042	CEA T-2
R147	0698-7486	1	R: fxd flm 1.78 k $\Omega$ .25 % 1/8 W	91637	MF-1/10-32 T-2
R148	0757-0462	2	R: fxd flm 75 k $\Omega$ 1 % 1/8 W	91637	CMF-1/10-32 T-1
R149	0683-1025		R: fxd comp 1000 $\Omega$ 5 % 1/4 W	01121	CB1025
R150	0757-0123	1	R: fxd flm 34.8 k $\Omega$ 1 % 1/8 W	91637	CMF-1/10-32 T-1
R151	0683-1025		R: fxd comp 1000 $\Omega$ 5 % 1/4 W	01121	CB1025
R152	0757-0462		R: fxd flm 75 k $\Omega$ 1 % 1/8 W	91637	CMF-1/10-32 T-1
R153	0683-1035		R: fxd comp 10 k $\Omega$ 5 % 1/4 W	01121	CB1035
R154	0757-0410		R: fxd flm 301 $\Omega$ 1 % 1/8 W	91637	MF-1/10-32 T-1
R155			Not assigned		
R156	0757-0410		R: fxd flm 301 $\Omega$ 1 % 1/8 W	91637	MF-1/10-32 T-1
R157	0683-6225	1	R: fxd comp 6200 $\Omega$ 5 % 1/4 W	01121	CB6225
R158 thru R161			Not assigned		
R162	2100-1984	1	R: var 100 $\Omega$ 10 % 1/2 W	73138	62-203-1
R163 thru R168	0684-0271	6	R: fxd comp 2.7 $\Omega$ 10 % 1/4 W	01121	CB27G1
	1205-0037	8	Heat dissipator	98978	TXBF-019-025B
S2	03310-61901	1	Switch assembly: range		
	3100-2701	1	Includes A1R43 thru A1R47 Switch: rotary	-hp- 81840	obd

Table 6-1. Replaceable Parts (Cont'd)

REFERENCE DESIGNATOR	-hp- PART NO.	TQ	DESCRIPTION	MFR.	MFR. PART NO.
<b>A2</b>	<b>03310-66502</b>	<b>1</b>	<b>P.C. Board Ass'y: Control</b>	<b>-hp-</b>	
C1*	0150-0046	1	C: fxd $\text{TiO}_2$ .68 pF 5 % 500 vdcw	78488	Type GA obd
C2*	0140-0205	1	C: fxd mica 62 pF 5 %	72136	obd
C3	0121-0430	1	C: var 1.4 pF - 9.2 pF	74970	189-0503-105
C4	0150-0042	1	C: fxd $\text{TiO}_2$ 4.7 pF 5 % 500 vdcw	78488	Type GA obd
C5	0140-0202	1	C: fxd mica 15 pF 5 %	14655	obd
C6*	0150-0055	1	C: fxd $\text{TiO}_2$ 10 pF 5 % 500 vdcw	78488	Type GA obd
C7, C8	0180-0058	2	C: fxd 50 $\mu\text{F}$ + 75 % - 10 % 25 vdcw	56289	30D506G025CC2-DSM
C9, C10	0180-0197	2	C: fxd Solid Ta 2.2 $\mu\text{F}$ 10 % 20 vdcw	05397	T110A225K020AS
L1	9140-0179	1	Coil: molded choke 22 $\mu\text{F}$ 10 %	82142	15-4445-7J
Q1, Q2	5080-4668	2	Transistor: aged	-hp-	
Q3	1853-0034	1	TSTR: Si PNP 2N3634	04713	SM3197
Q4	1854-0053	1	TSTR: Si NPN 2N2218	56289	2N2218
R1	1698-7315	1	R: fxd flm 4.25 k $\Omega$ .1 % 1/4 W	91637	MFF-1/8-32 T-9
R2	0698-7326	1	R: fxd met flm 2.167 k $\Omega$ .1 % 1/2 W	91637	MFF-1/2-15 T-9
R3	0698-7318	1	R: fxd flm 14.45 k $\Omega$ .25 % 1/8 W	75042	CEA T-2 obd
R4	0698-7314	1	R: fxd flm 8.5 k $\Omega$ .1 % 1/4 W	91637	MFF-1/8-32 T-9
R5	0698-7325	1	R: fxd met flm 2.535 k $\Omega$ .25 % 1/2 W	91637	MFF-1/2-15 T-9
R6	2100-2520	1	R: var cer flm 50 $\Omega$ 20 %	73138	62-220-1
R7			Not assigned		
R8	0683-5105	3	R: fxd comp 51 $\Omega$ 5 % 1/4 W	01121	CB5105
R9*	0698-0082	1	R: fxd flm 464 $\Omega$ 1 % 1/8 W	14674	C4 T-0 obd
R10	0757-0407	1	R: fxd flm 200 $\Omega$ 1 % 1/8 W	14674	C4 T-0 obd
R11	0757-0283	2	R: fxd flm 2 k $\Omega$ 1 % 1/8 W	14674	C4 T-0 obd
R12	0698-4426	2	R: fxd flm 1.58 k $\Omega$ 1 % 1/8 W	14674	C4 T-0 obd
R13	0698-3226	1	R: fxd flm 6.49 k $\Omega$ 1 % 1/8 W	91637	CMF-1/10-32 T-1
R14	0757-0280	1	R: fxd flm 1 k $\Omega$ 1 % 1/8 W	14674	C4 T-0 obd
R15	0698-3153	2	R: fxd flm 3.83 k $\Omega$ 1 % 1/8 W	14674	C4 T-0 obd
R16	0757-0280	1	R: fxd flm 1 k $\Omega$ 1 % 1/8 W	14674	C4 T-0 obd
R17	0698-3207	1	R: fxd flm 499 $\Omega$ 1 % 1/4 W	14674	C5 T-0 obd
R18*	0757-0278	1	R: fxd flm 1.78 k $\Omega$ 1 % 1/8 W	14674	C4 T-0 obd
R19			Not assigned		
R20	2100-0024	1	R: var comp 1 k $\Omega$ 10 % 2.25 W	12697	380 obd
R21	0683-1205	1	R: fxd comp 12 $\Omega$ 5 % 1/4 W	01121	CB1205
R22	0757-0465	1	R: fxd flm 100 k $\Omega$ 1 % 1/8 W	14674	C4 T-0 obd
R23	2100-2514	1	R: var cer flm 20 k $\Omega$ 10 % 1/2 W	73138	62-288-1
S3	3100-2702	1	Switch: rotary	81840	obd
	03310-00602	1	Bracket: switch and level	-hp-	
	1251-1633	1	Connector P.C.: 15 pin	71785	252-15-30-310
	1251-1634	1	Connector P.C.: 18 pin	71785	252-18-30-310
<b>A3</b>	<b>03310-66513</b>	<b>1</b>	<b>P.C. Board Ass'y: Amplifier</b>	<b>-hp-</b>	
C1, C2	0150-0121	2	C: fxd cer 0.1 $\mu\text{F}$ + 80 % - 20 % 50 vdcw	56289	5C50B1-CM1
C3, C4			Not assigned		
C5, C6	0180-2050	2	C: fxd Ta 0.082 $\mu\text{F}$ 10 % 35 vdcw	56289	150C823X9035A2-DYS

Table 6-1. Replaceable Parts (Cont'd)

REFERENCE DESIGNATOR	-hp- PART NO.	TQ	DESCRIPTION	MFR.	MFR. PART NO.
A3 (cont'd)					
C7 thru C9 C10	0150-0093 0150-0069	2	C: fxd cer 0.01 $\mu$ F + 80 % - 20 % 100 vdcw C: fxd cer 0.001 $\mu$ F +100 % - 20 % 500 vdcw	91418 72982	TA 801-010X5G0102Z obd
C11 C12 C13 C14 C15	0180-0376 0150-0069 0180-0376  0150-0093	2    2	C: fxd Ta 0.47 $\mu$ F 10 % 35 vdcw C: fxd cer 0.001 $\mu$ F + 100 % - 20 % 500 vdcw C: fxd Ta 0.47 $\mu$ F 10 % 35 vdcw Not assigned C: fxd cer 0.01 $\mu$ F + 80 % - 20 % 100 vdcw	56289 72982 56289  91418	150D474X9035A2-DYS 801-010X5G0102Z 150D474X9035A2-DYS  TA obd
C16, C17 C18, C19 C20 C21 C22	 0180-0291 0180-0049 0160-2197 0180-0049	  2 3  3	Not assigned C: fxd Ta 1.0 $\mu$ F 10% 35 vdcw C: fxd Al elect 20 $\mu$ F + 75 % - 20 % 50 vdcw C: fxd mica 10 pF 5 % C: fxd Al elect 20 $\mu$ F +75 % - 20 % 50 vdcw	 56289 56289 -hp- 56289	 150D105X9035A2-DYS 30D206G050662-DSM  30D206G050CC2-DSM
C23 C24 C25 C26* C27, C28	0160-2197 0160-0159 0160-0301 0160-2197 0180-0291	 1 1   1	C: fxd mica 10 pF 5 % C: fxd my 0.0068 $\mu$ F 10 % 200 vdcw C: fxd my 0.012 $\mu$ F 10 % 200 vdcw C: fxd mica 10 pF 5 % C: fxd Ta 1.0 $\mu$ F 10 % 35 vdcw	72136 56289 56289 72136 56289	obd 192P68292-PTS 192P12392-PTS obd 150D105X9035A2-DYS
CR1 thru CR14 CR15 thru CR20 CR21 CR22 CR23	1901-0040 1901-0025 1901-0527  1901-0527	  2  2	Diode: Si 30 wiv 2 pF 50 mA 2 ns Diode: Si 100 wiv 12 pF 100 mA Diode: current regulator Not assigned Diode: current regulator	07263 07263 04713  04713	FDG1088 FD2387 SCL040  SCL040
CR24 CR25 CR26 CR27 CR28	 1901-0025 1902-0786  1902-0681	 1 1  1	Not assigned Diode: Si 100 wiv 12 pF 100 mA Diode: T.C. Reference 9 V 5 % 500 mW Not assigned Diode: breakdown 9.09 V 10 %	 07263 04713  04713	 FD2387 1N937  obd
CR29 thru CR31	1901-0050	3	Diode: Si 100 V 200 mA	07263	FDH6308
IC1	1820-0203		Integrated Circuit: MA741C Amp.	07263	SL8940
Q1 Q2 Q3 Q4 Q5	1854-0071 1853-0020 1854-0071 1853-0020 1854-0071	3	TSTR: Si NPN** TSTR: Si PNP** TSTR: Si NPN** TSTR: Si PNP** TSTR: Si NPN**	01295 01295 01295 01295 01295	SKA1124 SKA1123 SKA1124 SKA1123 SKA1124
Q6 Q7, Q8 Q9 Q10 Q11	1853-0020  1853-0015 1853-0007 1854-0351	  1 1 1	TSTR: Si PNP** Not assigned TSTR: Si PNP 2N3640 TSTR: PNP JEDEC type 2N3251 TSTR: Si NPN**	01295  07263 04713 04713	SKA1123  S33030 obd SS2076
Q12 Q13 Q14 Q15, Q16 Q17	1854-0009 1854-0215 1853-0042  1854-0402	1  1  2	TSTR: Si NPN 2N709 TSTR: Si NPN TSTR: Si PNP** Not assigned TSTR: Si NPN TIP-29	07263 04713 04713  01295	obd SPS3611 SPS4653  SP-8438
Q18, Q19 Q20 Q21 Q22 thru Q24 Q25	1854-0215 1854-0087 1853-0233 1853-0036 1853-0233	  2  2	TSTR: Si NPN 2N3904 TSTR: Si NPN** GE 2N3417 TSTR: Si PNP TIP-32 TSTR: Si PNP 2N3906 TSTR: Si PNP TIP-32	04713 56289 01295 04713 01295	SPS3611 TZ-1226 SP8442 SPS-3612 SP8442
Q26 thru Q28 Q29 Q30 Q31 thru Q35	1853-0036 1854-0475 1854-0402 1854-0215	 1  1	TSTR: Si PNP 2N3906 TSTR: Si NPN dual** TSTR: Si NPN TIP-29 TSTR: Si NPN 2N3904	04713 32293 01295 04713	SPS3612 ITS 1068 SP-8438 SPS3611

Table 6-1. Replaceable Parts (Cont'd)

REFERENCE DESIGNATOR	-hp- PART NO.	TQ	DESCRIPTION	MFR.	MFR. PART NO.
<b>A3 (cont'd)</b>					
R1			Not assigned		
R2	0698-4470	2	R: fxd flm 6.98 k $\Omega$ 1 % 1/8 W	91637	CMF-1/10-32 T-1
R3	0698-3492	2	R: fxd flm 2.67 k $\Omega$ 1 % 1/8 W	75042	CEA T-0
R4	2100-1788	3	R: var 500 $\Omega$ 10 % 1/2 W	73138	62-205-1
R5	0683-5125		R: fxd comp 5100 $\Omega$ 5 % 1/4 W	01121	CB5125
R6	0683-1825	2	R: fxd comp 1800 $\Omega$ 5 % 1/4 W	01121	CB1825
R7	0683-5115	4	R: fxd comp 510 $\Omega$ 5 % 1/4 W	01121	CB-5115
R8	0683-3905	2	R: fxd comp 39 $\Omega$ 5 % 1/4 W	01121	CB3905
R9	0683-1215	1	R: fxd comp 120 $\Omega$ 5 % 1/4 W	01121	CB1215
R10	0683-3905		R: fxd comp 39 $\Omega$ 5 % 1/4 W	01121	CB3905
R11	0683-3005		R: fxd comp 30 $\Omega$ 5 % 1/4 W	01121	CB3005
R12	0683-3315		R: fxd comp 330 $\Omega$ 5 % 1/4 W	01121	CB3315
R13	0683-3005		R: fxd comp 30 $\Omega$ 5 % 1/4 W	01121	CB3005
R14	0683-4705		R: fxd comp 47 $\Omega$ 5 % 1/4 W	01121	CB4705
R15	0683-4715	2	R: fxd comp 470 $\Omega$ 5 % 1/4 W	01121	CB4715
R16	0683-4705		R: fxd comp 47 $\Omega$ 5 % 1/4 W	01121	CB4705
R17	0683-8205		R: fxd comp 82 $\Omega$ 5 % 1/4 W	01121	CB8205
R18	0683-1025		R: fxd comp 1000 $\Omega$ 5 % 1/4 W	01121	CB1025
R19	0683-8205		R: fxd comp 82 $\Omega$ 5 % 1/4 W	01121	CB8205
R20	0683-3305		R: fxd comp 33 $\Omega$ 5 % 1/4 W	01121	CB3305
R21	0683-2025		R: fxd comp 2000 $\Omega$ 5 % 1/4 W	01121	CB2025
R22	0683-3305		R: fxd comp 33 $\Omega$ 5 % 1/4 W	01121	CB3305
R23, R24	0683-1015		R: fxd comp 100 $\Omega$ 5 % 1/4 W	01121	CB1015
R25	0698-4470		R: fxd flm 6.98 k $\Omega$ 1 % 1/8 W	91637	CMF-1/10-32 T-1
R26	0698-3492		R: fxd flm 2.67 k $\Omega$ 1 % 1/8 W	75042	CEA T-0
R27	2100-1788		R: var 500 $\Omega$ 10 % 1/2 W Type H	73138	62-205-1
R28	0683-5125		R: fxd comp 5100 $\Omega$ 5 % 1/4 W	01121	CB5125
R29	0683-1825		R: fxd comp 1800 $\Omega$ 5 % 1/4 W	01121	CB1825
R30	0683-5115		R: fxd comp 510 $\Omega$ 5 % 1/4 W	01121	CB5115
R31	0757-0280		R: fxd flm 1000 $\Omega$ 1 % 1/8 W	75042	CEA T-0
R32*	0692-3382	1	R: fxd flm 5.49 k $\Omega$ 1 % 1/8 W	75042	CEA T-0
R33	0683-1025		R: fxd comp 1000 $\Omega$ 5 % 1/4 W	01121	CB1025
R34, R35			Not assigned		
R36	0757-0427	1	R: fxd flm 1.5 k $\Omega$ 1 % 1/8 W	75042	CEA T-0
R37 thru R39			Not assigned		
R40	0683-9105	2	R: fxd comp 91 $\Omega$ 5 % 1/4 W	01121	CB9105
R41	0698-4469	2	R: fxd flm 1.15 k $\Omega$ 1 % 1/8 W	75042	CEA T-0
R42	0698-4307	1	R: fxd flm 14.3 k $\Omega$ 1 % 1/8 W	75042	CEA T-0
R43	0698-4421	2	R: fxd flm 249 $\Omega$ 1 % 1/8 W	75042	CEA T-0
R44	0683-5105		R: fxd comp 51 $\Omega$ 5 % 1/4 W	01121	CB5105
R45	0698-0063	2	R: fxd flm 5.23 k $\Omega$ 1 % 1/8 W	75042	CEA T-0
R46	0698-3499	1	R: fxd flm 40.2 k $\Omega$ 1 % 1/8 W	75042	CEA T-0
R47	0683-2005	2	R: fxd comp 20 $\Omega$ 5 % 1/4 W	01121	CB2005
R48	0698-0063		R: fxd flm 5.23 k $\Omega$ 1 % 1/8 W	75042	CEA T-0
R49	0683-2005		R: fxd comp 20 $\Omega$ 5 % 1/4 W	01121	CB2005
R50	0683-9105		R: fxd comp 91 $\Omega$ 5 % 1/4 W	01121	CB9105
R51	0698-4469		R: fxd flm 1.15 k $\Omega$ 1 % 1/8 W	91637	CMF-1/10-32 T-0
R52	0683-5105		R: fxd comp 51 $\Omega$ 5 % 1/4 W	01121	CB5105
R53	0757-0415	1	R: fxd flm 475 $\Omega$ 1 % 1/8 W	91637	CMF-1/10-32 T-1
R54 thru R59			Not assigned		
R60, R61	0683-3305		R: fxd comp 33 $\Omega$ 5 % 1/4 W	01121	CB3305
R62	0698-3613	3	R: fxd met oxide 39 $\Omega$ 5 % 2 W	14674	C42S
R63, R64	0698-4059	2	R: fxd comp 5.6 $\Omega$ 10 % 1/2 W	01121	EB56G1
R65	0698-3613		R: fxd met oxide 39 $\Omega$ 5 % 2 W	14674	C42S
R66	0698-3613		R: fxd met oxide 39 $\Omega$ 5 % 2 W	14674	C42S
R67, R68	0683-3305		R: fxd comp 33 $\Omega$ 5 % 1/4 W	01121	CB3305
R69*	0698-4445	1	R: fxd flm 5.76 k $\Omega$ 1 % 1/8 W	91637	CMF-1/10-32 T-1
R70			Not assigned		
R71	0686-0275	2	R: fxd comp 2.7 $\Omega$ 5 % 1/2 W	01121	EB27G5
R72	0683-6205	2	R: fxd comp 62 $\Omega$ 5 % 1/4 W	01121	CB6205

Table 6-1. Replaceable Parts (Cont'd)

REFERENCE DESIGNATOR	-hp- PART NO.	TQ	DESCRIPTION	MFR.	MFR. PART NO.
<b>A3 (cont'd)</b>					
R73	0683-2435	4	R: fxd comp 24 k $\Omega$ 5 % 1/4 W	01121	CB2435
R74	0698-4485	2	R: fxd flm 23.2 k $\Omega$ 1 % 1/8 W	91637	CMF-1/10-32 T-1
R75	0757-0442	2	R: fxd flm 10 k $\Omega$ 1 % 1/8 W	91637	CMF-1/10-32 T-1
R76	0686-0275		R: fxd comp 2.7 $\Omega$ 5 % 1/2 W	01121	EB27G5
R77	0683-6205		R: fxd comp 62 $\Omega$ 5 % 1/4 W	01121	CB6205
R78	0683-2435		R: fxd comp 24 k $\Omega$ 5 % 1/4 W	01121	CB2435
R79	0698-4485		R: fxd flm 23.2 k $\Omega$ 1 % 1/8 W	91637	CMF-1/10-32 T-1
R80	0757-0442		R: fxd flm 10 k $\Omega$ 1 % 1/8 W	91637	CMF-1/10-32 T-1
R81, R82	0683-0335	4	R: fxd comp 3.3 $\Omega$ 5 % 1/4 W	01121	CB33G5
R83	0683-5115		R: fxd comp 510 $\Omega$ 5 % 1/4 W	01121	CB5115
R84	0683-2435		R: fxd comp 24 k $\Omega$ 5 % 1/4 W	01121	CB2435
R85	0683-4735	2	R: fxd comp 47 k $\Omega$ 5 % 1/4 W	01121	CB4735
R86	0683-1225	2	R: fxd comp 1200 $\Omega$ 5 % 1/4 W	01121	CB1225
R87			Not assigned		
R88	0698-4502	1	R: fxd flm 64.9 k $\Omega$ 1 % 1/8 W	91637	CMF-1/10-32 T-1
R89	0698-4497	1	R: fxd flm 48.7 k $\Omega$ 1 % 1/8 W	91637	CMF-1/10-32 T-1
R90, R91	0698-6348	2	R: fxd flm 3 k $\Omega$ 0.1 % 1/8 W	91637	MF-1/10-32
R92, R93	0683-0335		R: fxd 3.3 $\Omega$ 5 % 1/4 W	01121	CB33G5
R94	0683-5115		R: fxd comp 510 $\Omega$ 5 % 1/4 W	01121	CB5115
R95	0683-2435		R: fxd comp 24 k $\Omega$ 5 % 1/4 W	01121	C42435
R96	0683-4735		R: fxd comp 47 k $\Omega$ 5 % 1/4 W	01121	CB4735
R97	0683-1225		R: fxd flm comp 1200 $\Omega$ 5 % 1/4 W	01121	CB1225
R98	0698-0084	2	R: fxd flm 2.15 k $\Omega$ 1 % 1/8 W	91637	CMF-1/10-32 T-1
R99	0698-4489	1	R: fxd flm 28.0 k $\Omega$ 1 % 1/8 W	91637	CMF-1/10-32 T-1
R100	0757-0454	1	R: fxd flm 33.2 k $\Omega$ 1 % 1/8 W	91637	CMF-1/10-32 T-1
R101	2100-1788		R: var 500 $\Omega$ 10 % 1/2 W Type H	73138	62-205-1
R102	0698-4420	1	R: fxd flm 226 $\Omega$ 1 % 1/8 W	91637	CMF-1/10-32 T-1
R103	0698-3153		R: fxd flm 3.83 k $\Omega$ 1 % 1/8 W	91637	CMF-1/10-32 T-1
R104, R105	0584-1031	2	R: fxd 10 k $\Omega$ 10 % 1/4 W	01121	CB1031
	1205-0037		Heat dissipator for semiconductor TO18	98978	TXBF-019-025B
	03310-21101	1	Heat dissipator	-hp-	
	0340-0473	4	Insulator: transistor	13103	obd
<b>A4 (3310A only)</b>	<b>03310-66504</b>	<b>1</b>	<b>P.C. Board Ass'y: Power Supply</b>	<b>-hp-</b>	
C1, C2	0180-1956	4	C: fxd 500 $\mu$ F + 75 % - 10 % 50 vdcw	56289	39D507G050GL4-DSB
C3, C4	0180-1985	4	C: fxd 500 $\mu$ F + 70 % - 10 % 30 vdcw	56389	39D507G030FL4-DSB
CR1 thru CR8	1901-0148	16	Diode: Si 200 piv 0.75 A	04713	SR1358-3
	1251-1941	1	Connector P.C.: 6 pin	76531	252-06-30-310

Table 6-1. Replaceable Parts (Cont'd)

REFERENCE DESIGNATOR	-hp- PART NO.	TQ	DESCRIPTION	MFR.	MFR. PART NO.
<b>A5 (3310B only)</b>	<b>03310-66505</b>	<b>1</b>	<b>P.C. Ass'y: Tone Burst</b>	<b>-hp-</b>	
C1, C2	0180-1956		C: fxd 500 $\mu$ F + 75 % - 10 % 50 vdcw	56289	39D507G050GL4-DSB
C3, C4	0180-1985		C: fxd 500 $\mu$ F + 75 % - 10 % 30 vdcw	56289	39D507G030FL4-DSB
C5			Not assigned		
C6	0160-2207	1	C: fxd mica 300 pF 5 %	14655	obd
C7	0150-0084	2	C: fxd .1 $\mu$ F + 80 % - 20 % 100 vdcw	72982	8131-100-651-104Z
C8	0160-2198	1	C: fxd 20 pF 5 %	72136	obd
C9	0150-0084		C: fxd .1 $\mu$ F + 80 % - 20 % 100 vdcw	72982	8131-100-651-104Z
CR1 thru CR8	1901-0158		Diode: Si 200 piv	04713	SR1358-3
CR9 thru CR11	1901-0518		Diode: hot carrier	-hp-	
CR12 thru CR18	1901-0040		Diode: Si	07263	FDG1088
CR19	1902-0041	1	Diode: breakdown 5.11 V 5 %	04713	SZ10939-98
IC1	1820-0304	1	Integrated Circuit	01295	SN4464
K1	0490-0997	1	Reed relay RA 30191051	15636	obd
Q1, Q2	1854-0354	7	TSTR: Si NPN	04713	SS2077
Q3	1854-0071		TSTR: Si NPN	01295	SKA1124
Q4	1853-0018	1	TSTR: Si PNP	04713	SF5100
Q5	1854-0354		TSTR: Si NPN	04713	SS2077
Q6	1853-0034		TSTR: Si PNP	04713	SM3197
Q7 thru Q10	1854-0354		TSTR: Si NPN	04713	SS2077
R1	0683-1005		R: fxd comp 10 $\Omega$ 5 % 1/4 W	01121	CB1005
R2	0698-4456	1	R: fxd flm 549 $\Omega$ 1 % 1/8 W	91637	CMF-1/10-32 T-0
R3	0698-3495	2	R: fxd flm 866 $\Omega$ 1 % 1/8 W	91637	CMF-1/10-32 T-1
R4	2100-1986	1	R: var 1 k $\Omega$ 10 % 1/2 W	73138	62-206-1
R5	0698-4123		R: fxd flm 499 $\Omega$ 1 % 1/8 W	91637	CMF-1/10-32 T-1
R6	0757-0280		R: fxd flm 1 k $\Omega$ 1 % 1/8 W	91637	CMF-1/10-32 T-1
R7	0698-4435	2	R: fxd flm 2.49 k $\Omega$ 1 % 1/8 W	91637	obd
R8	2100-2216	1	R: var 5 k $\Omega$ 10 % 1/2 W	73138	62-208-1
R9	0698-4435		R: fxd flm 2.49 k $\Omega$ 1 % 1/8 W	91637	obd
R10	0698-3495		R: fxd flm 866 $\Omega$ 1 % 1/8 W	91637	CMF-1/10-32 T-1
R11	0757-0440	1	R: fxd flm 7.5 k $\Omega$ 1 % 1/8 W	91637	CMF-1/10-32 T-1
R12	0698-0084		R: fxd flm 2.15 k $\Omega$ 1 % 1/8 W	91637	CMF-1/10-32 T-1
R13, R14	0683-2205	2	R: fxd comp 22 $\Omega$ 5 % 1/4 W	01121	CB2205
R15	0757-0283		R: fxd flm 2 k $\Omega$ 1 % 1/8 W	91637	CMF-1/10-32 T-1
R16	0757-0273	1	R: fxd flm 3.01 k $\Omega$ 1 % 1/8 W	91637	CMF-1/10-32 T-1
R17	0683-1035		R: fxd comp 10 k $\Omega$ 5 % 1/4 W	01121	CB1035
R18	0683-4715		R: fxd comp 470 $\Omega$ 5 % 1/4 W	01121	CB4715
R19	0683-1025		R: fxd comp 1000 $\Omega$ 5 % 1/4 W	01121	CB1025
R20	0698-4421		R: fxd flm 249 $\Omega$ 1 % 1/8 W	91637	CMF-1/10-32 T-1
R21 thru R23	0683-1025		R: fxd comp 1000 $\Omega$ 5 % 1/4 W	01121	CB1025
	1251-1941		Connector: P.C. 6 pin	71785	252-06-30-310
<b>A6</b>	<b>03310-61902</b>	<b>1</b>	<b>Switch Ass'y: D.C. Offset (consists of R2 and S4)</b>	<b>-hp-</b>	
R2	2100-2840	1	R: var 1000 $\Omega$ 20 %	01121	Type JJS
S4	3100-2703	1	Switch: rotary	81840	obd

Table 6-1. Replaceable Parts (Cont'd)

REFERENCE DESIGNATOR	-hp- PART NO.	TQ	DESCRIPTION	MFR.	MFR. PART NO.
<b>CHASSIS MOUNTED COMPONENTS</b>					
C5	0160-0958	1	C: fxd 390 pF (3310B only)	14655	obd
CR1, CR2	1902-1200	2	Diode: zener 16 V	04713	IN2980B
DS1	2140-0015	1	Lamp: neon	01002	Selected NE-2H
F1	2110-0044	1	Fuse: .30 A s-b	71400	MDL 3/10
F1	2110-0320	1	Fuse: .15 A s-b	71400	MDL 15/100
J1, J2	1250-0083	5	Connector R.F.: BNC	77068	30624-1
J3	1250-0118	1	Connector R.F.: BNC	77068	30384-1
J4	1250-0083		Connector R.F.: BNC	77068	30624-1
J5	1251-2357	1	Connector: AC power	82389	EAC-301
J6, J7	1250-0083		Connector: BNC (3310B only)	77068	30624-1
Q1	1854-0254	1	TSTR: Si NPN	04713	SS-2065
Q2	1853-0012		TSTR: Si PNP	04713	2N2904A
R1	2100-2833	1	R: var lintaper, 1000 $\Omega$ 10 % 3/4 W	73138	Type 3351
R2, R3			Not assigned		
R4	0683-3335		R: fxd comp 33 k $\Omega$ 5 % 1/4 W	01121	CB3335
R5	0698-4426		R: fxd flm 1.58 k $\Omega$ 1 % 1/8 W	91637	CMF-1/10-32 T-1
R6	0757-0384	1	R: fxd flm 51.1 $\Omega$ 1 % 1/8 W	91637	CMF-1/10-32 T-1
R7	0683-0825	1	R: fxd comp 8.2 $\Omega$ 5 % 1/4 W	01121	CB82G5
R8	2100-3129	1	R: var, START/STOP PHASE 1 k $\Omega$ (3310B only)	01121	obd
S1	3101-0036	1	Switch: toggle spst	88140	8928K61
S2 thru S4			Not assigned		
S5	3101-1234	1	Switch: DPST non-shorting	82389	11A-1242A
S6	3101-0063	1	Switch: push-button, normally open (3310B only)	81073	30-1
T1	9100-1459	1	Transformer: power	-hp-	
W1	8120-1348	1	Cord: power, black 7.5 ft long	70793	KHS-7041
<b>MISCELLANEOUS</b>					
	1400-0084	1	Holder: fuse	75915	342014
	1500-0231	1	Vernier drive	-hp-	
	03310-60605	1	Vernier drive plate ass'y	-hp-	
	1410-0942	1	Bushing: threaded vernier drive	OOLAJ	obd
	0590-0052	6	Nuts: sheet metal clip	78553	C-8020-632-243
	7120-1254	1	Plate: identification	16758	obd
	03310-00203	1	Panel: rear (3310A only)	-hp-	
	03310-00206	1	Panel: front (3310B only)	-hp-	
	1410-0943	1	Bushing: threaded range switch	OOLAJ	obd
	03310-00604	1	Bracket: A1 assembly support	-hp-	

Table 6-1. Replaceable Parts (Cont'd)

REFERENCE DESIGNATOR	-hp- PART NO.	TQ	DESCRIPTION	MFR.	MFR. PART NO.
<b>MISCELLANEOUS (cont'd)</b>					
	5020-0233	1	Collar: frequency dial stop	-hp-	
	5040-0234	1	Lampholder (for DS1)	-hp-	
	5040-0235	1	Base: lampholder (for DS1)	-hp-	
	03310-90002	1	Manual: Operating and Service	-hp-	
	03310-24701	1	Spacer: (P.C. board)	-hp-	
	03310-61601	1	Cable Assembly: SYNC (3310A only)	-hp-	
	7120-1364	1	Plate: serial	91345	obd
	03310-61602	1	Cable: ext gate	-hp-	
	03310-61603	1	Cable: power to tone burst (3310B only)	-hp-	
	03310-00603	1	Bracket: Attenuator (held in place by J3 hardware)	-hp-	
	0340-0038	1	Post: terminal (on attenuator bracket)	98291	X-L-041762-10
	1205-0205	1	Heat dissipator: semiconductor	13103	1116A-5
	0362-0227	1	Push on connector (for Q1 and Q2 leads)	27264	2125
<b>MECHANICAL PARTS</b>					
MP1	5060-5922	1	Cover ass'y: top	-hp-	
MP2	03310-60201	1	Panel ass'y: rear (3310A only; includes J5 and S5)	-hp-	
MP2	03310-60202	1	Panel ass'y: rear (3310B only; includes J5 and S5)	-hp-	
MP3	5060-0238	2	Frame ass'y: side	-hp-	
MP4	5000-0150	2	Cover: side	-hp-	
MP5	5060-0728	2	Foot ass'y: half mod	-hp-	
MP6	5000-0716	1	Cover: bottom	-hp-	
MP7	5040-0700	2	Hinge: tilt stand (locking)	-hp-	
MP8	1490-0032	1	Stand: half module tilt	91260	obd
MP9	0370-0133	1	Knob: 5/8 in. output level	-hp-	
MP10	0370-0077	2	Knob: 5/8 in. RANGE and FUNCTION	-hp-	
MP11	0370-0099	1	Knob: 5/8 in. bar D.C. OFFSET	-hp-	
MP12	0370-0843	2	Knob: 1/2 in. gray D.C. OFFSET (vervier)	-hp-	
MP13	0370-0178	1	Knob: 1/2 in. frequency vernier	-hp-	
MP14	03310-64001	1	Dial ass'y: frequency (includes MP15)	-hp-	
MP15	0370-0030	1	Knob: frequency dial	-hp-	
MP16	03310-00201	1	Panel: front (3310A only)	-hp-	
MP17	5000-5838	2	Bracket: cover	-hp-	
MP18	03310-00611	2	Bar: heat sink (for zener diodes)	-hp-	
MP19	0370-0843	1	Knob: 1/2 gray, START/STOP PHASE (3310B only)	-hp-	
MP20	3101-0063	1	Switch: pushbutton MANUAL TRIGGER (3310B only)	-hp-	
MP21	3050-0014	1	Washer: flat (3310B only)	78471	obd
MP22	2950-0072	1	Nut: hexagonal (3310B only)	82389	obd



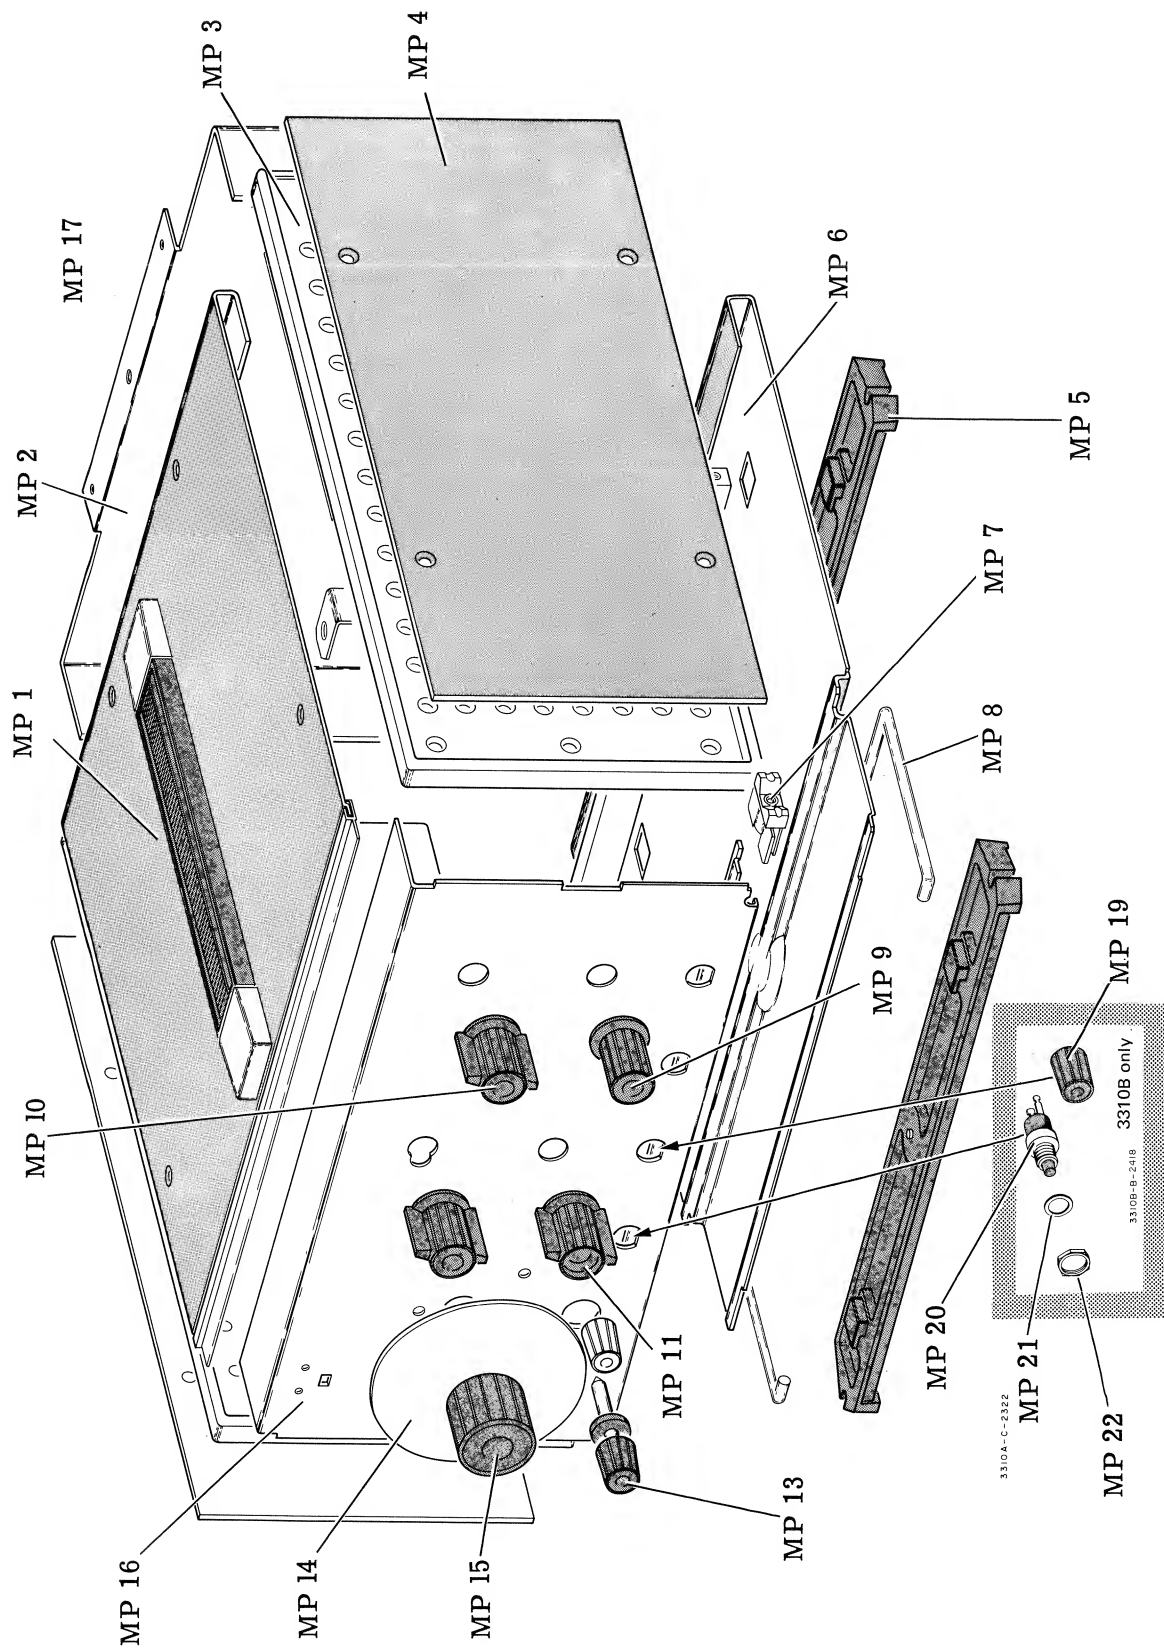


Figure 6-1. 3310A/B Mechanical Parts.



## SECTION VII

### CIRCUIT DIAGRAMS

#### 7-1. INTRODUCTION.

7-2. This section contains the Functional Block Diagram and the Detailed Schematic Diagrams for the Model 3310A/B.

#### 7-3. FUNCTIONAL BLOCK DIAGRAM.

7-4. The Functional Block Diagram is a block diagram of the entire instrument, which also shows variable components used in the Adjustment and Calibration Procedure and important test points.


#### 7-5. SCHEMATIC DIAGRAMS.

7-6. Figures 7-2 through 7-7 are detailed schematic diagrams of the circuits in the 3310A/B. The dc voltage levels or waveforms shown on the diagrams are subject to any conditions stated in the NOTES on that diagram. Figure 7-8 is a wiring diagram of the 3310A only.

#### 7-7. COMPONENT LOCATION DIAGRAMS.

7-8. Included with each schematic diagram is a component location diagram to assist in the location of components on the assembly. Each component is identified by the reference designator used on the schematic diagram and in the replaceable parts list.

 


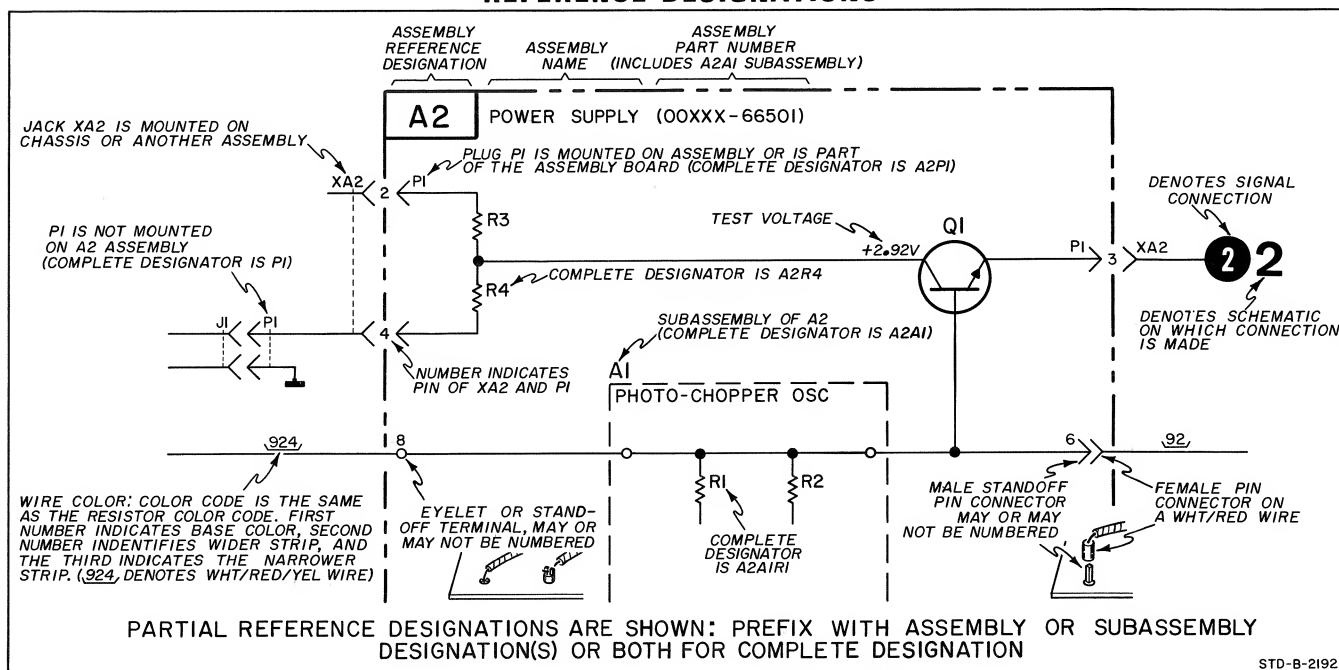









### REFERENCE DESIGNATIONS





## SCHEMATIC NOTES

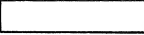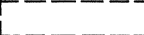1. PARTIAL REFERENCE DESIGNATIONS ARE SHOWN. USE ASSEMBLY PREFIX DESIGNATION WITH REFERENCE DESIGNATION FOR COMPLETE REFERENCE DESIGNATION.
2. COMPONENT VALUES ARE SHOWN AS FOLLOWS UNLESS OTHERWISE NOTED:

RESISTANCE IN OHMS  
CAPACITANCE IN MICROFARADS

3.  DENOTES POWER LINE GROUND.
4.  DENOTES CHASSIS GROUND.
5.  DENOTES ON BOARD GROUND.
6.  ANY NUMBER OR LETTER NEAR TRIANGLE IS A SPECIAL GROUND.
7.  DENOTES ASSEMBLY.
8.  DENOTES MAIN SIGNAL PATH.
9.  DENOTES FEEDBACK PATH.
10.  DENOTES FRONT PANEL MARKING.
11.  DENOTES REAR PANEL MARKING.
12.  DENOTES FRONT PANEL CONTROL.
13.  DENOTES ADJUSTMENT.
14.  DENOTES COMPONENTS NOT MOUNTED ON ASSEMBLY.
15. \* OPTIMUM VALUE SELECTED AT FACTORY. COMPONENT MAY BE MISSING.
16. DC VOLTAGES AND WAVEFORMS ARE DEPENDENT ON CONDITIONS SET FORTH IN SCHEMATIC NOTES ASSOCIATED WITH EACH SCHEMATIC.
17.  DENOTES FIELD EFFECT TRANSISTOR WITH N MATERIAL CHANNEL.
18. 924 NUMBERS SHOWN INSIDE BOAT INDICATE WIRE COLOR CODE. COMPARES TO EIA COLOR CODE FOR RESISTORS, (e.g. 924 = WHITE, RED, YELLOW.)

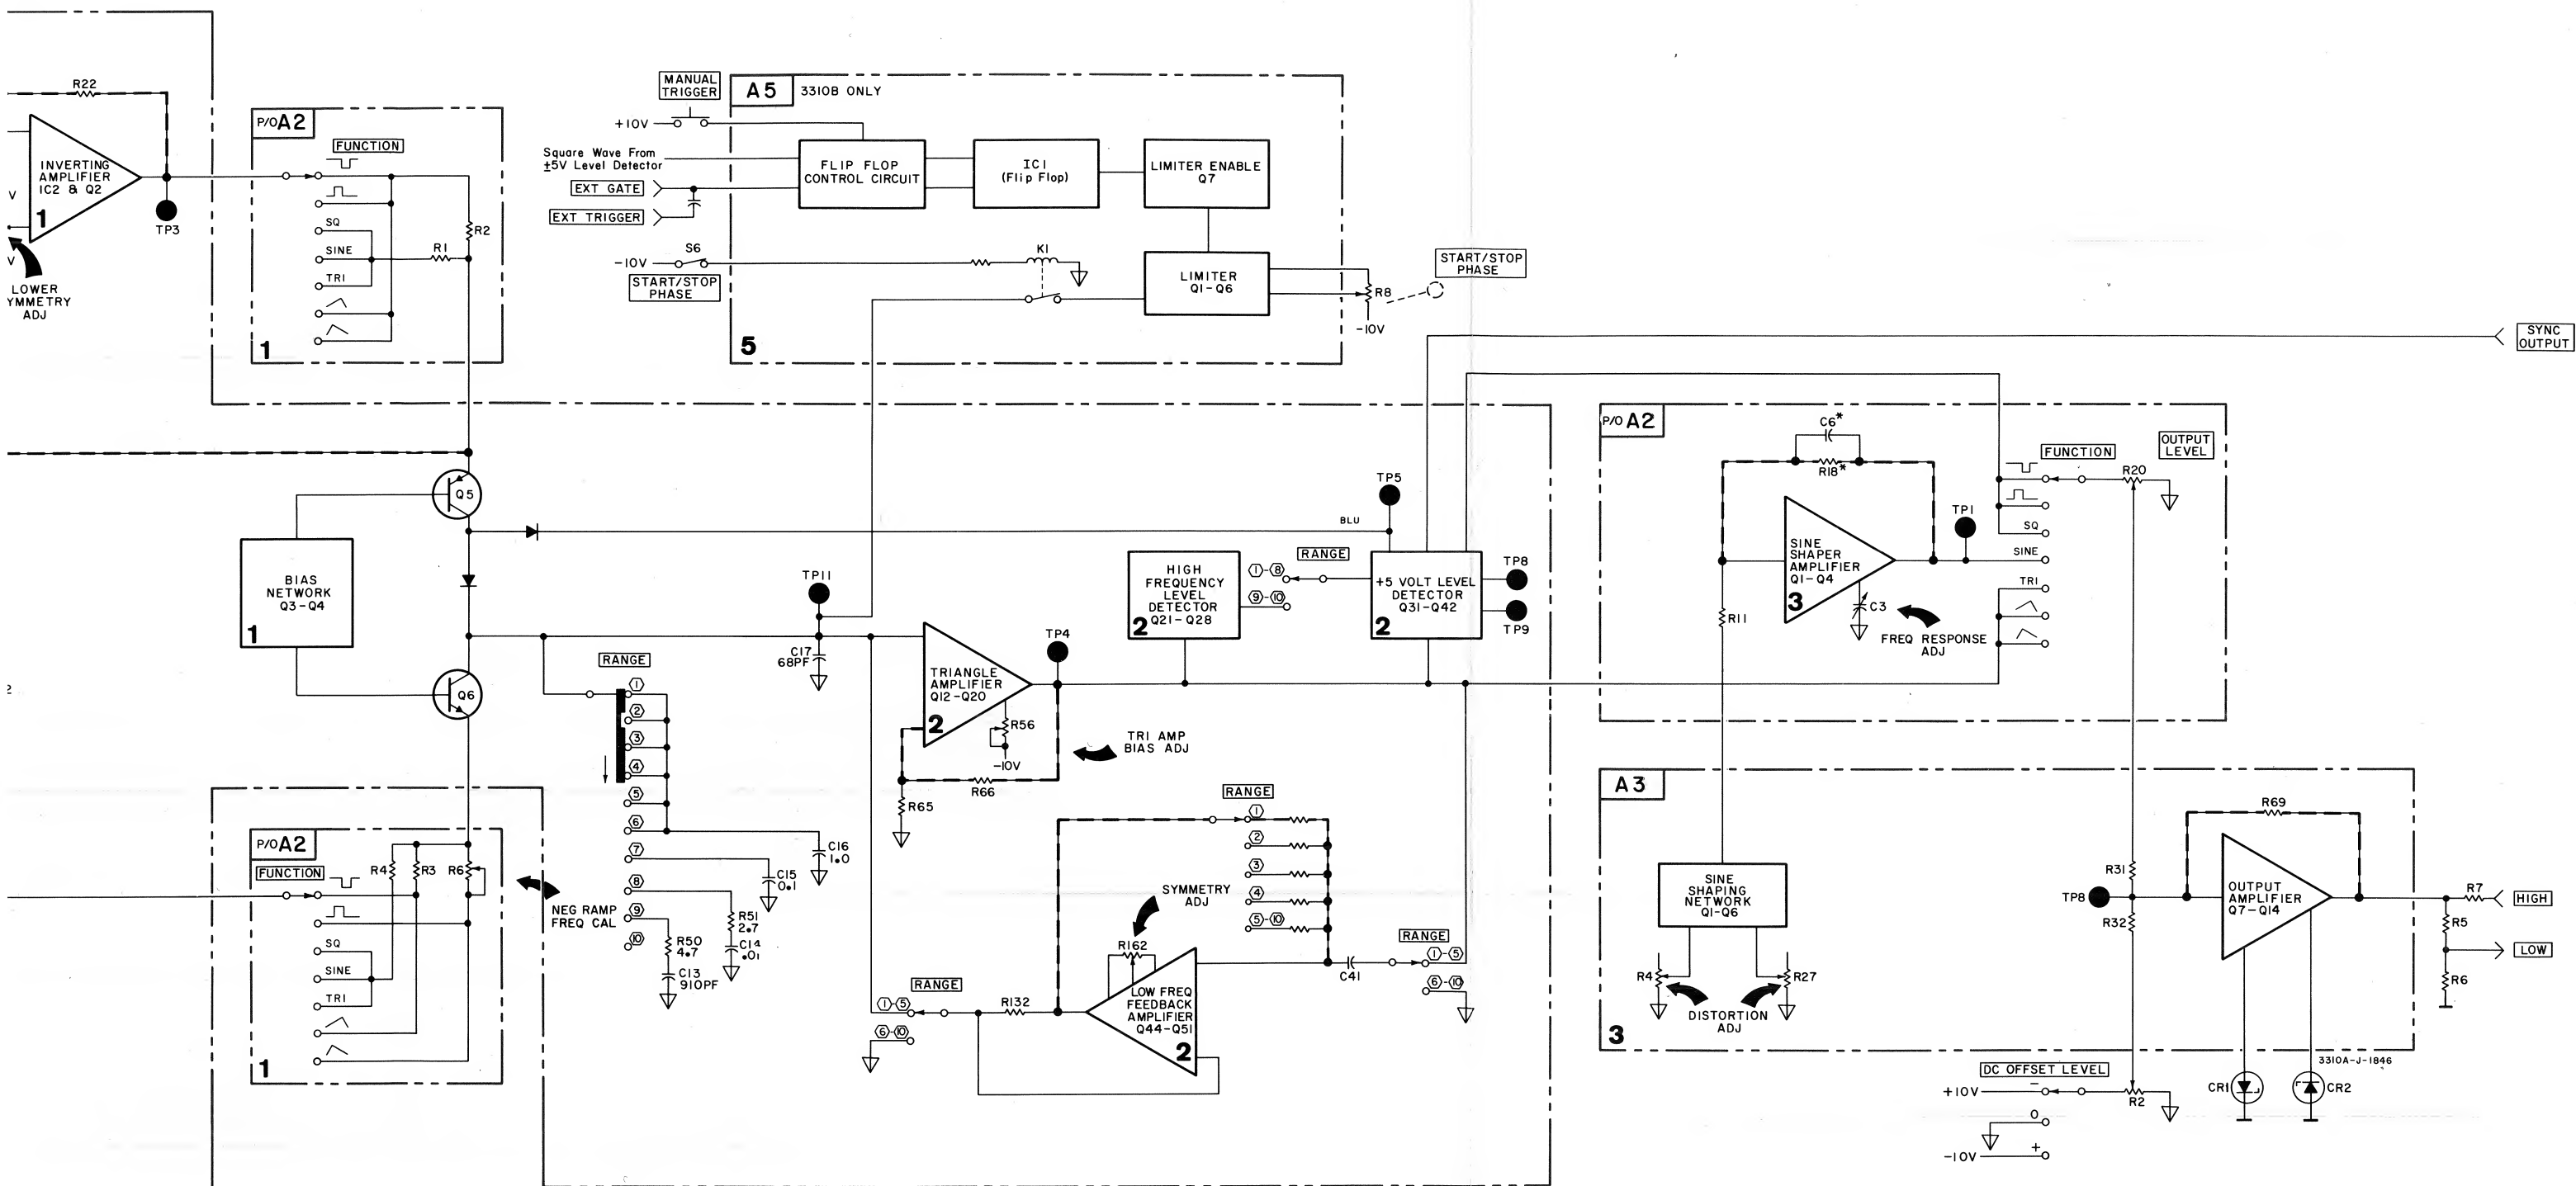

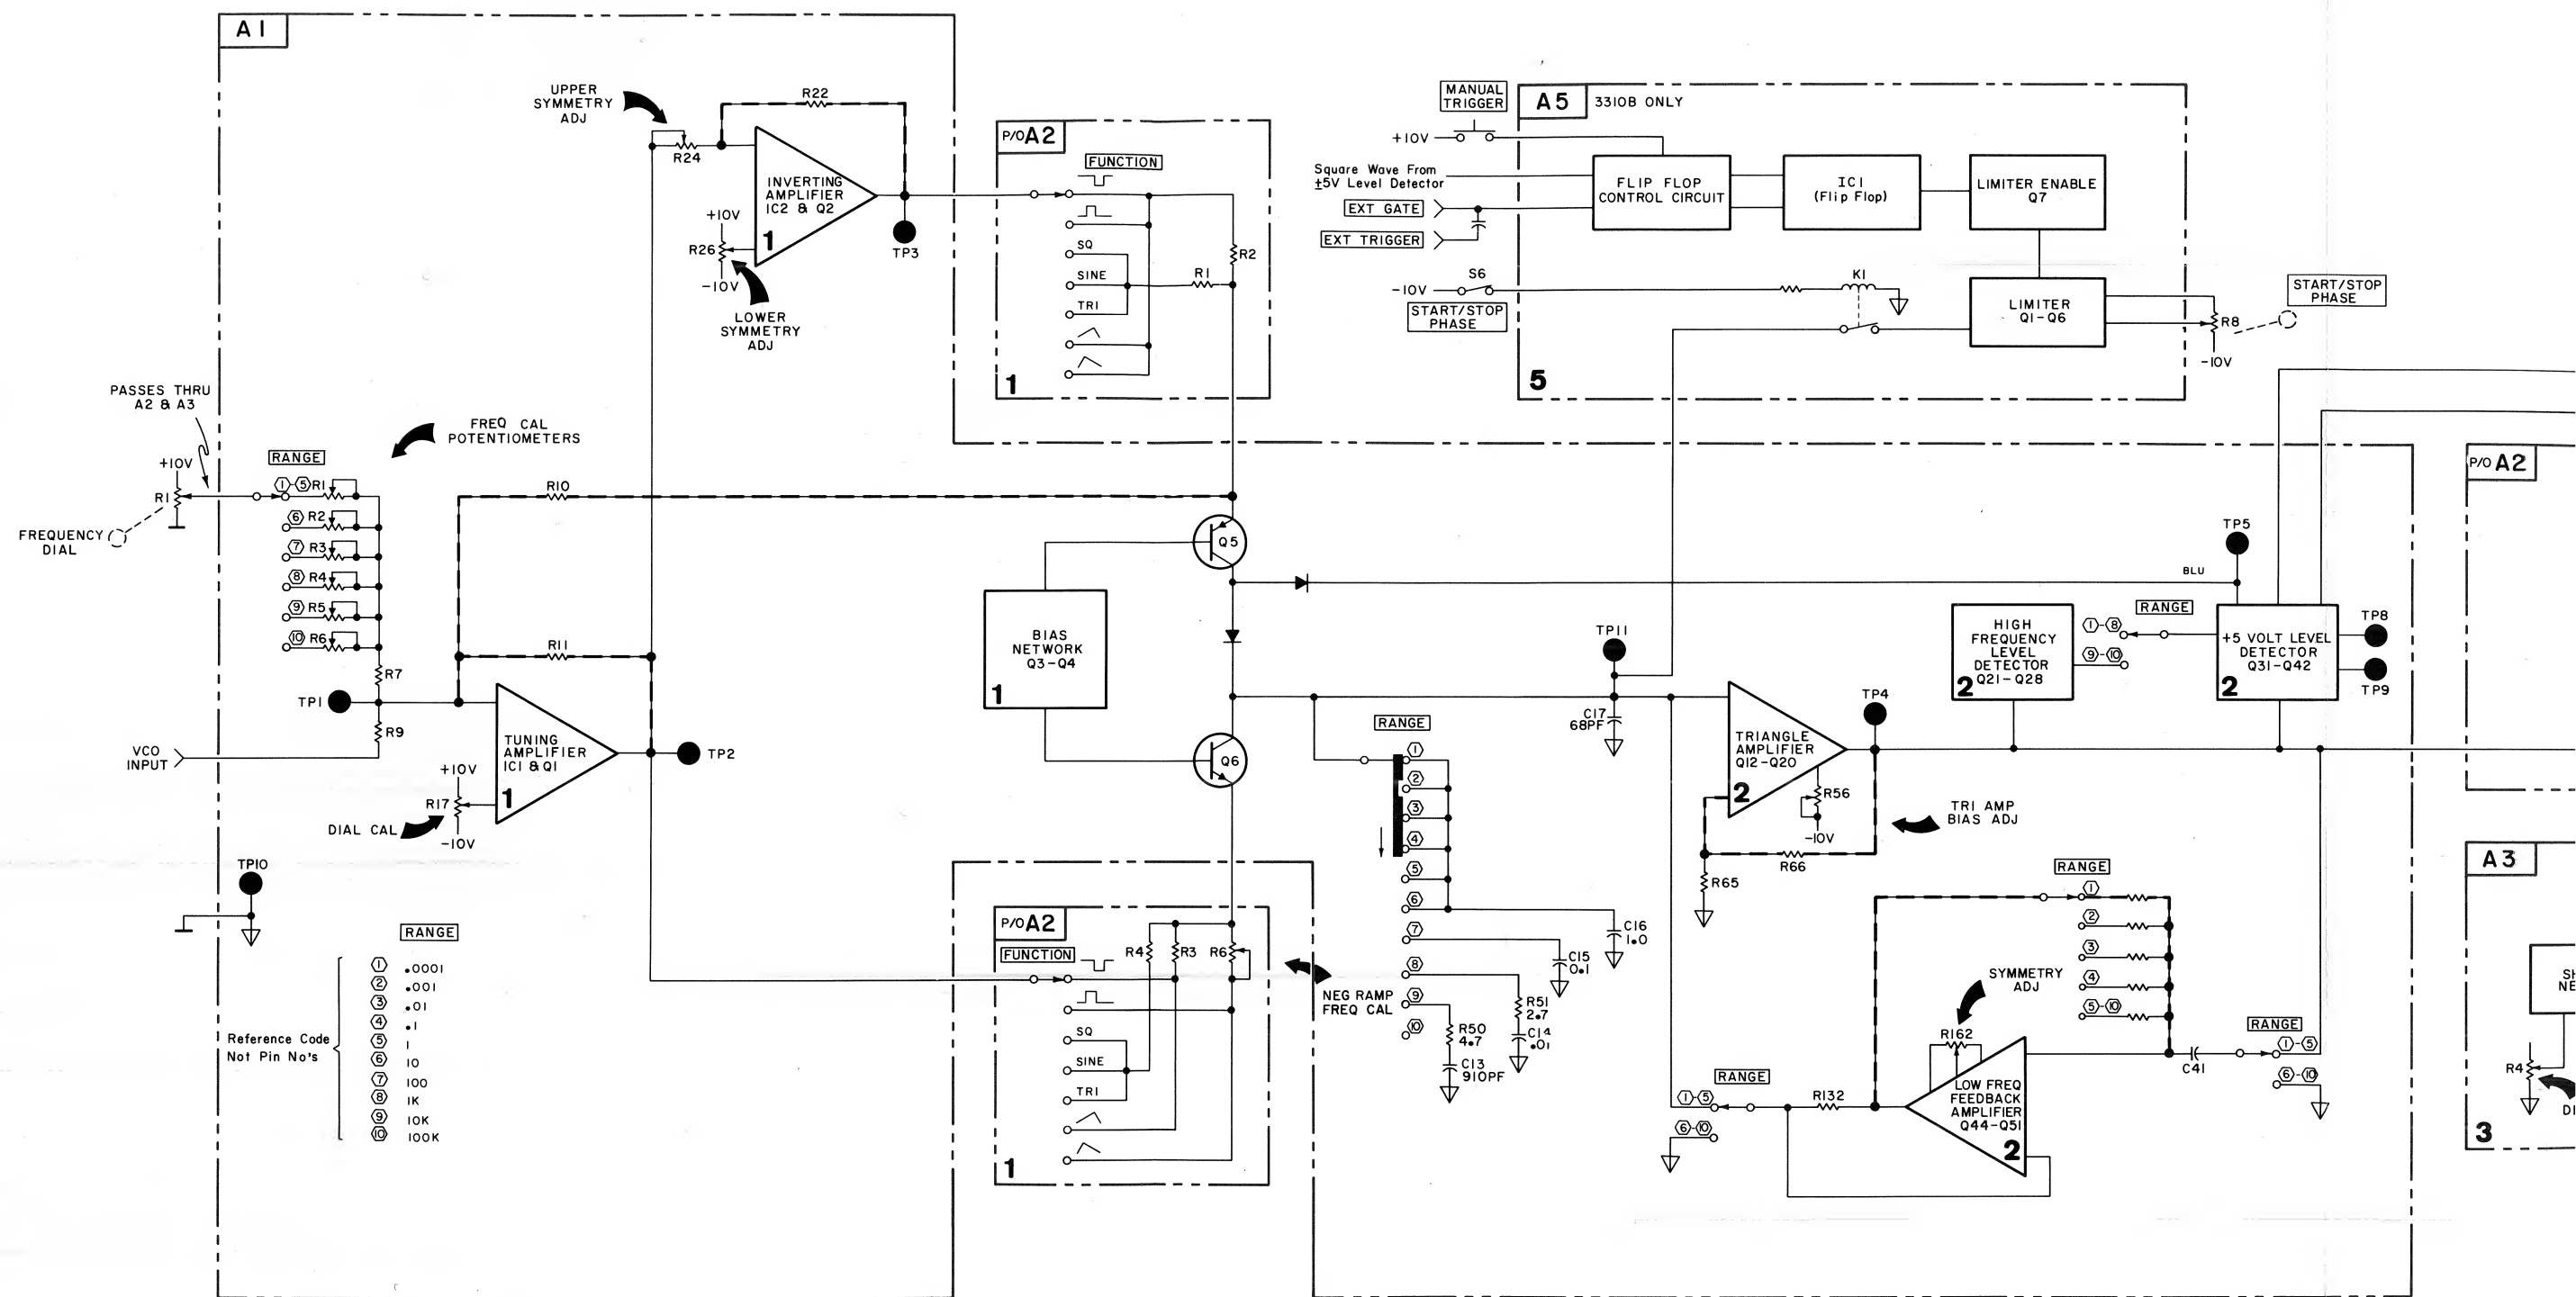

COPYRIGHT 1969 BY HEWLETT-PACKARD COMPANY



# A1 Board Component Location.

	C	CR	R	Q	L		R	Q		R	R		IC	TP1	Pin
1	C7	E6	H6	G7		43	E6		85	C2	127	B5	1	E6	H6
2	C6	F6	H6	G7		44	D6	D2	86	B2	128	C5	2	F6	F3
3	C6	C5	G6	D6		45		E2	87	A3	129	C5	3	G7	F3
4	C7	C5	G6	D6		46		E2	88	C1	130		4	D2	D1
5	B7		G6	D5		47		F2	89	B1	131		5	C5	F6
6	D3		G6	D5	D4	48		G2	90	B1	132	D2	6	A6	
7	B7		F6			49		F2	91		133	D1	7	A6	
8	C3		E7		C4	50	F4	F2	92	D1	134	D1	8	A4	
9	G7	E2	E7			51	F4	F2	93	D1	135	E1	9	B3	
10	E7	D5	E6			52	F4		94	D1	136	E1	10	D5	
11	D6	D2	E6			53	D3		95	B4	137	E1	11	E5	
12	D5	D2	E6	E4		54	D3		96	C4	138	E1			
13	F4	C1		E4		55	F2		97	C4	139	E1			
14	E5	A1		E4		56	F3		98	C4	140	G1			
15	E5	C1		E4		57	D4		99	C4	141				
16	E5	C1	F7	E3		58	D4		100	C4	142	F4			
17	E4		F7	E3		59	E2		101	A4	143	F4			
18			F7	E3		60	F2		102	A4	144	F4			
19		C4	F7	D2		61	D4		103	A4	145	F5			
20	E3	B4	E7	D3		62	D5		104	A4	146	F5			
21	B2	B4	F6	B3		63	E2		105	A3	147	F5			
22	B1	B4	F7	A3		64	D4		106	A5	148	G1			
23	A2	A5	F7	B2		65	F3		107	A4	149	F1			
24		A5	H6	B2		66	F3		108	A3	150	F1			
25	C3	C6	F7	C2		67	E2		109	B5	151	F1			
26	C1	C6	H6	B3		68	D4		110	B4	152	G1			
27	C2	C5	H7	C1		69	D2		111	B4	153	G2			
28	A4	C5	H7	C2		70	D2		112	B4	154	G2			
29	A4	E1	H7			71	B1		113	A7	155	G2			
30	B4	E1	E6			72	B2		114	A6	156	G2			
31	B4		D7	A4		73	B3		115	A6	157	F1			
32	A6		D7	A5		74	B3		116	A7	158				
33	A6		D7	A4		75	B3		117		159				
34	A6		E7	A5		76	A3		118		160				
35	B6		D7	A5		77	A3		119	B6	161				
36	B6		C7	B4		78	B1		120	B6	162	G2			
37				B4		79	A2		121	A7	163	C7			
38			D6	B4		80	A2		122	A6	164	D6			
39	G3		E6	B6		81	C1		123	B6	165	C7			
40	G2		D6	B5		82	C3		124	A7	166	B7			
41	G3		D6	B5		83	C3		125	B5	167	B7			
42			E6	B5		84	C3		126	C6	168	B7			

## NOTES

1. d.c. voltage measurement conditions:

Freq. dial .....50  
RANGE .....100  
D.C. OFFSET LEVEL .....0  
OUTPUT LEVEL .....full CW  
FUNCTION .....TRI  
EXT. GATE drive .....1 to 30 V peak, 1 kHz,  
square wave (3310B Tone Burst operation only)

2. A Model 427A VM should be used for d.c. voltage measurement.  
Voltages < .1 V were considered 0 V.

3. Unless otherwise noted waveforms were checked under these conditions:


Freq. dial .....10  
RANGE .....X10K  
Offset Level .....0  
FUNCTION .....SINE  
OUTPUT LEVEL .....1/2 of max  
Load .....open circuit  
START/STOP PHASE .....1/2 of max  
(3310B only)  
EXT. GATE drive .....2.5 V rms sine wave  
(3310B only)

4. A Model 180A Oscilloscope with a 10:1 divider probe was used for waveform checks.

5. When checking waveforms on high freq. level det. set RANGE to X100K instead of X10K. The waveforms shown here are only approximate since they are somewhat affected by stray capacity (i.e. lead placement, etc.)

6. When checking d.c. levels on low freq. feedback amp. set range to X1 instead of X100.

7. All voltages given on schematic are  $\pm 10\%$  unless otherwise noted.

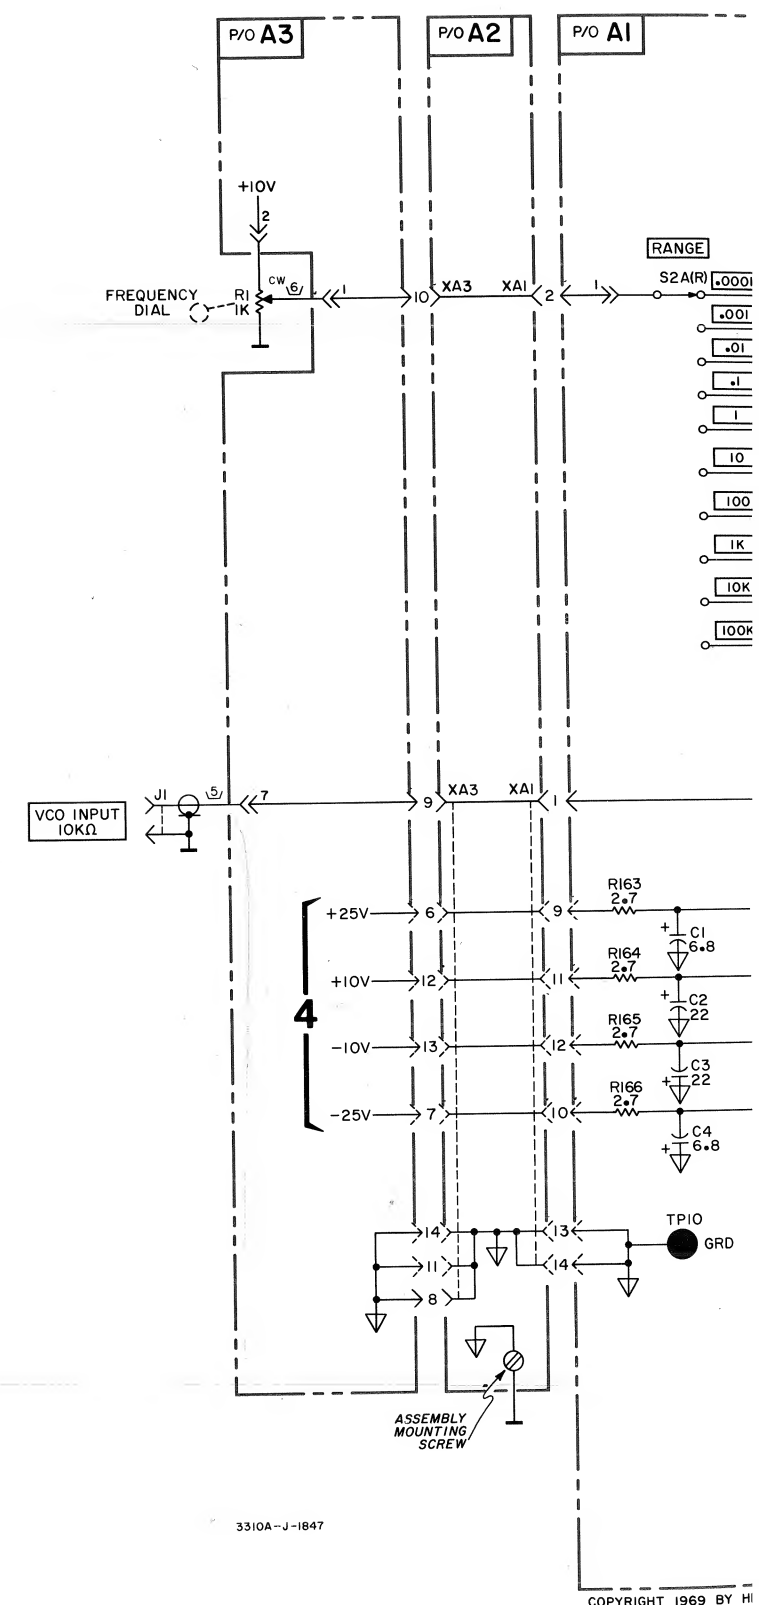

3310A-J-1847

COPYRIGHT 1969 BY HI

A1  
hp Part No. 03310-66501  
Rev B







A1 Board Component Location.

	C	CR	R	Q	L		R	Q		R	R			IC	TPI	Pin
1	C7	E6	H6	G7		43	E6		85	C2	127	B5	1	E6		H6
2	C6	F6	H6	G7		44	D6	D2	86	B2	128	C5	2	F6	G7	F3
3	C6	C5	G6	D6		45		E2	87	A3	129	C5	3		G7	F3
4	C7	C5	G6	D6		46		E2	88	C1	130		4		D2	D1
5	B7		G6	D5		47		F2	89	B1	131		5		C5	F6
6	D3		G6	D5	D4	48		G2	90	B1	132	D2	6		A6	
7	B7		F6			49		F2	91		133	D1	7		A6	
8	C3		E7		C4	50	F4	F2	92		134	D1	8		A4	
9	G7	E2	E7			51	F4	F2	93	D1	135	E1	9		B3	
10	E7	D5	E6			52	F4		94	D1	136	E1	10		D5	
11	D6	D2	E6			53	D3		95	B4	137	E1	11		E5	
12	D5	D2	E6	E4		54	D3		96	C4	138	E1				
13	F4	C1		E4		55	F2		97	C4	139	E1				
14	E5	A1		E4		56	F3		98	C4	140	G1				
15	E5	C1		E4		57	D4		99	C4	141					
16	E5	C1	F7	E3		58	D4		100	C4	142					
17	E4		F7	E3		59	E2		101	A4	143	F4				
18			F7	E3		60	F2		102	A4	144	F4				
19		C4	F7	D2		61	D4		103	A4	145	F5				
20	E3	B4	E7	D3		62	D5		104	A4	146	F5				
21	B2	B4	F6	B3		63	E2		105	A3	147	F5				
22	B1	B4	F7	A3		64	D4		106	A5	148	G1				
23	A2	A5	F7	B2		65	F3		107	A4	149	F1				
24		A5	H6	B2		66	F3		108	A3	150	F1				
25	C3	C6	F7	C2		67	E2		109	B5	151	F1				
26	C1	C6	H6	B3		68	D4		110	B4	152	G1				
27	C2	C5	H7	C1		69	D2		111	B4	153	G2				
28	A4	C5	H7	C2		70	D2		112	B4	154	G2				
29	A4	E1	H7			71	B1		113	A7	155					
30	B4	E1	E6			72	B2		114	A6	156	G2				
31	B4		D7	A4		73	B3		115	A6	157	F1				
32	A6		D7	A5		74	B3		116	A7	158					
33	A6		D7	A4		75	B3		117		159					
34	A6		E7	A5		76	A3		118		160					
35	B6		D7	A5		77	A3		119	B6	161					
36	B6		C7	B4		78	B1		120	B6	162	G2				
37				B4		79	A2		121	A7	163	C7				
38			D6	B4		80	A2		122	A6	164	D6				
39	G3		E6	B6		81	C1		123	B6	165	C7				
40	G2		D6	B5		82	C3		124	A7	166	B7				
41	G3		D6	B5		83	C3		125	B5	167	B7				
42			E6	B5		84	C3		126	C6	168	B7				

A3 Board Component Location.

	C	CR	Q	R		Q	R		R		R		TP	Pin	IC
1	D5	C4	D4		34	F2		67	E2	100	F2	1	G5	G1	D3
2	B5	E5	D4	E4	35	G2		68	E2	101	F3	2	F6	G1	
3		E5	D4	D4	36		C2	69	C2	102	F2	3	G4	F1	
4		D5	B4	D4	37			70		103	F2	4	F5	F1	
5	D2	D5	B4	C5	38			71	H5	104	B2	5	E6	F1	
6	D2	C5	B4	C4	39			72	G5	105	B2	6	A6	F1	
7	C2	C5		D5	40		E1	73	G5			7	E4	F1	
8	C1	C5		D5	41		E2	74	F5			8	D3	C1	
9	C1	C5	D2	D5	42		D2	75	F5			9		A1	
10	E2	B5	C2	D5	43		C1	76	H4			10		A1	
11	D1	B5	B2	D5	44		D1	77	G4			11		A2	
12	E2	B5	D2	D5	45		C1	78	G4			12		A2	
13	C1	B5	B3	D5	46		C2	79	F4			13		B2	
14		B4	B3	C5	47		C2	80	F4			14		B3	
15	B2	C3		C5	48		B1	81	H3			15		A3	
16		C3		C5	49		C2	82	H3			16		B3	
17		C3	I6	C5	50		E1	83	G3			17		B1	
18	E1	C3	G5	B5	51		E2	84	G3			18		B1	
19	E1	A2	F5	B5	52		D1	85	G3			19		B1	
20	E5	B2	F6	B5	53		D1	86	G3			20		B3	
21	F5	G5	I5	B5	54			87							
22	E5		G4	B5	55			88	F4						
23	F4	G4	F4	A5	56			89	F4						
24	F3		F5	A5	57			90	F4						
25	F3	F2	I4	A4	58			91	F4						
26	D2	F2	H3	A4	59			92	H2						
27	B2		H3	B4	60		B1	93	H2						
28	B3	D1	G3	C4	61		B3	94	H2						
29		B1	G3	C4	62		E3	95	H2						
30		B1	I3	C5	63		B1	96	G2						
31		F2	H2	C3	64		B2	97	G2						
32			H2	D3	65		E3	98	G2						
33			G2	D3	66		A1	99	G2						

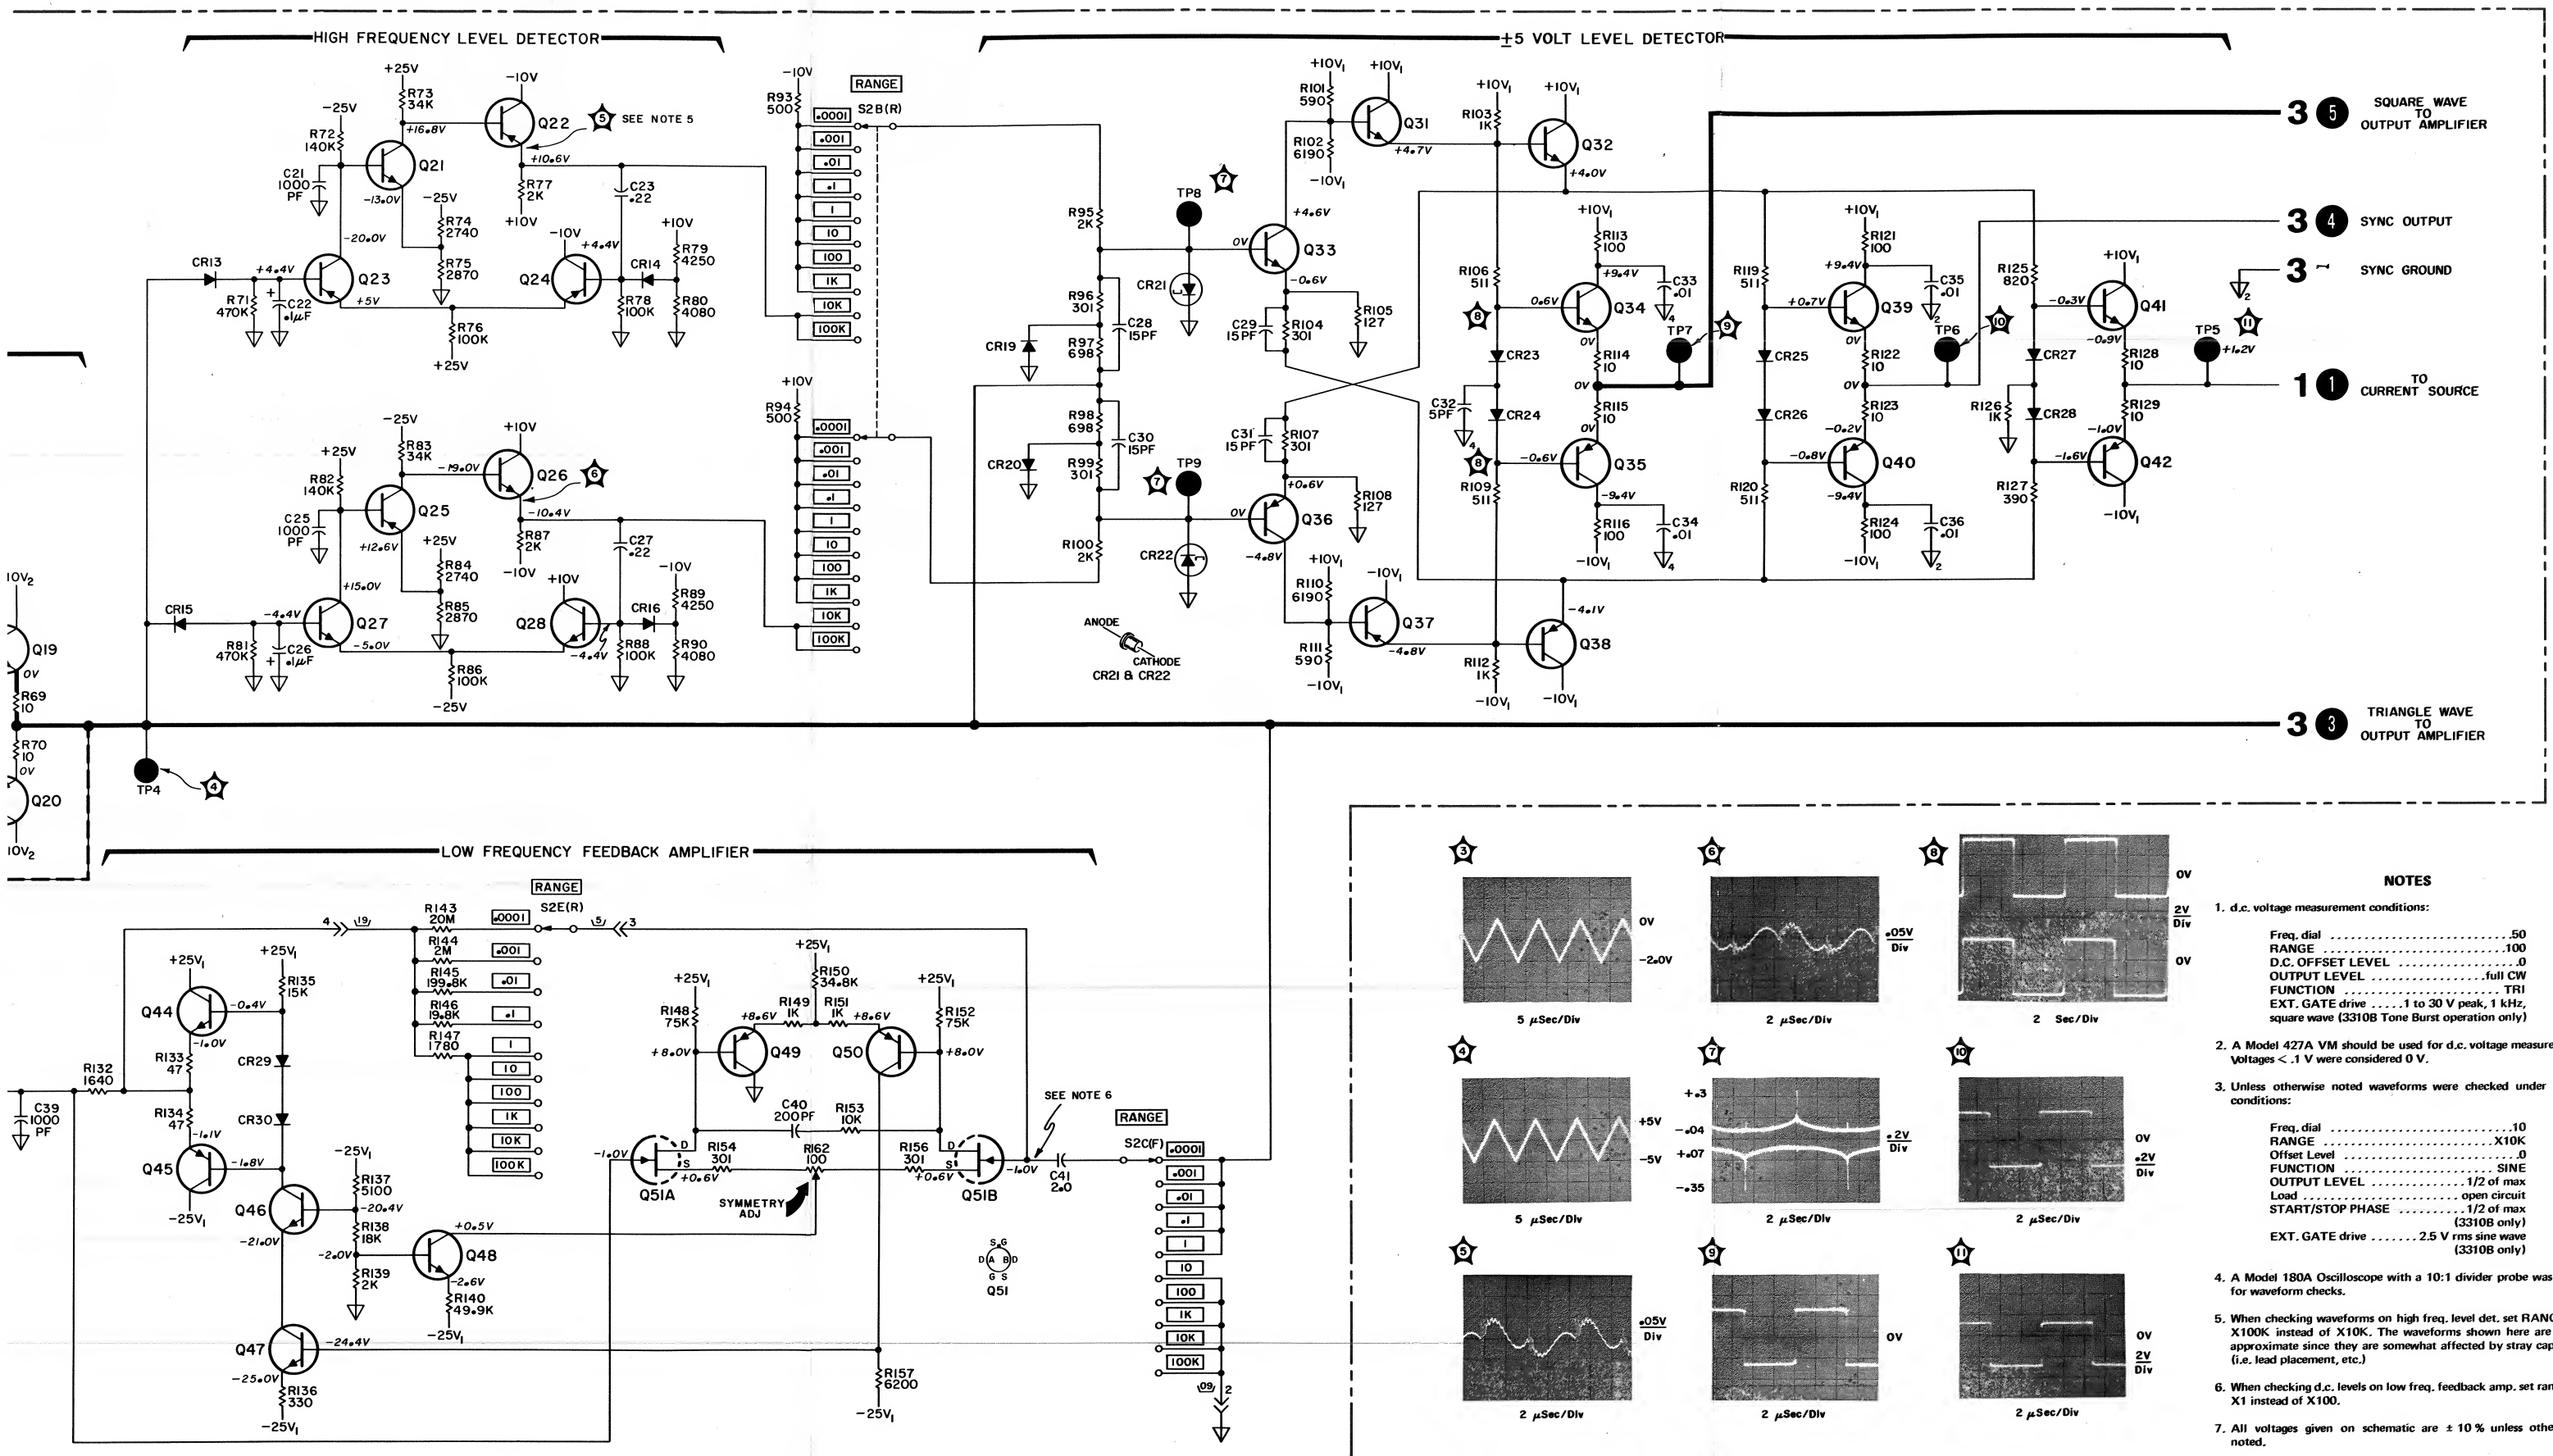


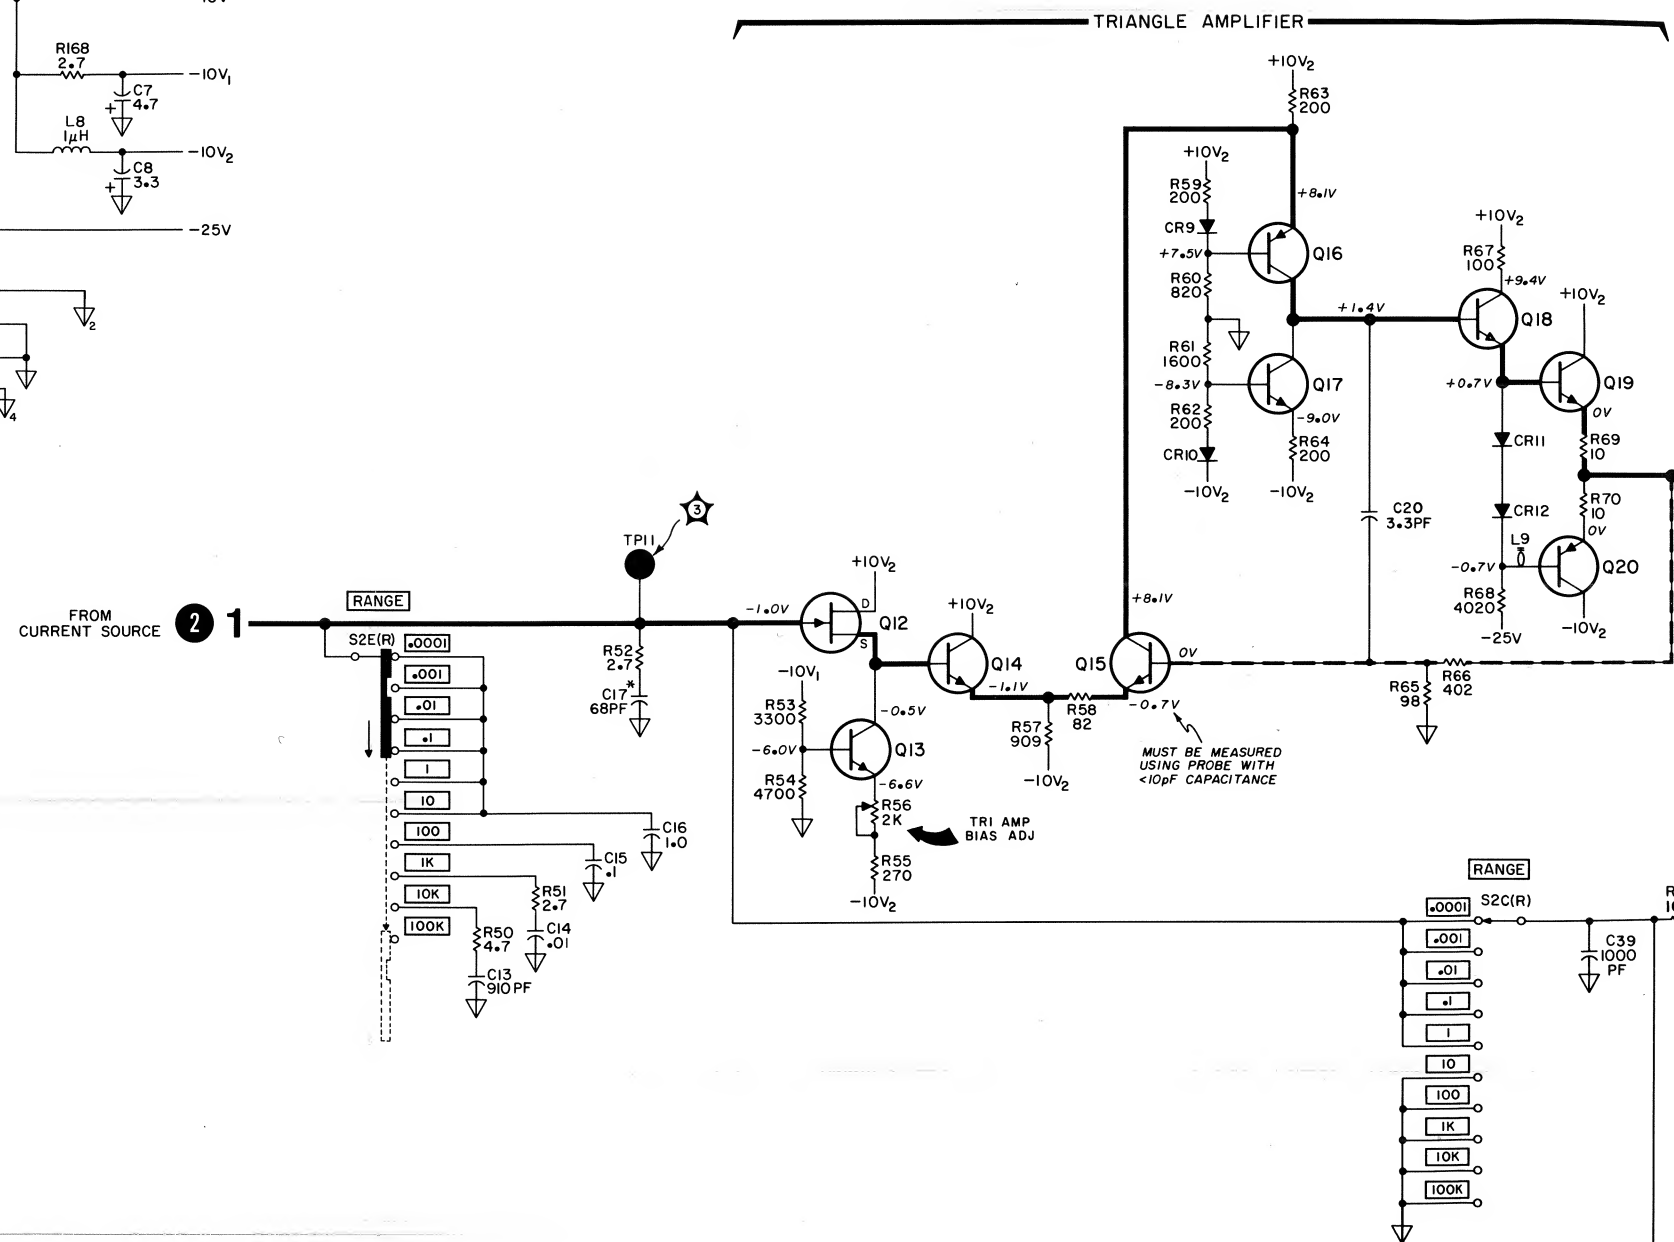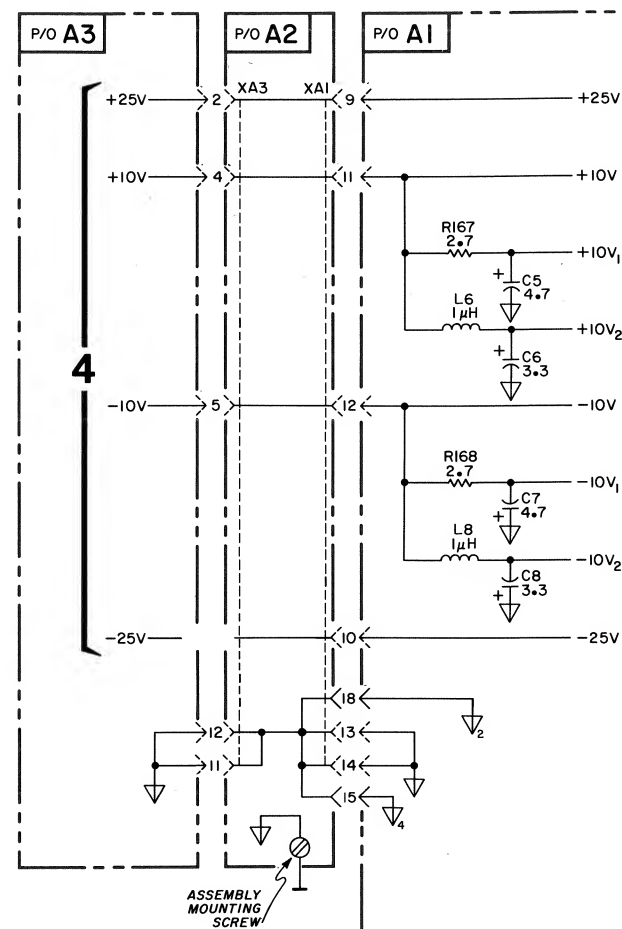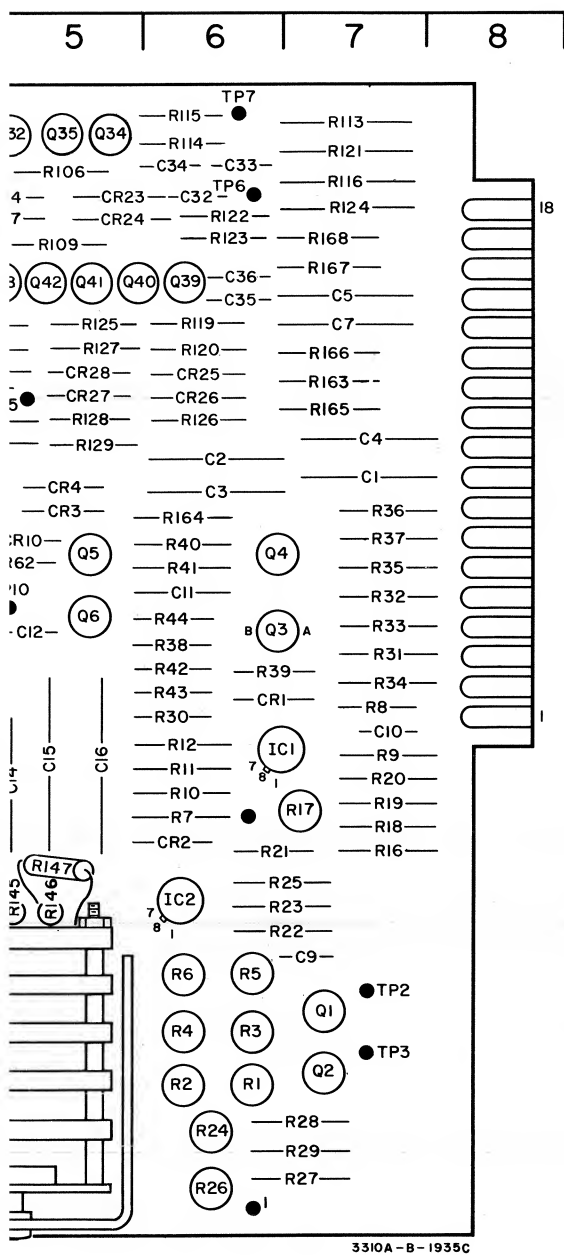


A3 Board Component Location.

	C	CR	Q	R		Q	R		R		R		TP	Pin	IC
1	D5	C4	D4		34	F2		67	E2	100	F2	1	G5	G1	D3
2	B5	E5	D4	E4	35	G2		68	E2	101	F3	2	F6	G1	
3		E5	D4	D4	36		C2	69	C2	102	F2	3	G4	F1	
4		D5	B4	D4	37			70		103	F2	4	F5	F1	
5	D2	D5	B4	C5	38			71	H5	104	B2	5	E6	F1	
6	D2	C5	B4	C4	39			72	G5	105	B2	6	A6	F1	
7	C2	C5		D5	40		E1	73	G5			7	E4	F1	
8	C1	C5		D5	41		E2	74	F5			8	D3	C1	
9	C1	C5	D2	D5	42		D2	75	F5			9		A1	
10	E2	B5	C2	D5	43		C1	76	H4			10		A1	
11	D1	B5	B2	D5	44		D1	77	G4			11		A2	
12	E2	B5	D2	D5	45		C1	78	G4			12		A2	
13	C1	B5	B3	D5	46		C2	79	F4			13		B2	
14		B4	B3	C5	47		C2	80	F4			14		B3	
15	B2	C3		C5	48		B1	81	H3			15		A3	
16		C3		C5	49		C2	82	H3			16		B3	
17		C3	I6	C5	50		E1	83	G3			17		B1	
18	E1	C3	G5	B5	51		E2	84	G3			18		B1	
19	E1	A2	F5	B5	52		D1	85	G3			19		B1	
20	E5	B2	F6	B5	53		D1	86	G3			20		B3	
21	F5	G5	I5	B5	54			87							
22	E5		G4	B5	55			88	F4						
23	F4	G4	F4	A5	56			89	F4						
24	F3		F5	A5	57			90	F4						
25	F3	F2	I4	A4	58			91	F4						
26	D2	F2	H3	A4	59			92	H2						
27	B2		H3	B4	60		B1	93	H2						
28	B3	D1	G3	C4	61		B3	94	H2						
29		B1	G3	C4	62		E3	95	H2						
30		B1	I3	C5	63		B1	96	G2						
31		F2	H2	C3	64		B2	97	G2						
32			H2	D3	65		E3	98	G2						
33			G2	D3	66		A1	99	G2						



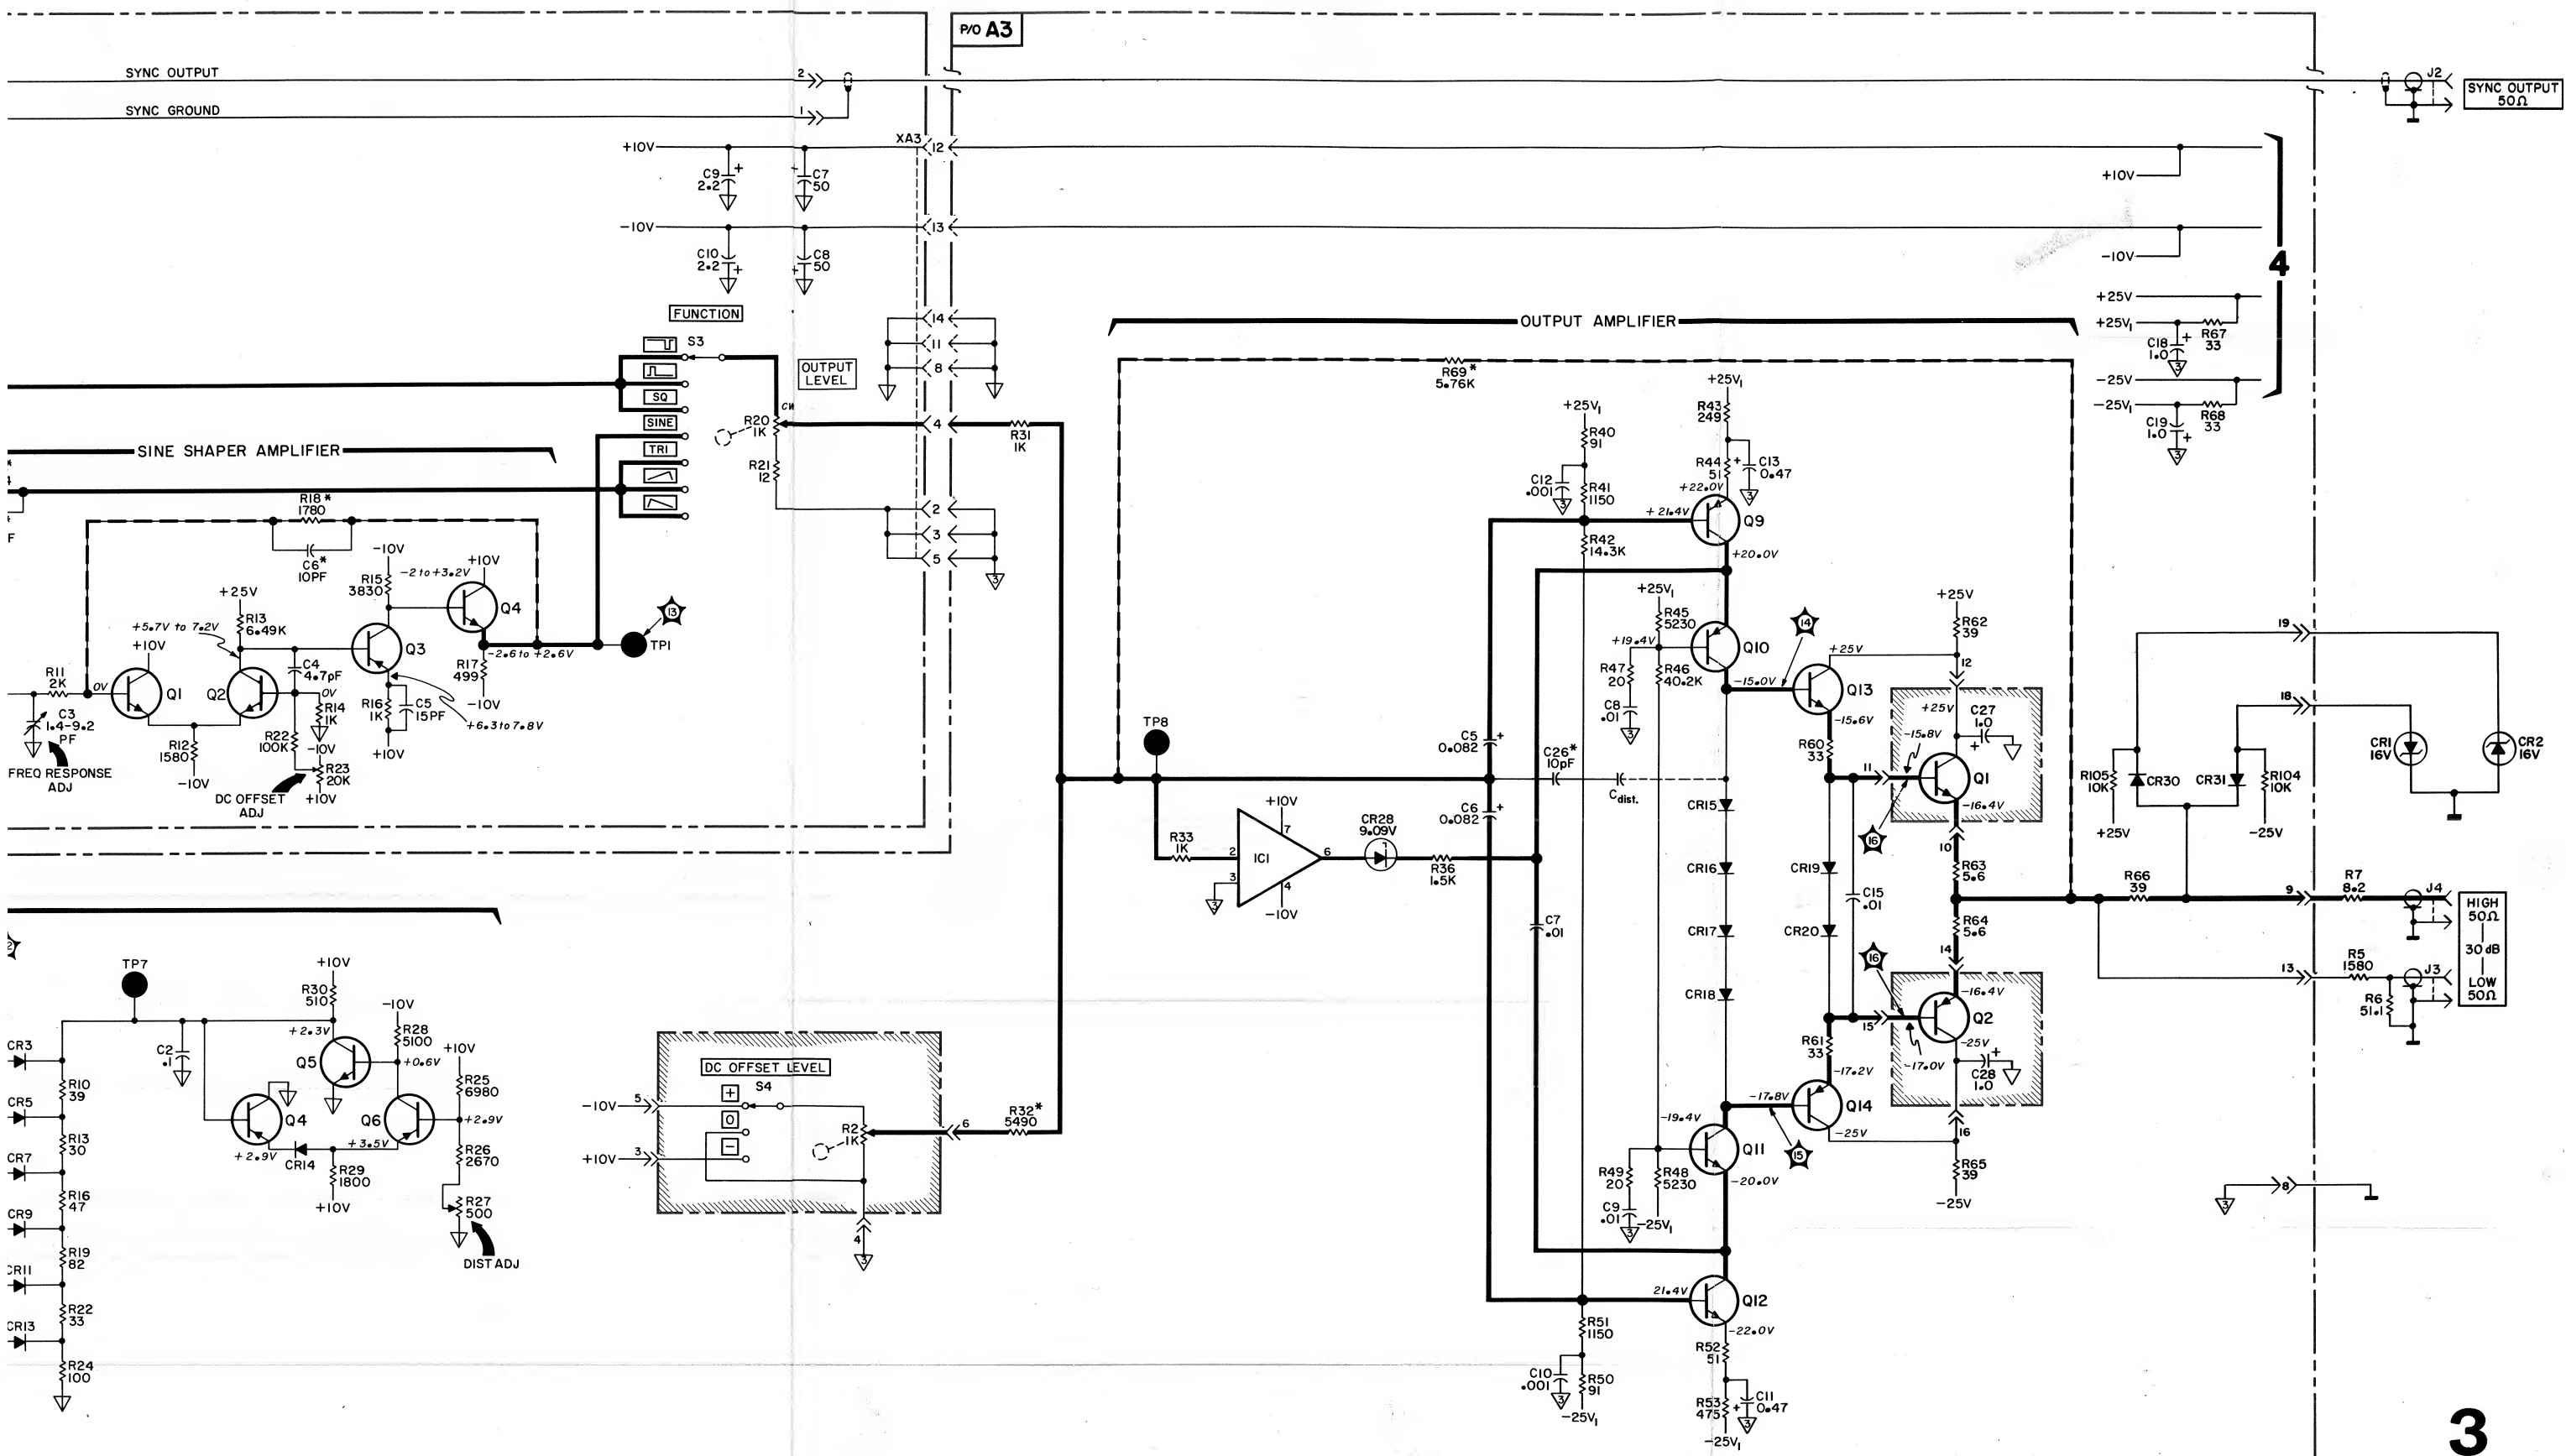

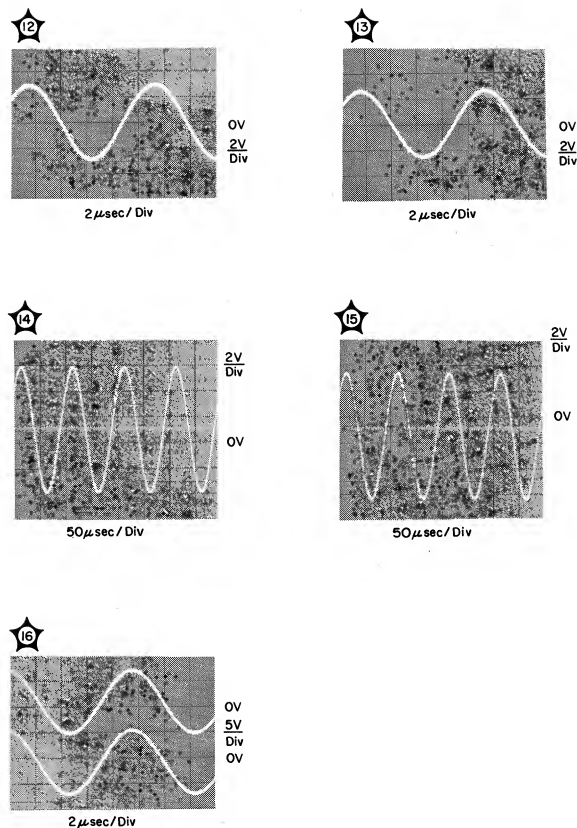

# NOTES

## 1. d.c. voltage measurement conditions:

Freq. dial .....50  
 RANGE .....100  
 D.C. OFFSET LEVEL .....0  
 OUTPUT LEVEL .....full CW  
 FUNCTION .....TRI  
 EXT. GATE drive .....1 to 30 V peak, 1 kHz,  
 square wave (3310B Tone Burst operation only)

## 2. A Model 427A VM should be used for d.c. voltage measurement. Voltages < .1 V were considered 0 V.

## 3. Unless otherwise noted waveforms were checked under these conditions:


Freq. dial .....10  
 RANGE .....X10K  
 Offset Level .....0  
 FUNCTION .....SINE  
 OUTPUT LEVEL .....1/2 of max  
 Load .....open circuit  
 START/STOP PHASE .....1/2 of max  
 (3310B only)  
 EXT. GATE drive .....2.5 V rms sine wave  
 (3310B only)

## 4. A Model 180A Oscilloscope with a 10:1 divider probe was used for waveform checks.

 
## 5. When checking waveforms on high freq. level det. set RANGE to X100K instead of X10K. The waveforms shown here are only approximate since they are somewhat affected by stray capacity (i.e. lead placement, etc.)

## 6. When checking d.c. levels on low freq. feedback amp. set range to X1 instead of X100.


## 7. All voltages given on schematic are ± 10 % unless otherwise noted.

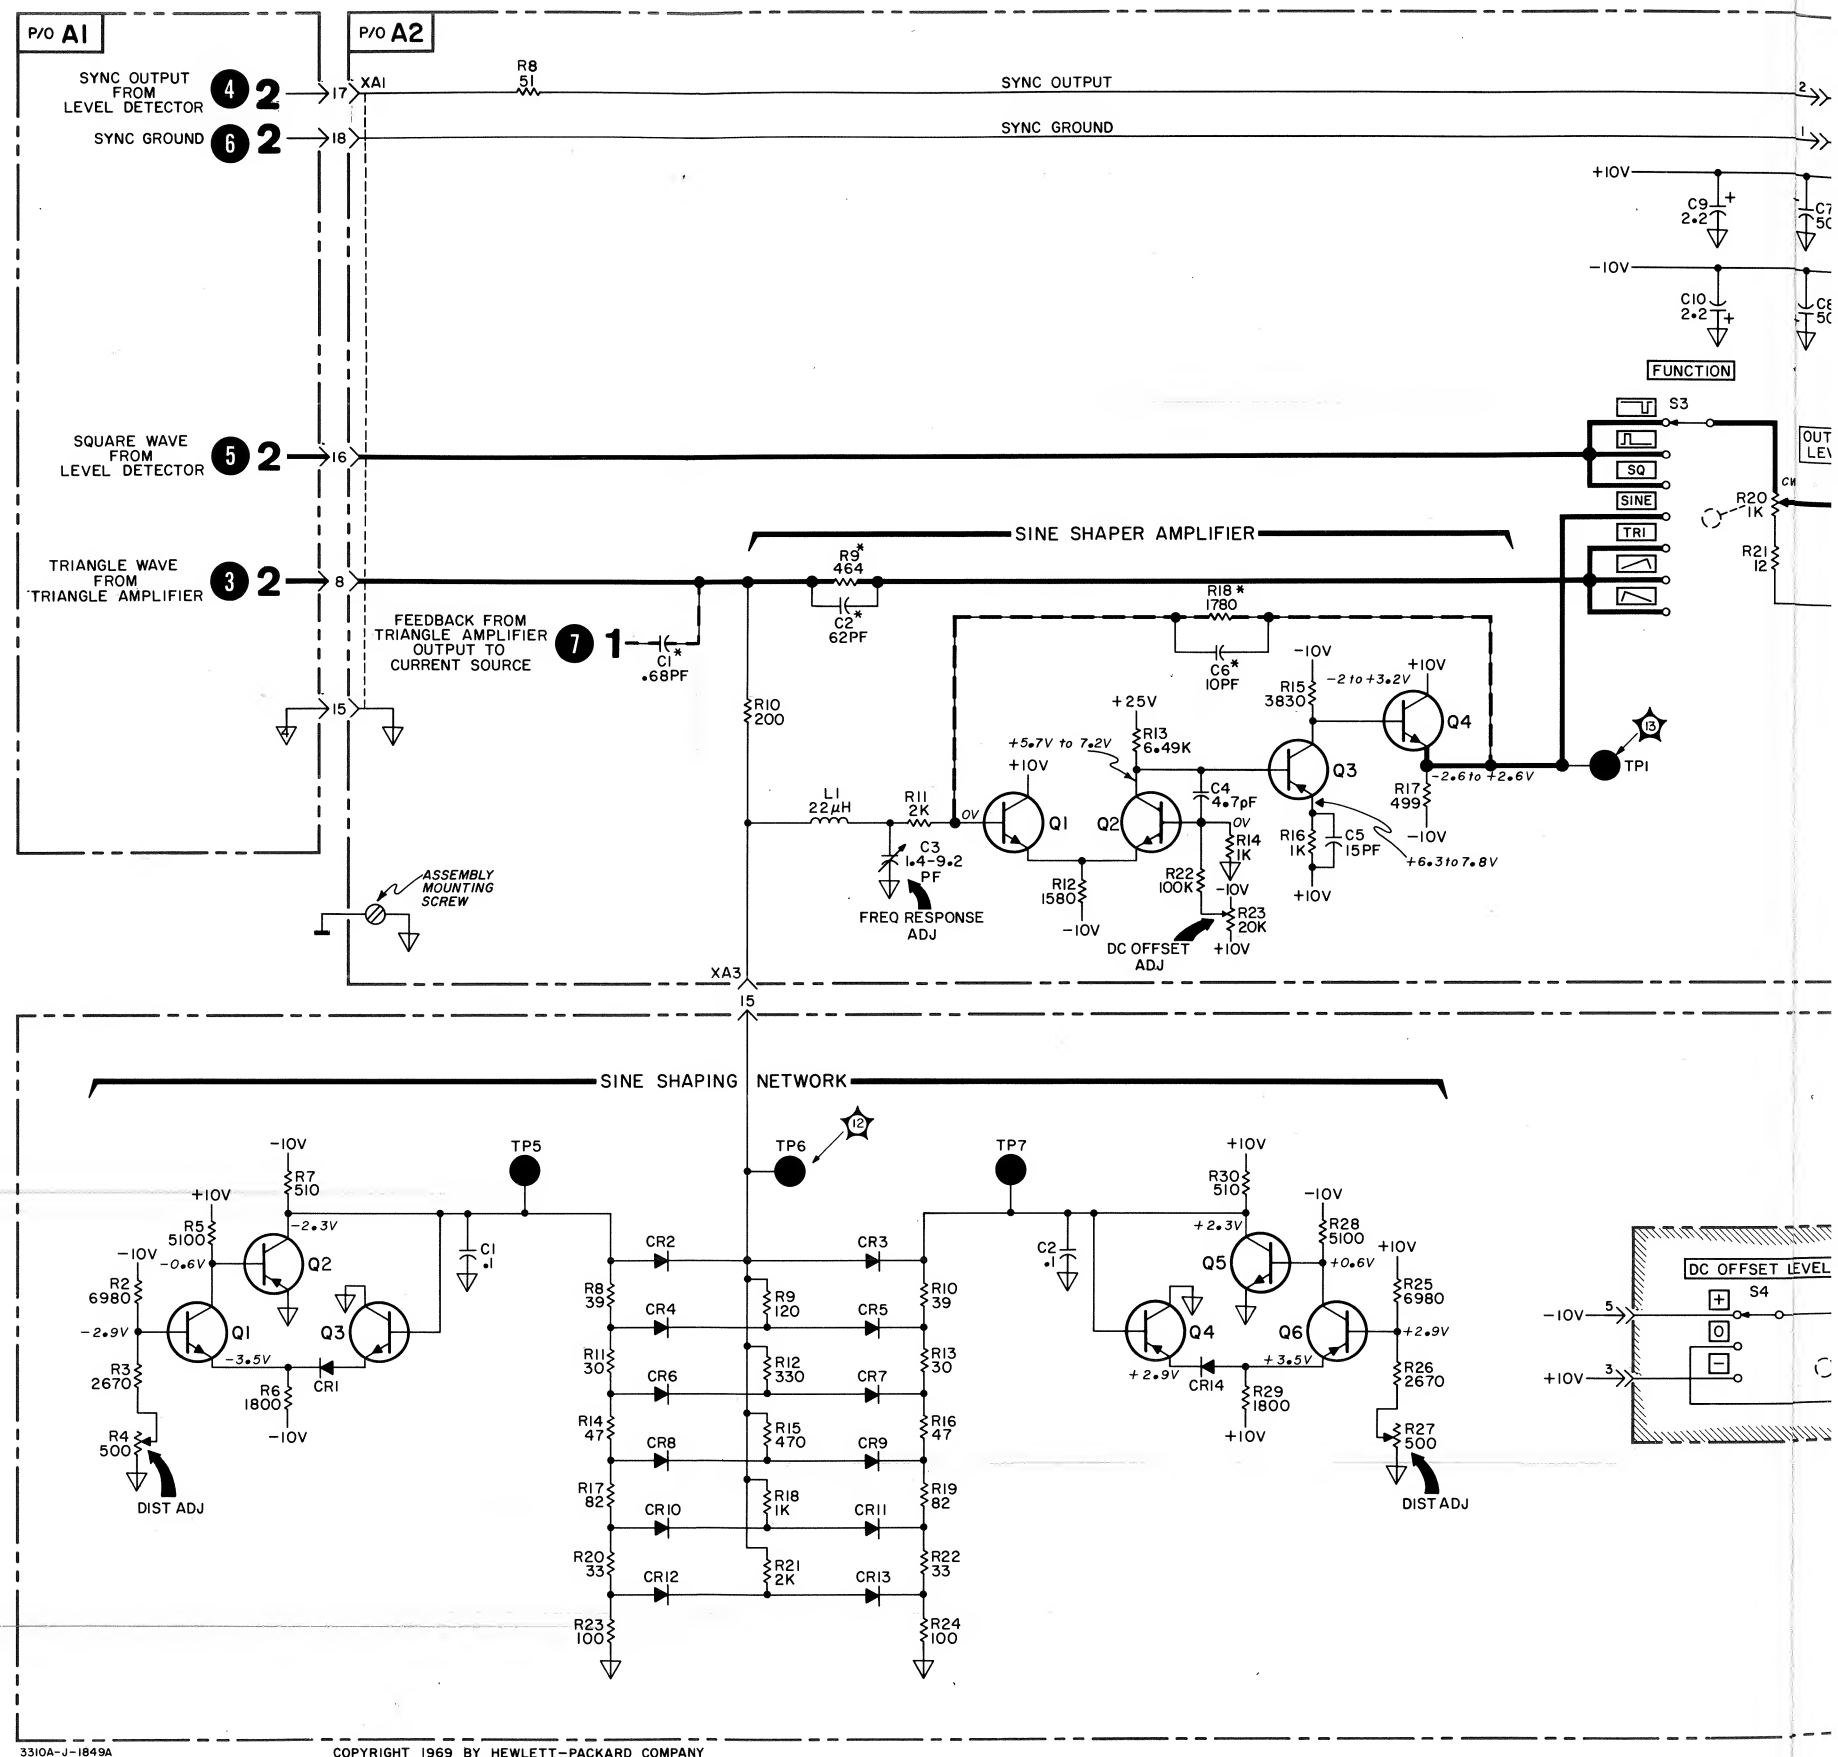






 **A3**  
*hp* Part No. 03310-66513  
Rev C



A3 Board Component Location.

	C	CR	Q	R		Q	R		R		R		TP	Pin	IC
1	D5	C4	D4		34	F2		67	E2	100	F2	1	G5	G1	D3
2	B5	E5	D4	E4	35	G2		68	E2	101	F3	2	F6	G1	
3		E5	D4	D4	36		C2	69	C2	102	F2	3	G4	F1	
4		D5	B4	D4	37			70		103	F2	4	F5	F1	
5	D2	D5	B4	C5	38			71	H5	104	B2	5	E6	F1	
6	D2	C5	B4	C4	39			72	G5	105	B2	6	A6	F1	
7	C2	C5		D5	40		E1	73	G5			7		F1	
8	C1	C5		D5	41		E2	74	F5			8	E4	C1	
9	C1	C5	D2	D5	42		D2	75	F5			9	D3	A1	
10	E2	B5	C2	D5	43		C1	76	H4			10		A1	
11	D1	B5	B2	D5	44		D1	77	G4			11		A2	
12	E2	B5	D2	D5	45		C1	78	G4			12		A2	
13	C1	B5	B3	D5	46		C2	79	F4			13		B2	
14		B4	B3	C5	47		C2	80	F4			14		B3	
15	B2	C3		C5	48		B1	81	H3			15		A3	
16		C3		C5	49		C2	82	H3			16		B3	
17		C3	I6	C5	50		E1	83	G3			17		B1	
18	E1	C3	G5	B5	51		E2	84	G3			18		B1	
19	E1	A2	F5	B5	52		D1	85	G3			19		B1	
20	E5	B2	F6	B5	53		D1	86	G3			20		B3	
21	F5	G5	I5	B5	54			87							
22	E5		G4	B5	55			88	F4						
23	F4	G4	F4	A5	56			89	F4						
24	F3		F5	A5	57			90	F4						
25	F3	F2	I4	A4	58			91	F4						
26	D2	F2	H3	A4	59			92	H2						
27	B2		H3	B4	60		B1	93	H2						
28	B3	D1	G3	C4	61		B3	94	H2						
29		B1	G3	C4	62		E3	95	H2						
30		B1	I3	C5	63		B1	96	G2						
31		F2	H2	C3	64		B2	97	G2						
32			H2	D3	65		E3	98	G2						
33			G2	D3	66		A1	99	G2						

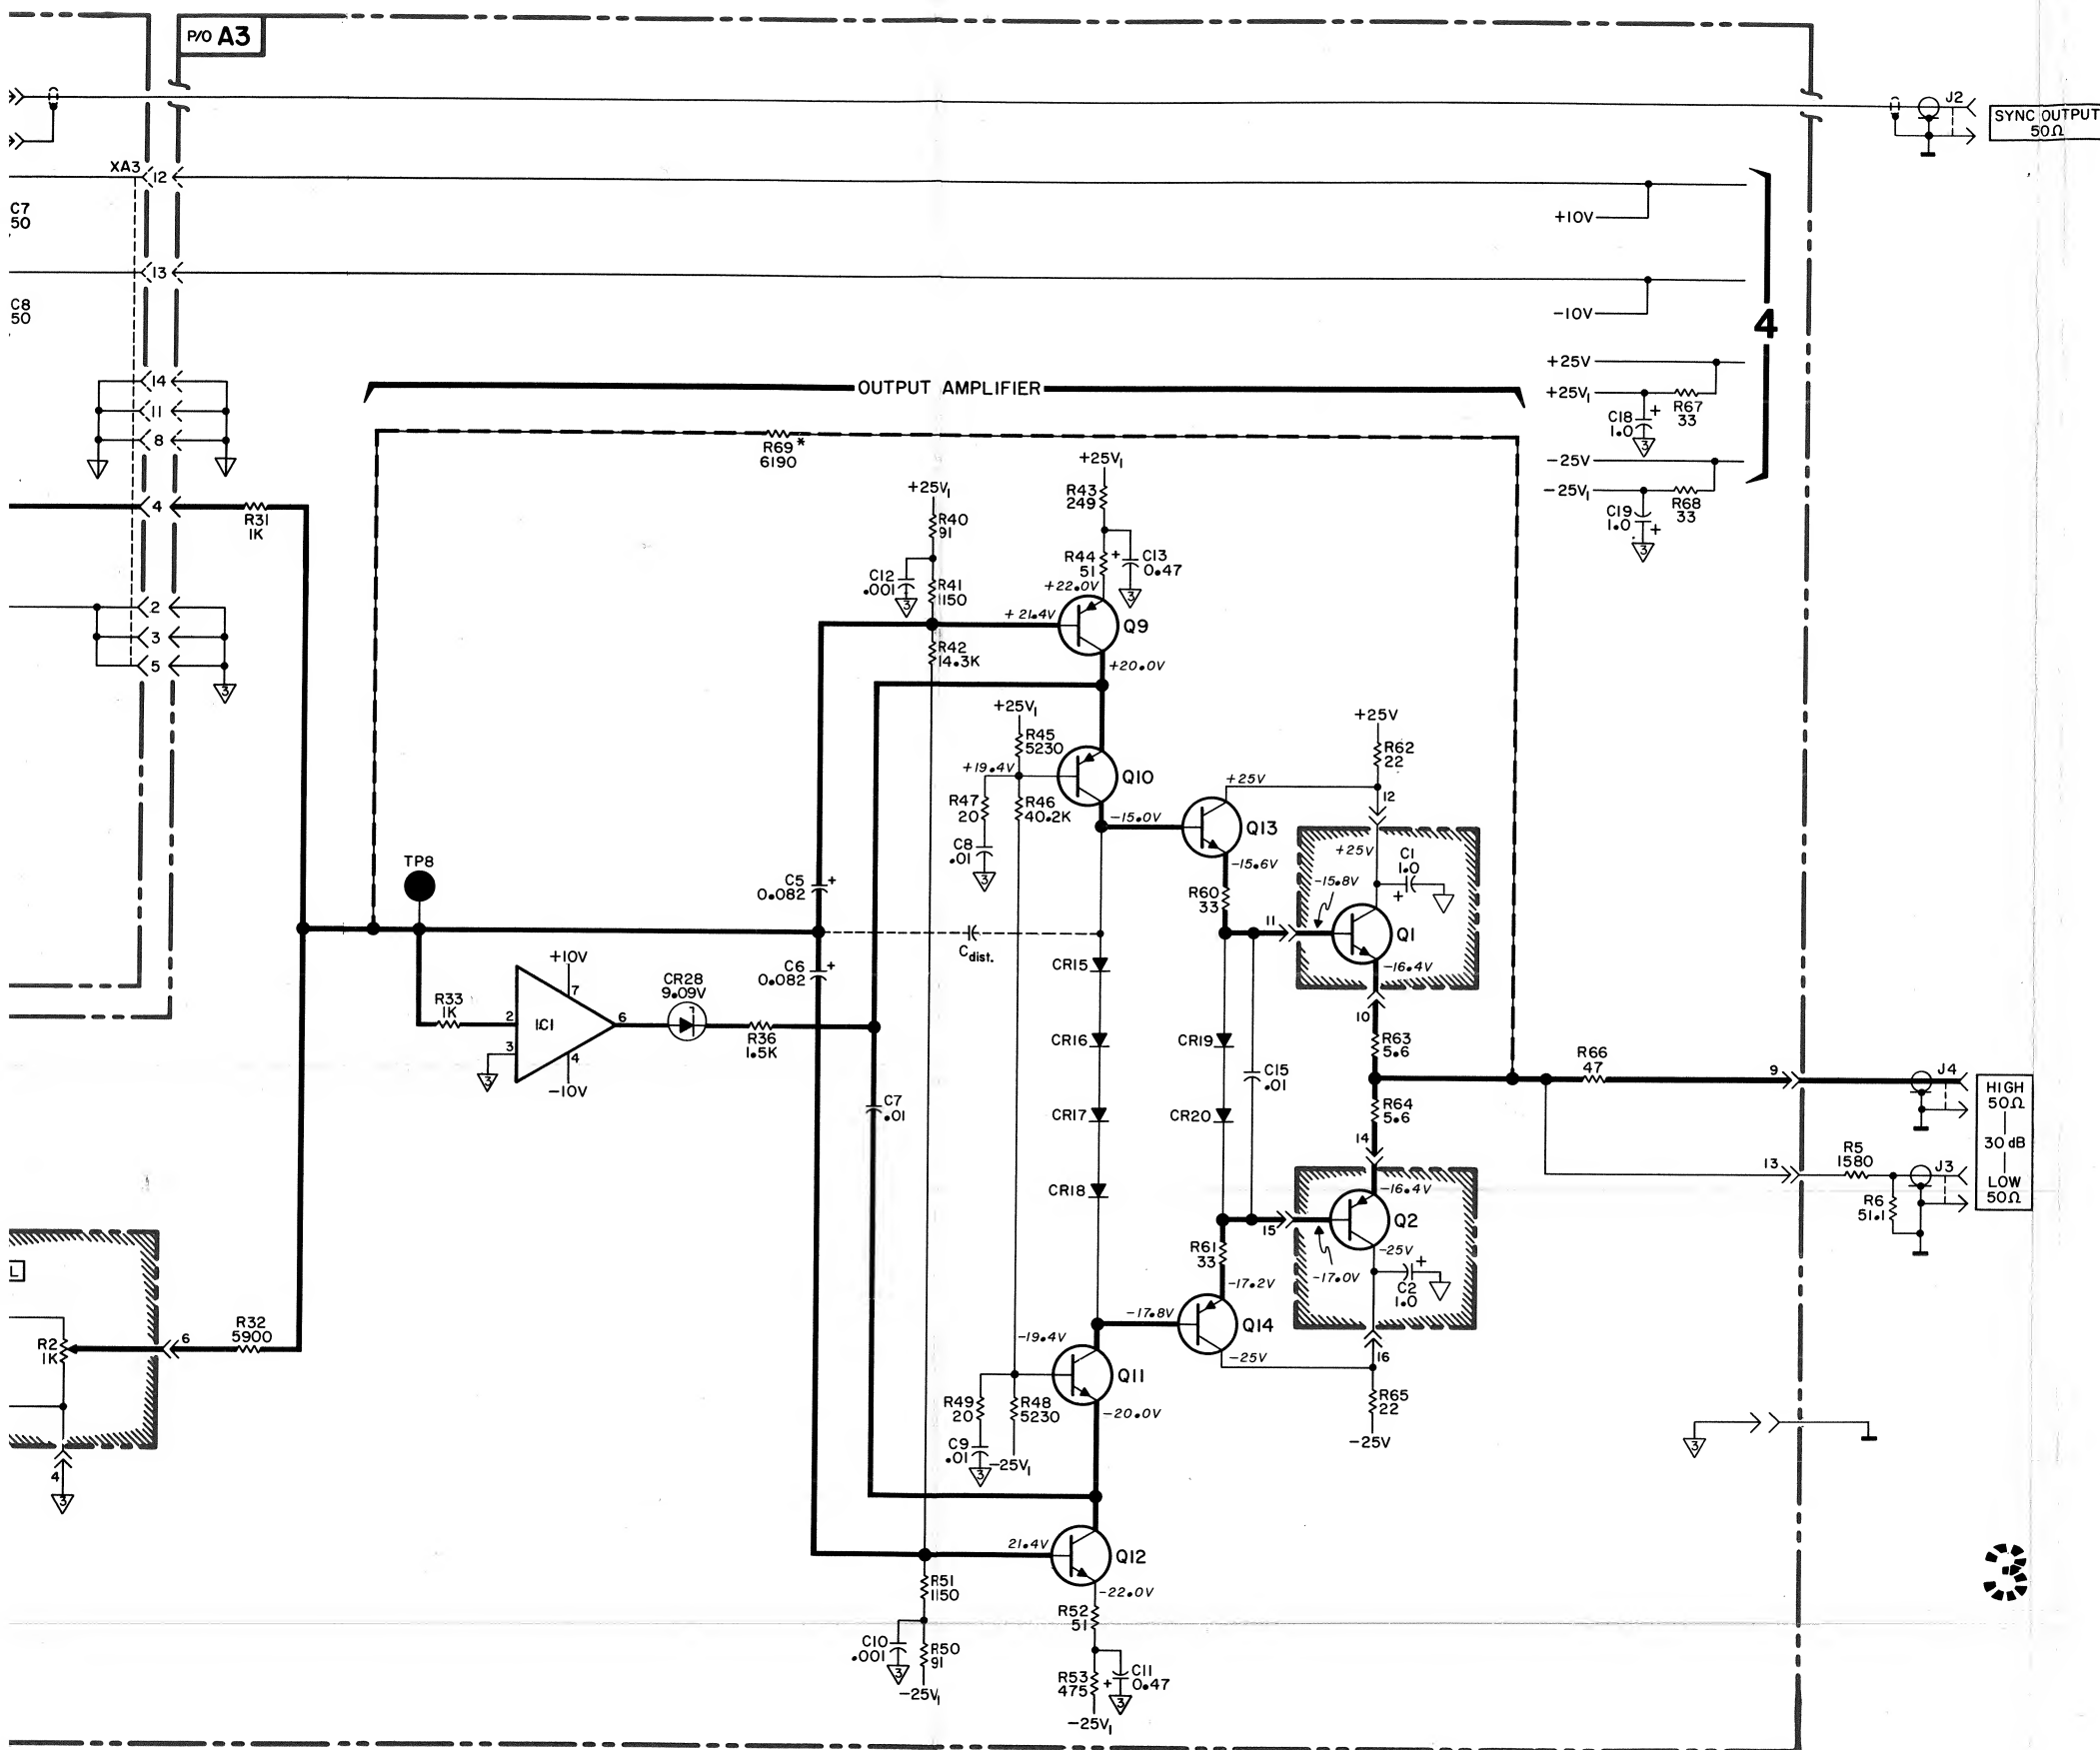

NOTE  
For S/N 0947A02851  
through S/N 1048A03650 see  
backdating notes on apron  
page of this figure.

#### NOTES

##### 1. d.c. voltage measurement conditions:

Freq. dial ..... 50  
RANGE ..... 100  
D.C. OFFSET LEVEL ..... 0  
OUTPUT LEVEL ..... full CW  
FUNCTION ..... TRI  
EXT. GATE drive ..... 1 to 30 V peak, 1 kHz,  
square wave (3310B Tone Burst operation only)

##### 2. A Model 427A VM should be used for d.c. voltage measurement. Voltages < .1 V were considered 0 V.

##### 3. Unless otherwise noted waveforms were checked under these conditions:


Freq. dial ..... 10  
RANGE ..... X10K  
Offset Level ..... 0  
FUNCTION ..... SINE  
OUTPUT LEVEL ..... 1/2 of max  
Load ..... open circuit  
START/STOP PHASE ..... 1/2 of max  
(3310B only)  
EXT. GATE drive ..... 2.5 V rms sine wave  
(3310B only)


##### 4. A Model 180A Oscilloscope with a 10:1 divider probe was used for waveform checks.

##### 5. When checking waveforms on high freq. level det. set RANGE to X100K instead of X10K. The waveforms shown here are only approximate since they are somewhat affected by stray capacity (i.e. lead placement, etc.)

##### 6. When checking d.c. levels on low freq. feedback amp. set range to X1 instead of X100.


##### 7. All voltages given on schematic are $\pm 10\%$ unless otherwise noted.

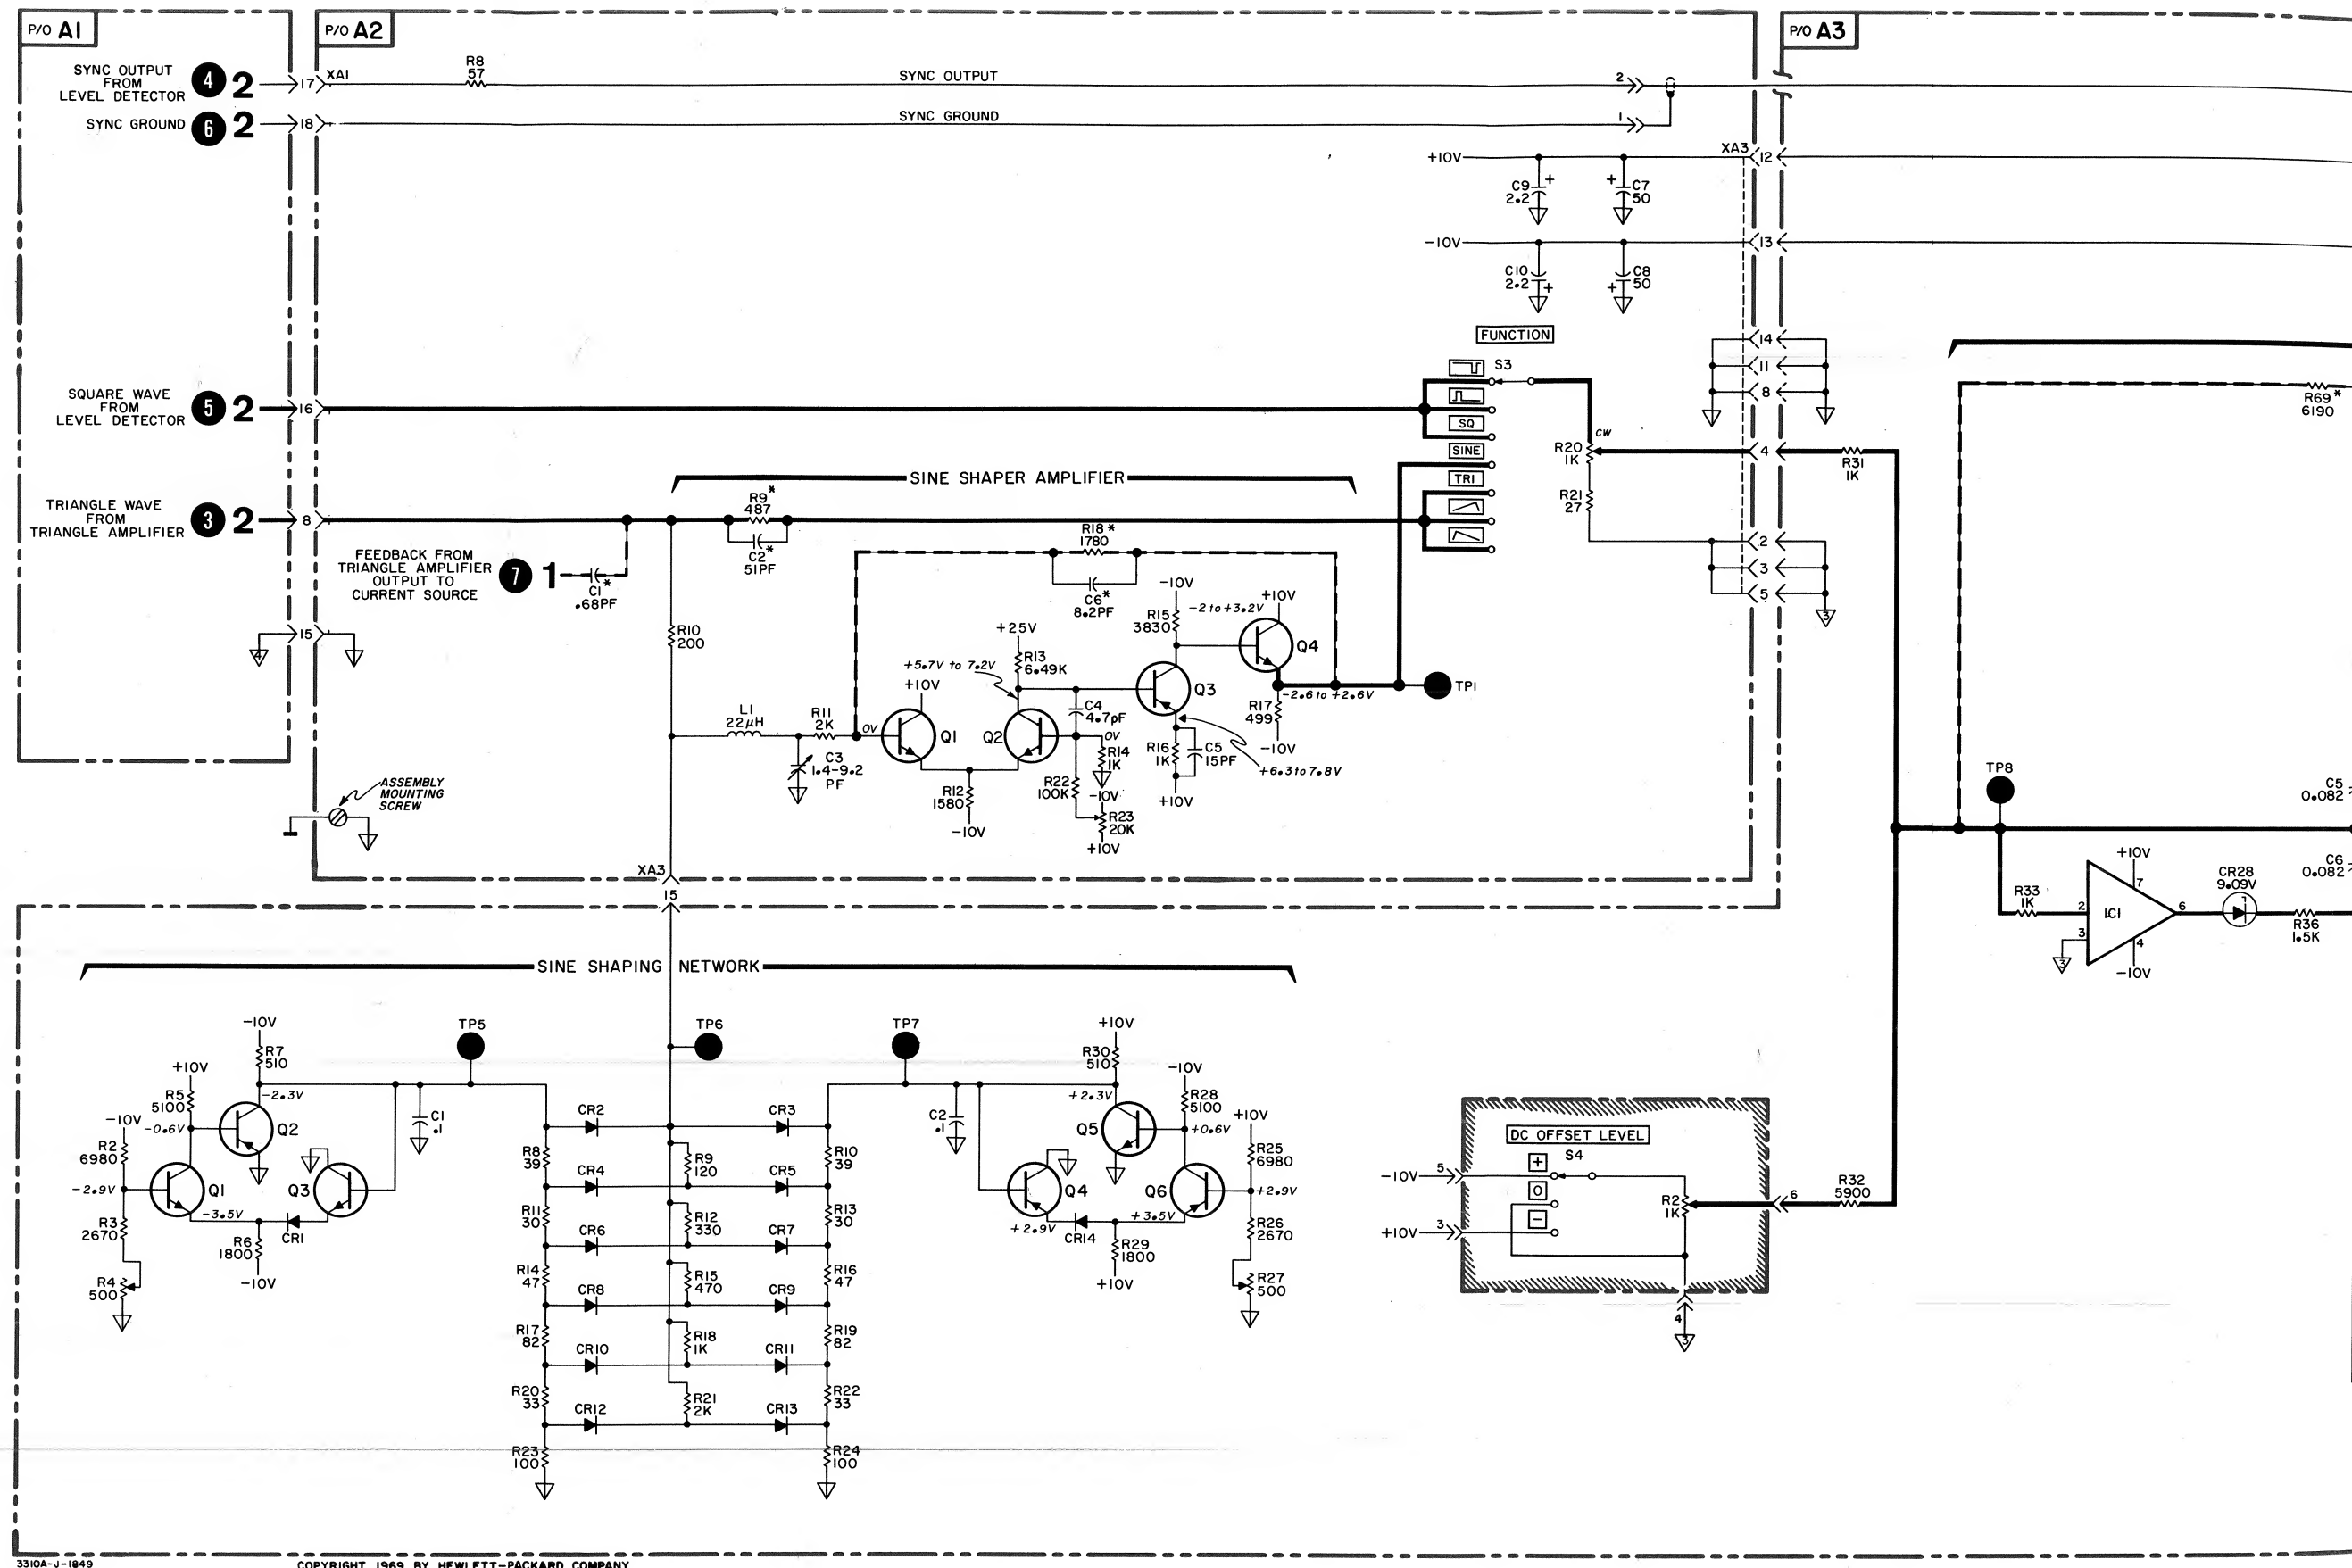

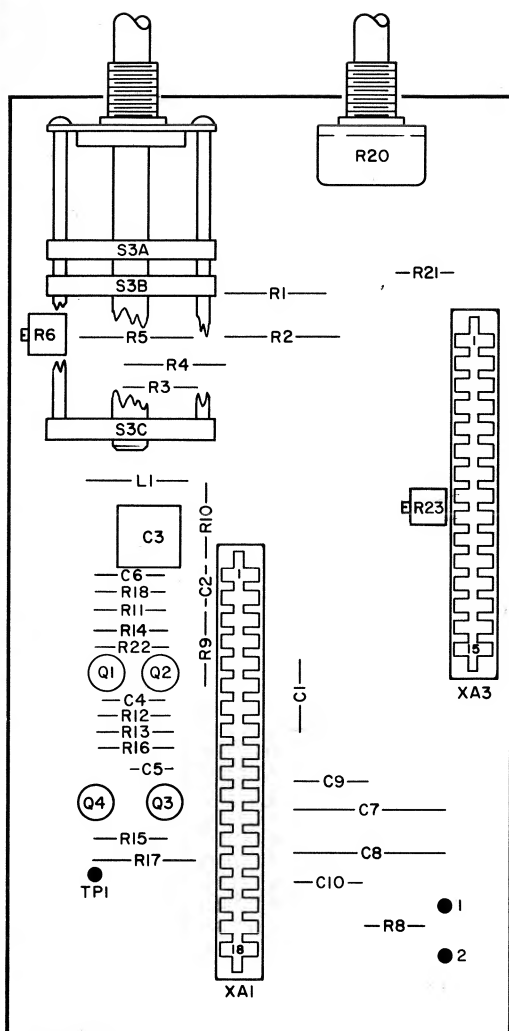

3310A-B-1936A

**A2**  
hp Part No. 03310-66502  
Rev B

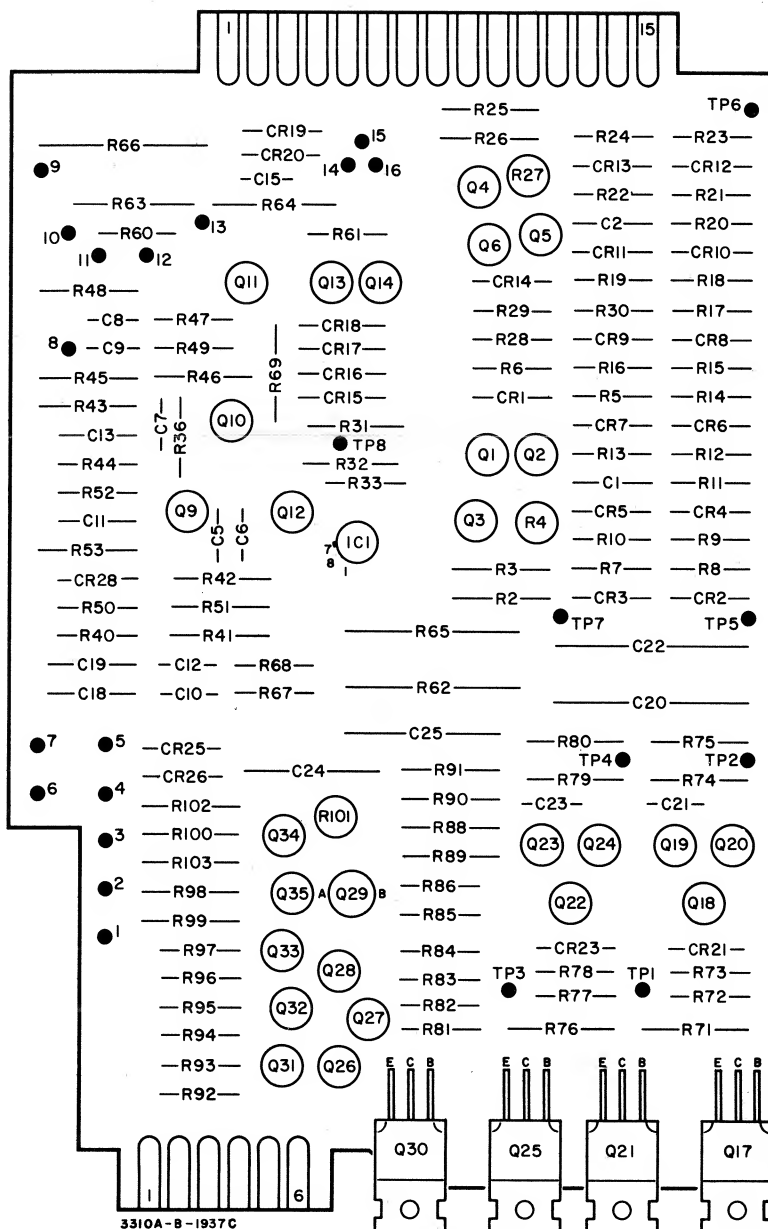

3310A-B-1937C

**A3**  
hp Part No. 03310-66503  
Rev C

#### BACKDATING NOTES

(Serial No.'s 0947A02851 through 1048A03650)

1. Change value of A3R62, A3R65, and A3R66 to 39 ohms.
2. Change value of A3R72 and A3R77 to 62 ohms.
3. Change value of A3R32 and A3R69 to 5.49 k $\Omega$  and 5.76 k $\Omega$ , respectively.
4. On Schematic No. 4, add diode, A3CR29, between the

base and emitter of A3Q35;  
cathode toward base.

5. Add the following part numbers.

Reference Designator	-hp- Part No.	Description
A3CR29	1901-0050	Diode
A7	03310-60610	Assy, Zener Diode
A7CR1, CR2	1901-0050	Diode
A7CR3, CR4	1902-1200	Diode, breakdown 16 V
A7R1	0683-0825	Resistor, 8.2 $\Omega$
A7R2, R3	0684-1031	Resistor, 10 k $\Omega$

# NOTES

## 1. d.c. voltage measurement conditions:

Freq. dial .....50  
 RANGE .....100  
 D.C. OFFSET LEVEL .....0  
 OUTPUT LEVEL .....full CW  
 FUNCTION .....TRI  
 EXT. GATE drive .....1 to 30 V peak, 1 kHz,  
 square wave (3310B Tone Burst operation only)

## 2. A Model 427A VM should be used for d.c. voltage measurement. Voltages < .1 V were considered 0 V.

## 3. Unless otherwise noted waveforms were checked under these conditions:


Freq. dial .....10  
 RANGE .....X10K  
 Offset Level .....0  
 FUNCTION .....SINE  
 OUTPUT LEVEL .....1/2 of max  
 Load .....open circuit  
 START/STOP PHASE .....1/2 of max  
 (3310B only)  
 EXT. GATE drive .....2.5 V rms sine wave  
 (3310B only)


## 4. A Model 180A Oscilloscope with a 10:1 divider probe was used for waveform checks.

## 5. When checking waveforms on high freq. level det. set RANGE to X100K instead of X10K. The waveforms shown here are only approximate since they are somewhat affected by stray capacity (i.e. lead placement, etc.)


## 6. When checking d.c. levels on low freq. feedback amp. set range to X1 instead of X100.

## 7. All voltages given on schematic are $\pm 10\%$ unless otherwise noted.

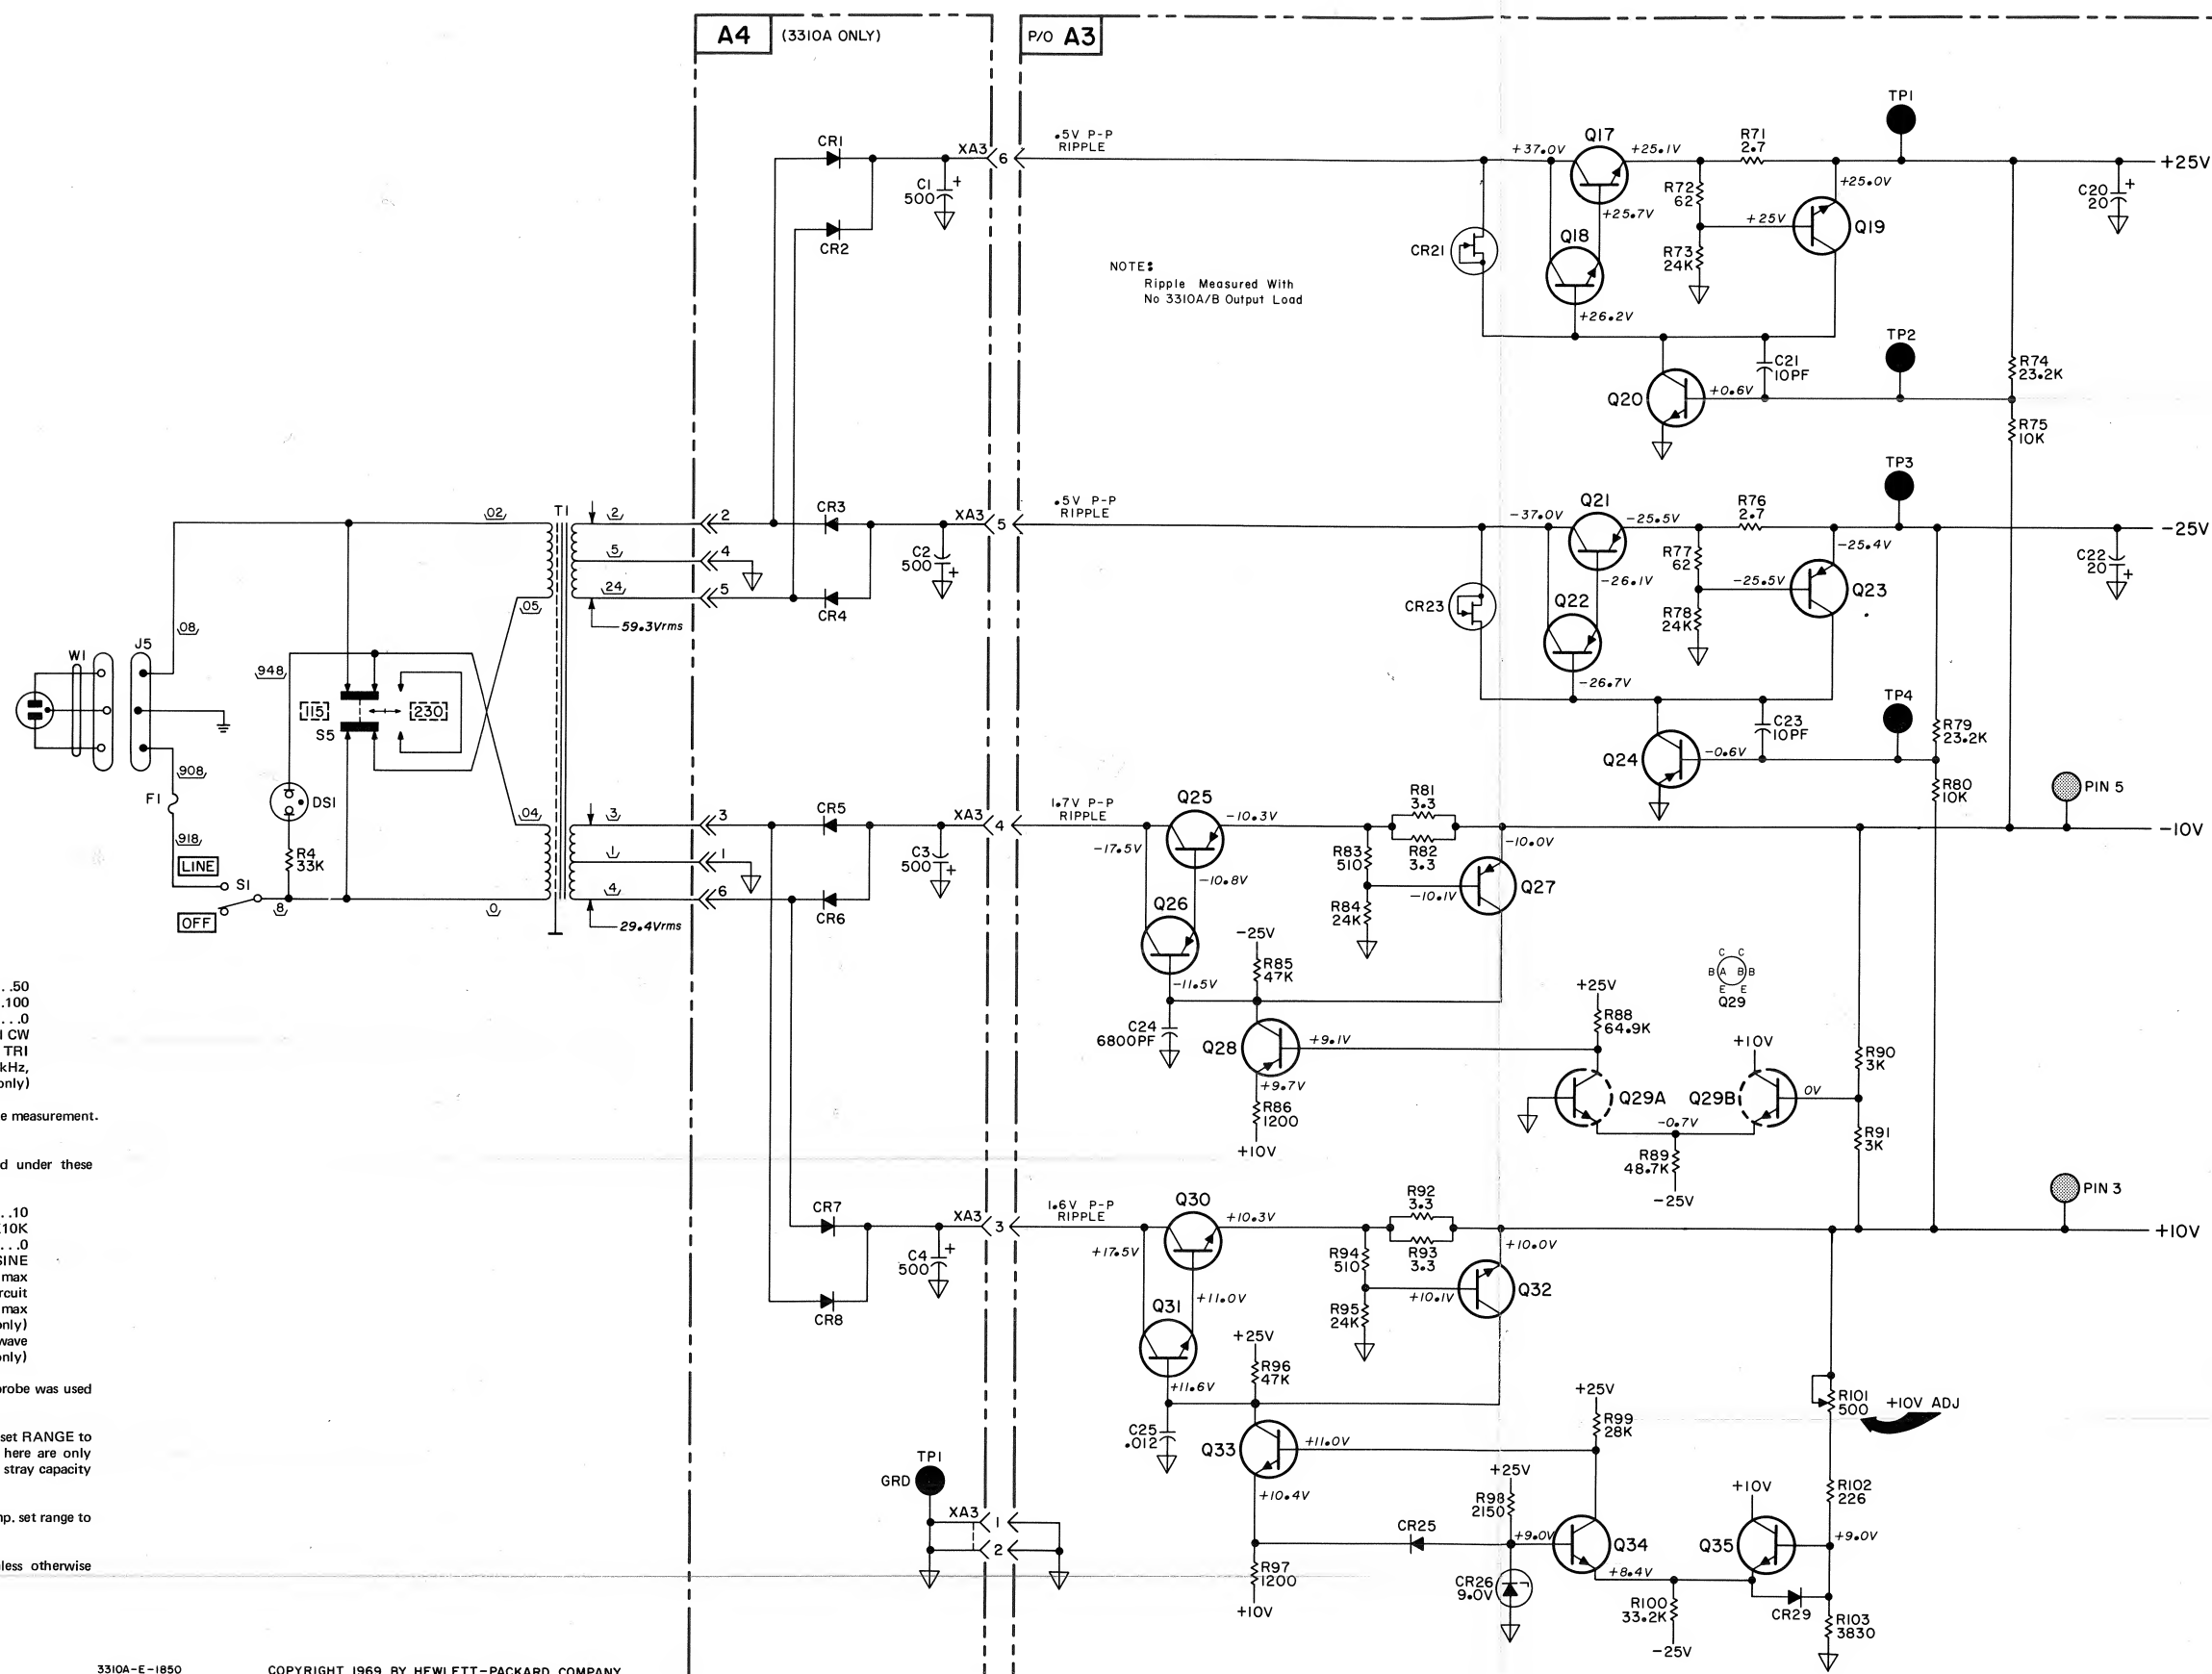


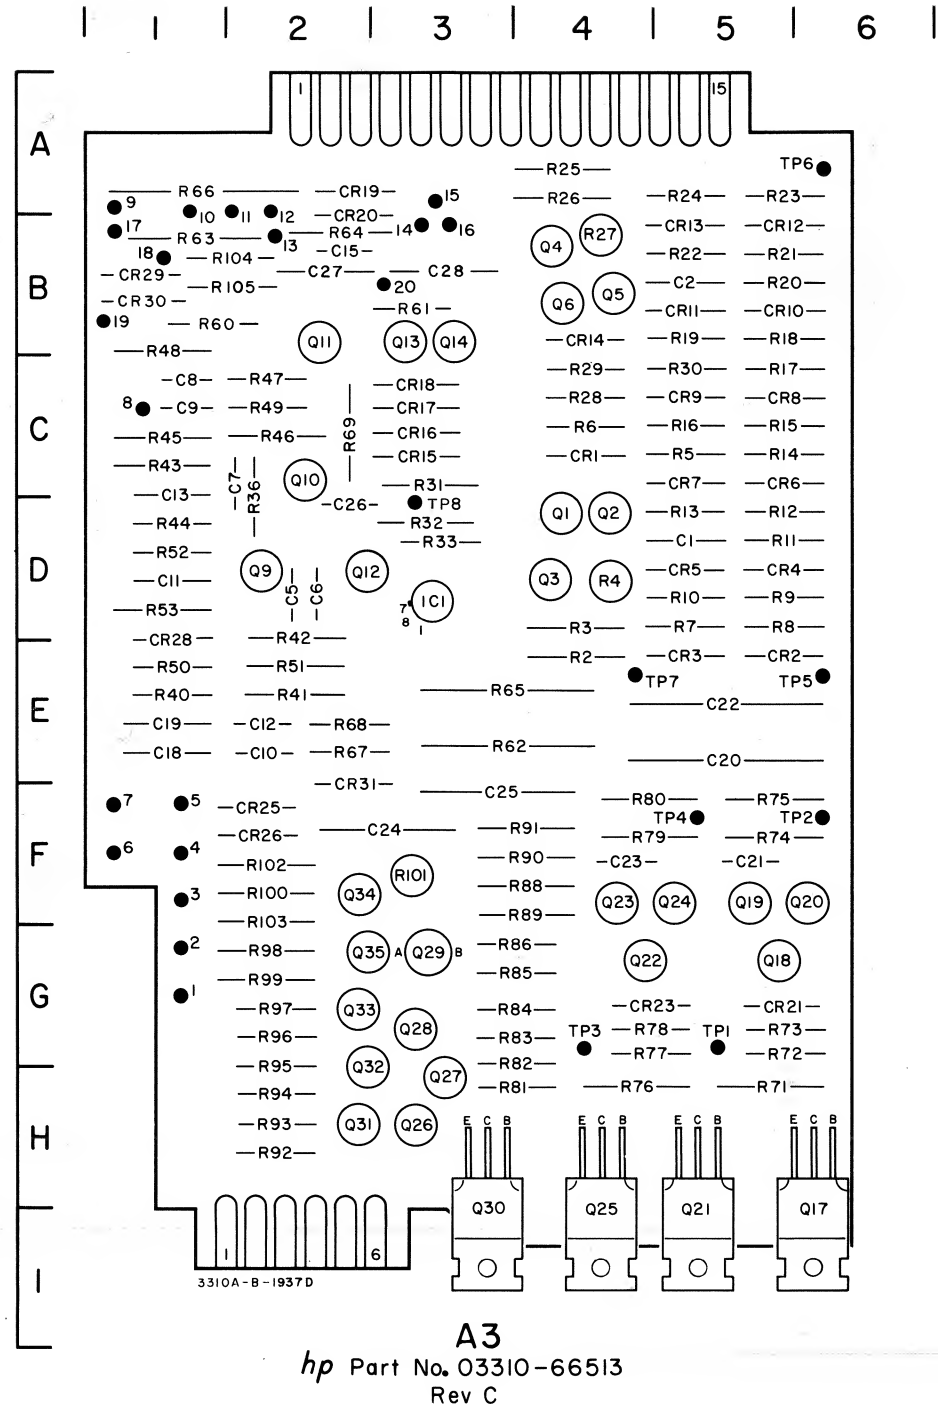




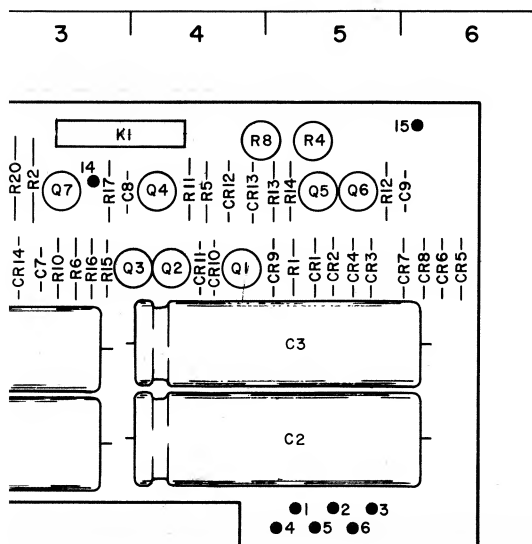

A5  
p Part No. 03310-66505


- NOTES**
- d.c. voltage measurement conditions:  
 Freq. dial ..... 50  
 RANGE ..... 100  
 D.C. OFFSET LEVEL ..... 0  
 OUTPUT LEVEL ..... full CW  
 FUNCTION ..... TRI  
 EXT. GATE drive ..... 1 to 30 V peak, 1 kHz, square wave (3310B Tone Burst operation only)
  - A Model 427A VM should be used for d.c. voltage measurement. Voltages < .1 V were considered 0 V.
  - Unless otherwise noted waveforms were checked under these conditions:  
 Freq. dial ..... 10  
 RANGE ..... X10K  
 Offset Level ..... 0  
 FUNCTION ..... SINE  
 OUTPUT LEVEL ..... 1/2 of max  
 Load ..... open circuit  
 START/STOP PHASE ..... 1/2 of max (3310B only)  
 EXT. GATE drive ..... 2.5 V rms sine wave (3310B only)
  - A Model 180A Oscilloscope with a 10:1 divider probe was used for waveform checks.
  - When checking waveforms on high freq. level det. set RANGE to X100K instead of X10K. The waveforms shown here are only approximate since they are somewhat affected by stray capacity (i.e. lead placement, etc.)
  - When checking d.c. levels on low freq. feedback amp. set range to X1 instead of X100.
  - All voltages given on schematic are  $\pm 10\%$  unless otherwise noted.

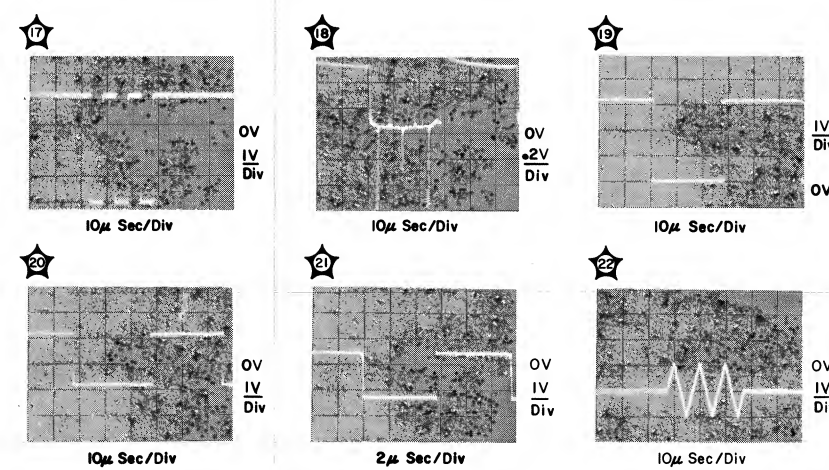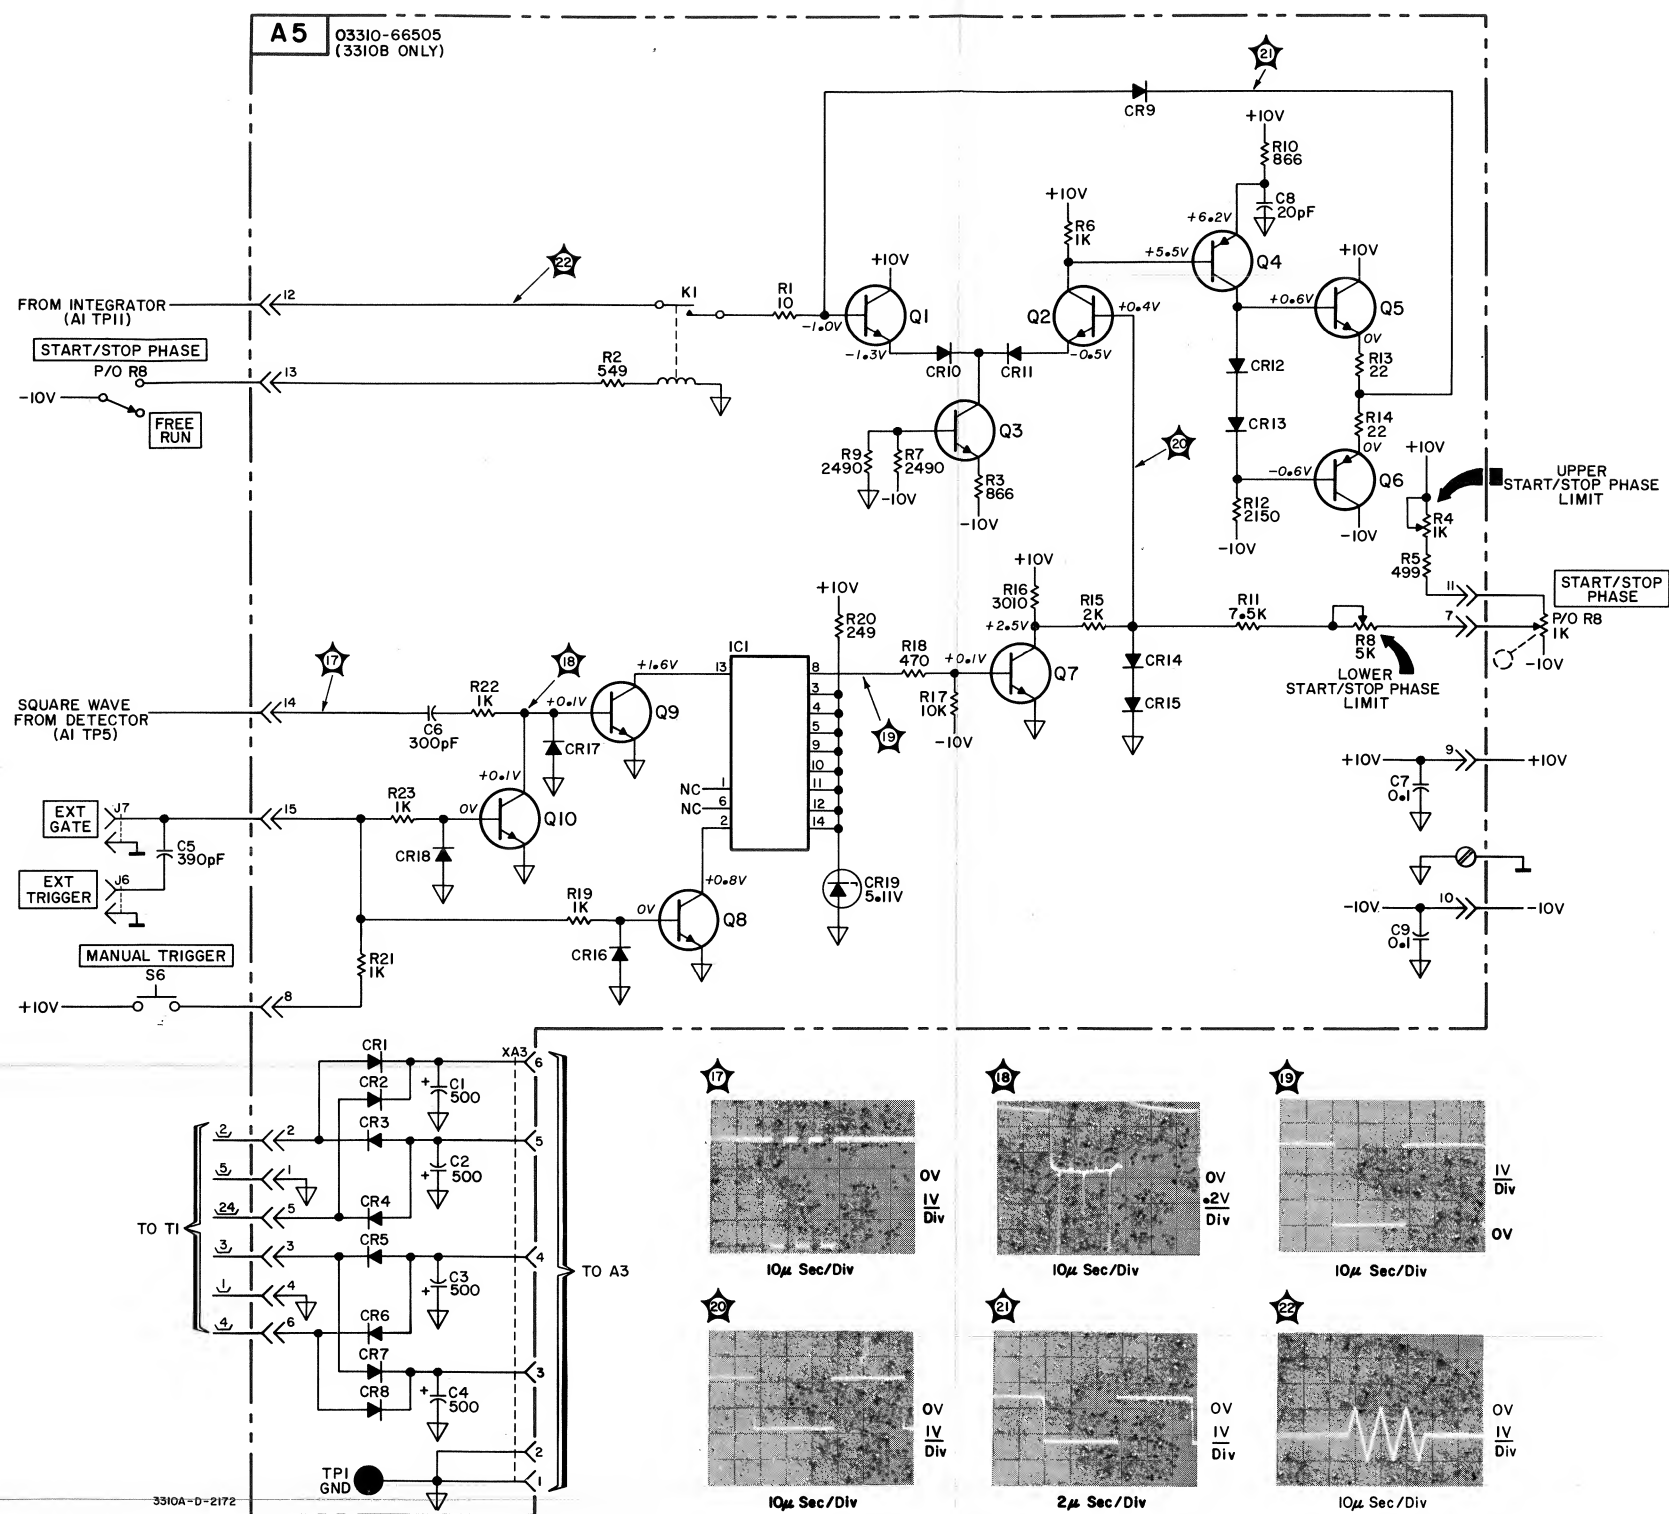




A5 Board Component Location.



	C	CR	K	Q	R	Pin
1	C2	B5	A3	B4	B5	D5
2	C5	B5		B4	A3	D5
3	B5	B5		B4	B2	D5
4	B2	B5		A4	A5	D5
5	A5	B6		A5	A4	D5
6	A2	B6		A5	B3	D5
7	B3	B6		A3	B2	A1
8	A3	B6		A1	A4	A2
9	A6	B5		A2	B1	A1
10		B4		A1	B3	A2
11		B4			A4	A2
12		A4			A5	A2
13		A4			A5	A2
14		B3			A5	A3
15		B3			B3	A6
16		B1			B3	
17		B1			A3	
18		B1			A2	
19		B2			A2	
20					A3	
21					A2	
22					A2	
23					A2	

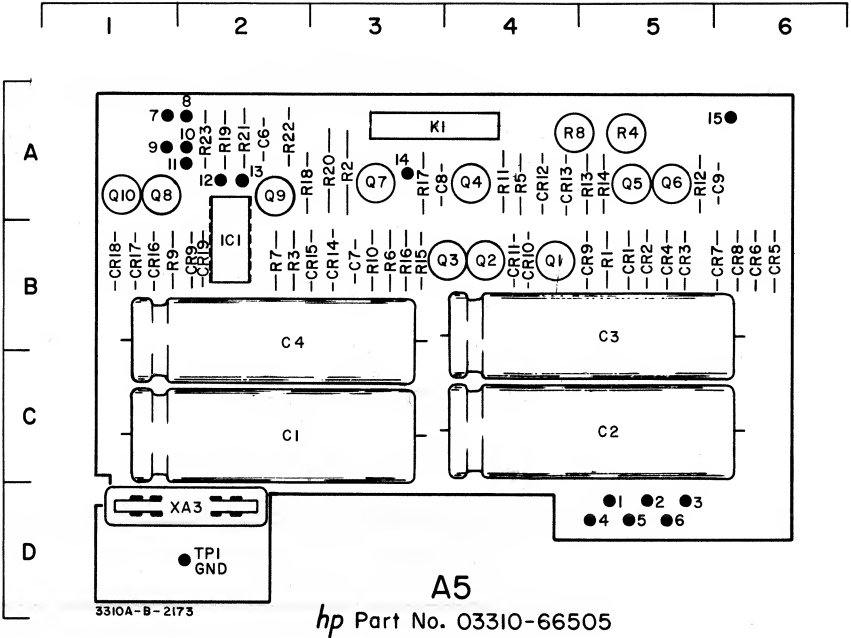




NOTES

- d.c. voltage measurement conditions:  
Freq. dial .....50  
RANGE .....100  
D.C. OFFSET LEVEL .....0  
OUTPUT LEVEL .....full CW  
FUNCTION .....TRI  
EXT. GATE drive .....1 to 30 V peak, 1 kHz,  
square wave (3310B Tone Burst operation only)
- A Model 427A VM should be used for d.c. voltage measurement.  
Voltages < .1 V were considered 0 V.
- Unless otherwise noted waveforms were checked under these conditions:  
Freq. dial .....10  
RANGE .....X10K  
Offset Level .....0  
FUNCTION .....SINE  
OUTPUT LEVEL .....1/2 of max  
Load .....open circuit  
START/STOP PHASE .....1/2 of max  
(3310B only)  
EXT. GATE drive .....2.5 V rms sine wave  
(3310B only)
- A Model 180A Oscilloscope with a 10:1 divider probe was used for waveform checks.
- When checking waveforms on high freq. level det. set RANGE to X100K instead of X10K. The waveforms shown here are only approximate since they are somewhat affected by stray capacity (i.e. lead placement, etc.)
- When checking d.c. levels on low freq. feedback amp. set range to X1 instead of X100.
- All voltages given on schematic are  $\pm 10\%$  unless otherwise noted.

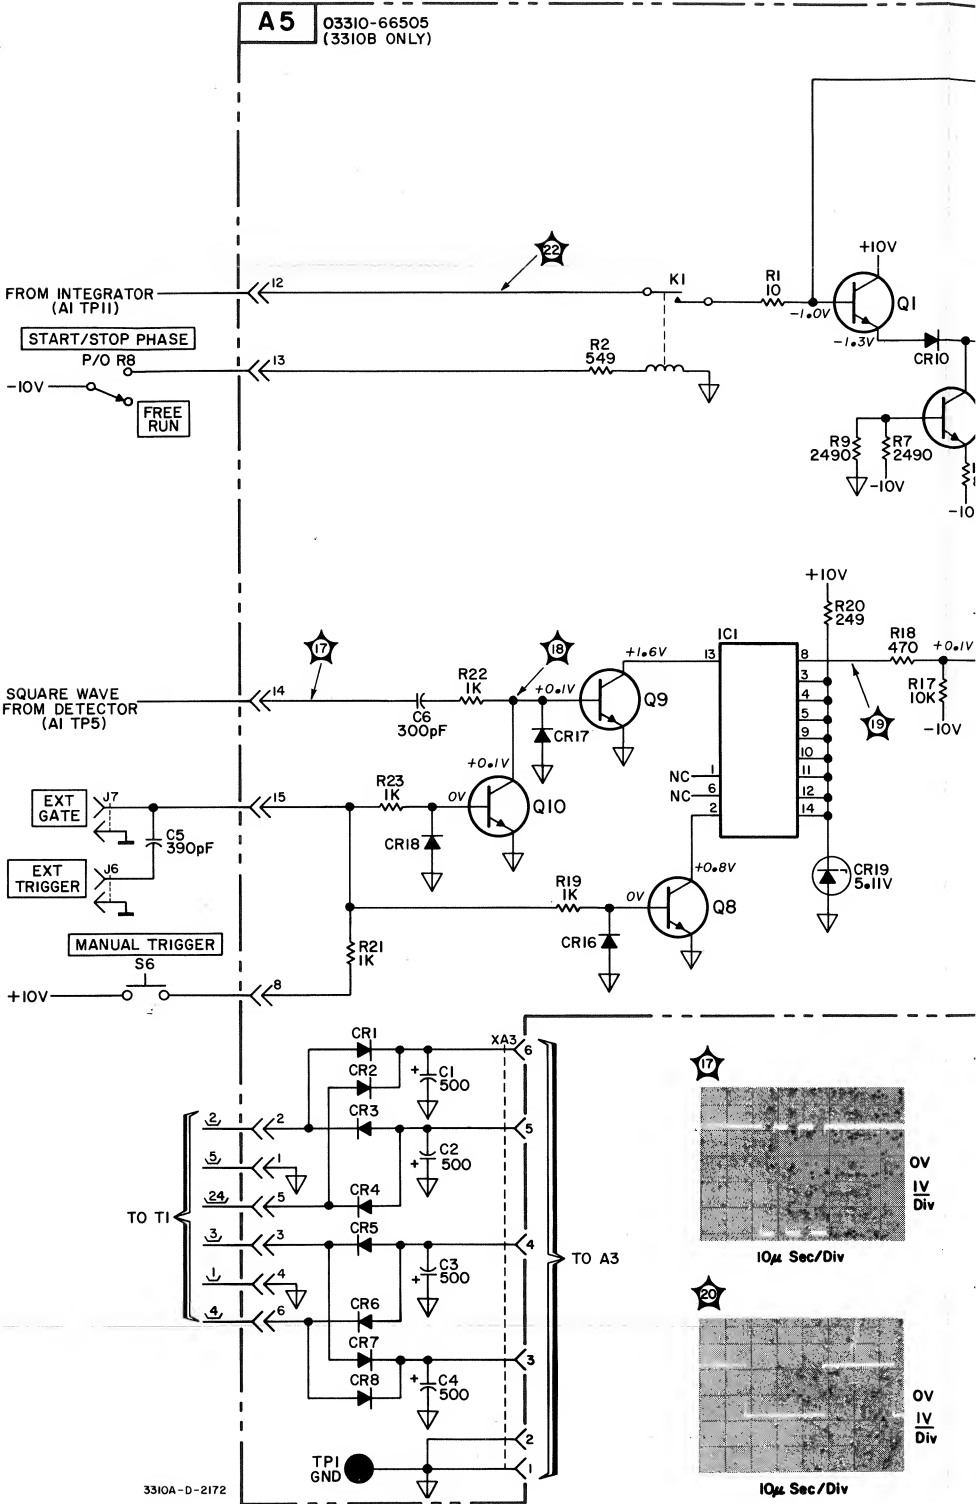


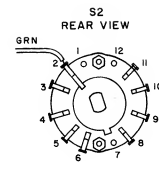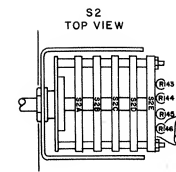









NOTE  
C(II) LETTER DESIGNATES WAFER  
NUMBER DESIGNATES PIN

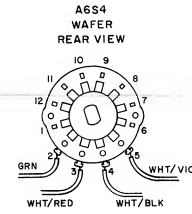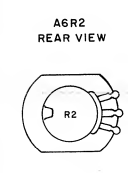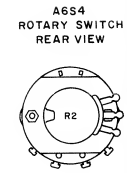

NOTE  
A6 ROTARY SWITCH SHOWN  
BROKEN TO INDIVIDUAL PARTS

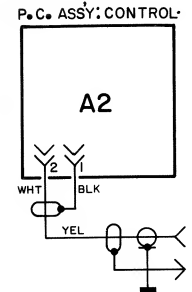

SYNC OUTPUT

  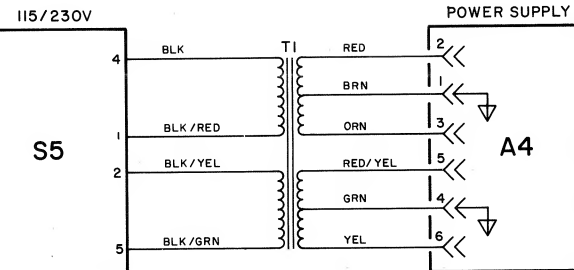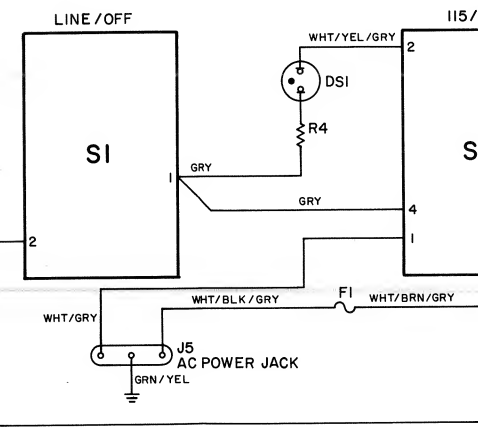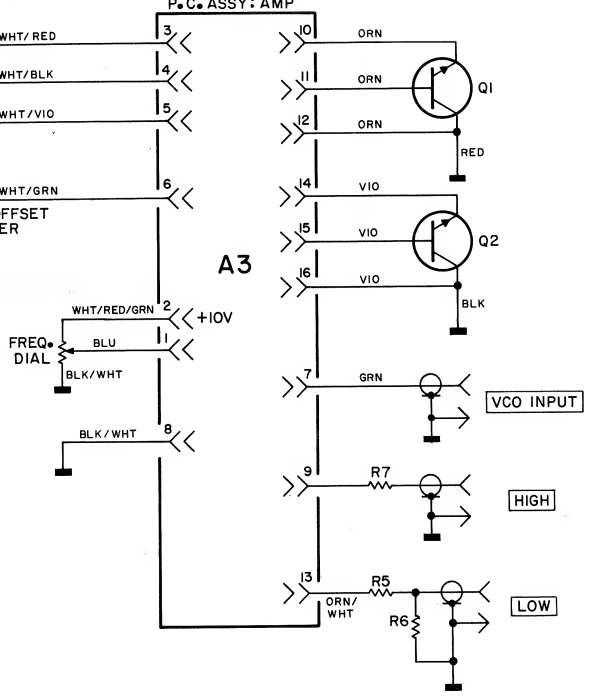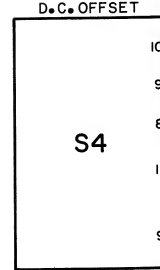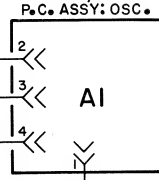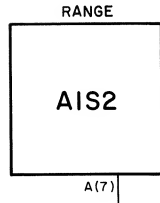

3310A-D-2425



## CODE LIST OF MANUFACTURERS

The following code numbers are from the Federal Supply Code for Manufacturers Cataloging Handbooks H4-1 (Name to Code) and H4-2 (Code to Name) and their latest supplements. The date of revision and the date of the supplements used appear at the bottom of each page. Alphabetical codes have been arbitrarily assigned to suppliers not appearing in the H4 Handbooks.

Code No.	Manufacturer	Address	Code No.	Manufacturer	Address	Code No.	Manufacturer	Address
00000	U. S. A Common . . . . .	Any supplier of U. S.	05347	Ultronix, Inc. . . . .	San Mateo, Cal.	11236	CTS of Berne, Inc. . . . .	Berne, Ind.
00136	McCoy Electronics . . . . .	Mount Holly Springs, Pa.	05397	Union Carbine Corp., Elect.		11237	Chicago Telephone of	
00213	Sage Electronics Corp. . . . .	Rochester, N. Y.		Div. . . . .	New York, N. Y.		California, Inc. . . . .	So. Pasadena, Cal.
00287	Cemco, Inc. . . . .	Danielson, Conn.	05574	Viking Ind. Inc. . . . .	Canoga Park, Cal.	11242	Bay State Electronics Corp. . . . .	Waltham, Mass.
00334	Humidial . . . . .	Colton, Calif.	05593	Icore Electro-Plastics Inc. . . . .	Sunnyvale, Cal.	11312	Teledyne Inc., Microwave	
00348	Mictron, Co., Inc. . . . .	Valley Stream, N. Y.	05616	Cosmo Plastic (c/o Electrical			Div. . . . .	Palo Alto, Cal.
00373	Garlock Inc. . . . .	Cherry Hill, N. J.		Spec. Co.) . . . . .	Cleveland, Ohio	11314	National Seal . . . . .	Downey, Cal.
00656	Aerovox Corp. . . . .	New Bedford, Mass.	05624	Barber Colman Co. . . . .	Rockford, Ill.	11453	Precision Connector Corp. . . . .	Jamaica, N. Y.
00779	Amp. Inc. . . . .	Harrisburg, Pa.	05728	Tiffen Optical Co. . . . .		11534	Duncan Electronics Inc. . . . .	Costa Mesa, Cal.
00781	Aircraft Radio Corp. . . . .	Boonton, N. J.		. . . . . Roslyn Heights, Long Island, N. Y.		11711	General Instrument Corp.,	
00809	Croven, Ltd. . . . .	Whitby, Ontario, Canada	05729	Metro-Tel Corp. . . . .	Westbury, N. Y.		Semiconductor Division Products	
00815	Northern Engineering		05783	Stewart Engineering Co. . . . .	Santa Cruz, Cal.		Group . . . . .	Newark, N. J.
	Laboratories, Inc. . . . .	Burlington, Wis.	05820	Wakefield Engineering Inc. . . . .	Wakefield, Mass.	11717	Imperial Electronic, Inc. . . . .	Buena Park, Cal.
00853	Sangamo Electric Co.,		06004	Bassick Co., Div. of Stewart		11870	Melabs, Inc. . . . .	Palo Alto, Cal.
	Pickens Div. . . . .	Pickens, S. C.	06090	Raychem Corp. . . . .	Redwood City, Cal.	12136	Philadelphia Handle Co. . . . .	Camden, N. J.
00866	Goe Engineering Co. . . . .	City of Industry, Cal.	06175	Bausch and Lomb Optical		12361	Grove Mfg. Co., Inc. . . . .	Shady Grove, Pa.
00891	Carl E. Holmes Corp. . . . .	Los Angeles, Cal.		Co. . . . .	Rochester, N. Y.	12574	Gulton Ind. Inc., Data System	
00929	Microlab Inc. . . . .	Livingston, N. J.	06402	E. T. A. Products Co. of			Div. . . . .	Albuquerque, N. M.
01002	General Electric Co.,			America . . . . .	Chicago, Ill.	12697	Clarostat Mfg. Co. . . . .	Dover, N. H.
	Capacitor Dept. . . . .	Hudson Falls, N. Y.	06540	Amatom Electronic Hardware		12728	Elmar Filter Corp. . . . .	W. Haven, Conn.
01009	Alden Products Co. . . . .	Brockton, Mass.		Co., Inc. . . . .	New Rochelle, N. Y.	12859	Nippon Electric Co., Ltd. . . . .	Tokyo, Japan
01121	Allen Bradley Co. . . . .	Milwaukee, Wis.	06555	Beebe Electrical Instrument		12881	Metex Electronics Corp. . . . .	Clark, N. J.
01255	Litton Industries, Inc. . . . .	Beverly Hills, Cal.		Co., Inc. . . . .	Penacook, N. H.	12930	Delta Semiconductor Inc. . . . .	Newport Beach, Cal.
01281	TRW Semiconductors, Inc. . . . .	Lawndale, Cal.	06666	General Devices Co., Inc. . . . .	Indianapolis, Ind.	12954	Dickson Electronics Corp. . . . .	Scottsdale, Arizona
01295	Texas Instruments, Inc.,		06751	Components Inc., Ariz. Div. . . . .	Phoenix, Arizona	13019	Aircro Supply Co., Inc. . . . .	Wichita, Kansas
	Transistor Products Div. . . . .	Dallas, Texas	06812	Torrington Mfg. Co., West Div. . . . .	San Nuy, Cal.	13061	Wilco Products . . . . .	Detroit, Mich.
01349	The Alliance Mfg. Co. . . . .	Alliance, Ohio	06980	Varian Assoc. Etmac Div. . . . .	San Carlos, Cal.	13103	Thermolloy . . . . .	Dallas, Texas
01538	Small Parts Inc. . . . .	Los Angeles, Cal.	07088	Kelvin Electric Co. . . . .	Van Nuys, Cal.	13327	Soliton Devices Inc. . . . .	Tappan, N. Y.
01589	Pacific Relays, Inc. . . . .	Van Nuys, Cal.	07126	Digitran Co. . . . .	Pasadena, Cal.	13396	Telefunken (GmbH) . . . . .	Hanover, Germany
01670	Gudebrod Bros. Silk Co. . . . .	New York, N. Y.	07137	Transistor Electronics		13835	Midland-Wright Div. of	
01930	Amerock Corp. . . . .	Rockford, Ill.		Corp. . . . .	Minneapolis, Minn.		Pacific Industries, Inc. . . . .	Kansas City, Kansas
01960	Pulse Engineering Co. . . . .	Santa Clara, Cal.	07138	Westinghouse Electric		14099	Sem-Tech . . . . .	Newbury Park, Cal.
02114	Ferrocube Corp. of			Corp., Electronic Tube Div. . . . .	Elmira, N. Y.	14193	Calif. Resistor Corp. . . . .	Santa Monica, Cal.
	America . . . . .	Saugerties, N. Y.	07149	Filmohm Corp. . . . .	New York, N. Y.	14298	American Components, Inc. . . . .	Conshohocken, Pa.
02116	Wheelock Signals, Inc. . . . .	Long Branch, N. J.	07233	Cinch-Graphik Co. . . . .	City of Industry, Cal.	14433	ITT Semiconductor, a Div. of	
02286	Cole Rubber and Plastics Inc. . . . .	Sunnyvale, Cal.	07256	Silicon Transistor Corp. . . . .	Carle Place, N. Y.		Int. Telephone and Telegraph	
02660	Amphenol-Borg Electronics		07261	Avnet Corp. . . . .	Culver City, Cal.		Corporation . . . . .	West Palm Beach, Fla.
	Corp. . . . .	Broadview, Ill.	07263	Fairchild Camera & Inst. Corp.,		14493	Hewlett-Packard Company. . . . .	Loveland, Colo.
02735	Radio Corp. of America, Semi-			conductor and Materials		14655	Cornell Dublier Electric Corp. . . . .	Newark, N. J.
	Division . . . . .	Somerville, N. J.	07322	Minnesota Rubber Co. . . . .	Minneapolis, Minn.	14674	Corning Glass Works . . . . .	Corning, N. Y.
02771	Vocaline Co. of America,		07387	Birther Corp, The . . . . .	Monterey Park, Cal.	14752	Electro Cube Inc. . . . .	San Gabriel, Cal.
	Inc. . . . .	Old Saybrook, Conn.	07397	Sylvania Elect. Prod. Inc.,		14960	Williams Mfg. Co. . . . .	San Jose, Cal.
				Mt. View Operations . . . . .	Mountain View, Cal.	15106	The Sphere Co., Inc. . . . .	Little Falls, N. J.
02777	Hopkins Engineering Co. . . . .	San Fernando, Cal.	07700	Technical Wire Products		15203	Webster Electronics Co. . . . .	New York, N. Y.
02875	Hudson Tool & Die . . . . .	Newark, N. J.		Inc. . . . .	Cranford, N. J.	15287	Scionics Corp. . . . .	Northridge, Cal.
03296	Nylon Molding Corp. . . . .	Springfield, N. J.	07829	Bodine Elect. Co. . . . .	Chicago, Ill.	15291	Adjustable Bushing Co. . . . .	N. Hollywood, Cal.
03508	G. E. Semiconductor Prod.		07910	Continental Device Corp. . . . .	Hawthorne, Cal.	15558	Micron Electronics. Garden City, Long Island, N. Y.	
	Dept. . . . .	Syracuse, N. Y.	07933	Raytheon Mfg. Co., Semi-		15566	Amprobe Inst. Corp. . . . .	Lyndbrook, N. Y.
03705	Apex Machine & Tool Co. . . . .	Dayton, Ohio		conductor Div. . . . .	Mountain View, Cal.	15631	Cabletronics . . . . .	Costa Mesa, Cal.
03797	Eldema Corp. . . . .	Compton, Calif.	07980	Hewlett-Packard Co.,		15772	Twentieth Century Coil	
03818	Parker Seal Co. . . . .	Los Angeles, Cal.		New Jersey Division . . . . .	Rockaway, N. J.		Spring Co. . . . .	Santa Clara, Cal.
03877	Transitron Electric Corp. . . . .	Wakefield, Mass.	08145	U. S. Engineering Co. . . . .	Los Angeles, Cal.	15801	Fenwal Elect. Inc. . . . .	Framingham, Mass.
03888	Pyrofilm Resistor Co.,		08289	Blinn, Delbert Co. . . . .	Pomona, Cal.	15818	Amelco Inc. . . . .	Mountain View, Cal.
	Inc. . . . .	Cedar Knolls, N. J.	08358	Burgess Battery Co. . . . .		16037	Spruce Pine Mica Co. . . . .	Spruce Pine, N. C.
03954	Singer Co., Diehl Div.,			Niagara Falls, Ontario, Canada		16179	Omni-Spectra Inc. . . . .	Detroit, Ill.
	Finderne Plant . . . . .	Sumerville, N. J.	08524	Deutsch Fastener Corp. . . . .	Los Angeles, Cal.	16352	Computer Diode Corp. . . . .	Lodi, N. J.
04009	Arrow, Hart and Hegeman		08664	Bristol Co., The . . . . .	Waterbury, Conn.	16554	Electroid Co. . . . .	Union, N. J.
	Elect. Co. . . . .	Hartford, Conn.	08717	Sloan Company . . . . .	Sun Valley, Cal.	16585	Boots Aircraft Nut Corp. . . . .	Pasadena, Cal.
04013	Taruus Corp. . . . .	Lambertville, N. J.	08718	ITT Cannon Electric Inc.,		16688	Ideal Prec. Meter Co., Inc.,	
04062	Arco Electronic Inc. . . . .	Great Neck, N. Y.		Phoenix Div. . . . .	Phoenix, Arizona		De Jur Meter Div. . . . .	Brooklyn, N. Y.
04217	Essex Wire . . . . .	Los Angeles, Cal.	08727	National Radio Lab. Inc. . . . .	Paramus, N. J.	16758	Delco Radio Div. of G. M. Corp. . . . .	Kokomo, Ind.
04222	Hi-Q Division of Aerovox. . . . .	Myrtle Beach, S. C.	08792	CBS Electronics Semiconductor		17109	Thermometrics Inc. . . . .	Canoga Park, Cal.
04354	Precision Paper Tube Co. . . . .	Wheeling, Ill.		Operations, Div. of CBS Inc. . . . .	Lowell, Mass.	17474	Tranex Company . . . . .	Mountain View, Cal.
04404	Palo Alto Division of Hewlett-		08806	General Electric Co.,		17675	Hamlin Metal Products Corp. . . . .	Akron, Ohio
	Packard Co. . . . .	Palo Alto, Cal.		Miniature Lamp Dept. . . . .	Cleveland, Ohio	17745	Angstrom Prec. Inc. . . . .	No. Hollywood, Cal.
04651	Sylvania Electric Products,		08984	Mel-Rain . . . . .	Indianapolis, Ind.	17856	Siliconix Inc. . . . .	Sunnyvale, Cal.
	Microwave Device Div. . . . .	Mountain View, Cal.	09026	Babcock Relays Div. . . . .	Costa Mesa, Cal.	17870	McGraw-Edison Co. . . . .	Manchester, N. H.
04673	Dakota Engr. Inc. . . . .	Culver City, Cal.	09097	Electronic Enclosures Inc. . . . .	Los Angeles, Calif.	18042	Power Design Pacific Inc. . . . .	Palo Alto, Cal.
04713	Motorola Inc. Semiconductor		09134	Texas Capacitor Co. . . . .	Houston, Texas	18083	Clevite Corp. Semiconductor Div. . . . .	Palo Alto, Cal.
	Prod. Div. . . . .	Phoenix, Arizona	09145	Tech. Ind. Inc. Atohm		18324	Signetics Corp. . . . .	Sunnyvale, Cal.
04732	Filtron Co., Inc. Western			Elect. . . . .	Burbank, Cal.	18476	Ty-Car Mfg. Co., Inc. . . . .	Holliston, Mass.
	Div. . . . .	Culver City, Cal.	09250	Electro Assemblies, Inc. . . . .	Chicago, Ill.	18486	TRW Elect. Comp. Div. . . . .	Des Plaines, Ill.
04773	Automatic Electric Co. . . . .	Northlake, Ill.	09353	C & K Components Inc. . . . .	Newton, Mass.	18565	Chomerics . . . . .	Plainville, Mass.
04796	Sequoia Wire Co. . . . .	Redwood City, Cal.	09569	Mallory Battery Co. of		18583	Curtis Instrument, Inc. . . . .	Mt. Kisco, N. Y.
04811	Precision Coil Spring Co. . . . .	El Monte, Cal.		Canada, Ltd. . . . .	Toronto, Ontario, Canada	18612	Vishay Instruments Inc. . . . .	Malvern, Pa.
04870	P. M. Motor Company. . . . .	Westchester, Ill.	09795	Pennsylvania Florocarbon. Clifton Heights, Penn.		18873	E. I. DuPont and Co., Inc. . . . .	Wilmington, Del.
04919	Component Mfg. Service		09922	Burdny Corp. . . . .	Norwalk, Conn.	18911	Durant Mfg. Co. . . . .	Milwaukee, Wis.
	Co. . . . .	W. Bridgewater, Mass.	10214	General Transistor Western		19315	The Bendix Corp., Navigation &	
05006	Twentieth Century Plastics,			Corp. . . . .	Los Angeles, Cal.		Control Div. . . . .	Teterboro, N. J.
	Inc. . . . .	Los Angeles, Cal.	10411	Ti-Tal, Inc. . . . .	Berkeley, Cal.	19500	Thomas A. Edison Industries,	
05277	Westinghouse Electric Corp.		10646	Carborundum Co. . . . .	Niagara Falls, N. Y.		Div. of McGraw-Edison . . . . .	West Orange, N. J.
	Semiconductor Dept. . . . .	Youngwood, Pa.				19589	Concoa . . . . .	Baldwin Park, Cal.

## CODE LIST OF MANUFACTURERS (Continued)

Code No.	Manufacturer	Address	Code No.	Manufacturer	Address	Code No.	Manufacturer	Address
19644	LRC Electronics	Horseheads, N. Y.	71482	C. P. Clare & Co.	Chicago, Ill.	78452	Thompson-Bremer & Co.	Chicago, Ill.
19701	Electra Mfg. Co.	Independence, Kansas	71590	Centralab Div. of		78471	Tilley Mfg. Co.	San Francisco, Cal.
20183	General Atronic Corp.	Philadelphia, Pa.		Globe Union Inc.	Milwaukee, Wis.	78488	Stackpole Carbon Co.	St. Marys, Pa.
21226	Executone, Inc.	Long Island City, N. Y.	71616	Commercial Plastics Co.	Chicago, Ill.	78493	Standard Thomson Corp.	Waltham, Mass.
21355	Fafnir Bearing Co., The	New Britain, Conn.	71700	Cornish Wire Co., The	New York, N. Y.	78553	Tinnerman Products, Inc.	Cleveland, Ohio
21520	Fansteel Metallurgical Corp.	N. Chicago, Ill.	71707	Coto Coil Co., Inc.	Providence, R. I.	78790	Transformer Engineers	San Gabriel, Cal.
23020	General Reed Co.	Metuchen, N. J.	71744	Chicago Miniature Lamp Works	Chicago, Ill.	78947	Ucinite Co.	Newtonville, Mass.
23042	Texscan Corp.	Indianapolis, Ind.	71785	Cinch Mfg. Co.,		79136	Waldes Kohinoor Inc.	Long Island City, N. Y.
23783	British Radio Electronics Ltd.	Washington, D.C.		Howard B. Jones Div.	Chicago, Ill.	79142	Veeder Root, Inc.	Hartford, Conn.
24455	G. E. Lamp Division, Nela Park,	Cleveland, Ohio	71984	Dow Corning Corp.	Midland, Mich.	79251	Wenco Mfg. Co.	Chicago, Ill.
24655	General Radio Co.	West Concord, Mass.	72136	Electro Motive Mfg. Co., Inc.		79727	Continental-Wirt Electronics Corp.	
24681	Memcor Inc., Comp. Div.	Huntington, Ind.			Willimantic, Conn.			Philadelphia, Pa.
26365	Gries Reproducer Corp.	New Rochelle, N. Y.	72619	Dialight Corp.	Brooklyn, N. Y.	79963	Zierick Mfg. Corp.	New Rochelle, N. Y.
26462	Grobert File Co. of America, Inc.	Carlstadt, N. J.	72656	Indiana General Corp.,		80031	Mepco Division of Sessions Clock Co.	
26851	Compac/Hollister Co.	Hollister, Cal.		Electronics Div.,	Keasby, N. J.			Morristown, N. J.
26992	Hamilton Watch Co.	Lancaster, Pa.	72699	General Instrument Corp.,		80033	Prestole Corp.	Toledo, Ohio
28480	Hewlett-Packard Co.	Palo Alto, Cal.		Cap Division	Newark, N. J.	80120	Schnitzer Alloy Products Co.	Elizabeth, N. J.
28520	Heyman Mfg. Co.	Kenilworth, N. J.	72765	Drake Mfg. Co.	Harwood Heights, Ill.	80131	Electronic Industries Association.	
30817	Instrument Specialties Co.,		72825	Hugh H. Eby Inc.	Philadelphia, Pa.		Standard tube or semi-conductor device,	
	Inc.	Little Falls, N. J.	72928	Gludeman Co.	Chicago, Ill.		any manufacturer.	
33173	G. E. Receiving Tube Dept.	Owensboro, Ky.	72962	Elastic Stop Nut Corp.	Union, N. J.	80207	Unimax Switch, Div. Maxon Electronics	
35434	Lectrohm Inc.	Chicago, Ill.	72964	Robert M. Hadley Co.	Los Angeles, Cal.		Corp.	Wallingford, Conn.
36196	Stanwyck Coil Products,		72982	Erie Technological Products, Inc.	Erie, Pa.	80223	United Transformer Corp.	New York, N. Y.
	Ltd.	Hawkesbury, Ontario, Canada	73061	Hansen Mfg. Co., Inc.	Princeton, Ind.	80248	Oxford Electric Corp.	Chicago, Ill.
36287	Cunningham, W. H. & Hill,		73076	H. M. Harper Co.	Chicago, Ill.	80294	Bourns Inc.	Riverside, Cal.
	Ltd.	Toronto, Ontario, Canada	73138	Helipot Div. of Beckman Inst., Inc.		80411	Arco Div. of Robertshaw Controls Co.	
37942	P. R. Mallory & Co., Inc.	Indianapolis, Ind.			Fullerton, Cal.			Columbus, Ohio
39543	Mechanical Industries Prod. Co.	Akron, Ohio	73293	Hughes Products Division of		80486	All Star Products Inc.	Defiance, Ohio
40920	Miniature Precision Bearings, Inc.	Keene, N. H.		Hughes Aircraft Co.	Newport Beach, Cal.	80509	Avery Label Co.	Monrovia, Cal.
40931	Honeywell Inc.	Minneapolis, Minn.	73445	Amperex Elect. Co.	Hicksville, L. I., N. Y.	80583	Hammillund Co., Inc.	Mars Hill, N. C.
42190	Muter Co.	Chicago, Ill.	73506	Bradley Semiconductor Corp.		80640	Stevens, Arnold, Co., Inc.	Boston, Mass.
43990	C. A. Norgren Co.	Englewood, Colo.			New Haven, Conn.	80813	Dimco Gray Co.	Dayton, Ohio
44655	Ohmite Mfg. Co.	Skokie, Ill.	73559	Carling Electric, Inc.	Hartford, Conn.	81030	International Inst. Inc.	Orange, Conn.
46384	Penn Eng. & Mfg. Corp.	Doylestown, Pa.	73586	Circle F Mfg. Co.	Trenton, N. J.	81073	Grayhill Co.	LaGrange, Ill.
47904	Polaroid Corp.	Cambridge, Mass.	73682	George K. Garrett Co.,		81095	Triad Transformer Corp.	Venice, Cal.
48620	Precision Thermometer &			Div. MSL Industries, Inc.	Philadelphia, Pa.	81312	Winchester Elec. Div. Litton Ind., Inc.	
	Inst. Co.	Southampton, Pa.	73734	Federal Screw Products, Inc.	Chicago, Ill.			Oakville, Conn.
49956	Microwave & Power Tube Div.	Waltham, Mass.	73743	Fischer Special Mfg. Co.	Cincinnati, Ohio	81349	Military Specification	
52090	Rowan Controller Co.	Westminster, Md.	73793	General Industries Co., The	Elyria, Ohio	81483	International Rectifier Corp.	El Segundo, Cal.
52983	HP Co., Med. Elec. Div.	Waltham, Mass.	73846	Goshen Stamping & Tool Co.	Goshen, Ind.	81541	Airpax Electronics, Inc.	Cambridge, Maryland
54294	Shallcross Mfg. Co.	Selma, N. C.	73899	JFD Electronics Corp.	Brooklyn, N. Y.	81860	Barry Controls, Div. Barry Wright Corp.	
55026	Simpson Electric Co.	Chicago, Ill.	73905	Jennings Radio Mfg. Corp.	San Jose, Cal.			Watertown, Mass.
55933	Sonotone Corp.	Elmsford, N. Y.	73957	Groove-Pin Corp.	Ridgefield, N. J.	82042	Carter Precision Electric Co.	Skokie, Ill.
55938	Raytheon Co. Commercial Apparatus		74276	Signalite Inc.	Neptune, N. J.	82047	Sperit Faraday Inc., Copper Hewitt	
	& System Div.	So. Norwalk, Conn.	74455	J. H. Winns, and Sons	Winchester, N. J.		Electric Div.	Hoboken, N. J.
56137	Spaulding Fibre Co., Inc.	Tonawanda, N. Y.	74861	Industrial Condenser Corp.	Chicago, Ill.	82116	Electric Regulator Corp.	Norwalk, Conn.
56289	Sprague Electric Co.	North Adams, Mass.	74868	R. F. Products Division of		82142	Jefferis Electronics Division of	
58474	Superior Elect. Co.	Bristol, Conn.		Amphenol-Borg Electronic Corp.			Speer Carbon Co.	Du Bois, Pa.
59446	Telex Corp.	Tulsa, Okla.	74970	E. F. Johnson Co.	Waseca, Minn.	82170	Fairchild Camera & Inst. Corp.,	
59730	Thomas & Betts Co.	Elizabeth, N. J.	75042	International Resistance Co.	Philadelphia, Pa.		Space & Defense Systems Div.	Paramus, N. J.
60741	Triplet Electrical Inst. Co.	Bluffton, Ohio	75263	Keystone Carbon Co., Inc.	St. Marys, Pa.	82209	Magurie Industries, Inc.	Greenwich, Conn.
61775	Union Switch and Signal Div. of		75378	CTS Knights, Inc.	Sandwich, Ill.	82219	Sylvania Electric Prod., Inc.	
	Westinghouse Air Brake Co.	Pittsburgh, Pa.	75382	Kulka Electric Corp.	Mt. Vernon, N. Y.		Electronic Tube Division	Emporium, Pa.
62119	Universal Electric Co.	Owosso, Mich.	75815	Lenz Electric Mfg. Co.	Chicago, Ill.	82376	Astron Corp.	East Newark, Harrison, N. J.
63743	Ward-Leonard Electric Co.	Mt. Vernon, N. Y.	75918	Littlefuse, Inc.	Des Plaines, Ill.	82389	Switchcraft, Inc.	Chicago, Ill.
64959	Western Electric Co., Inc.	New York, N. Y.	76005	Lord Mfg. Co.	Erie, Pa.	82647	Metals & Controls Inc.,	
65092	Weston Inst. Inc. Weston-Newark	Newark, N. J.	76210	C. W. Marwedel	San Francisco, Cal.		Spencer Products	Attleboro, Mass.
66295	Wittek Mfg. Co.	Chicago, Ill.	76433	General Instrument Corp.,		82768	Phillips-Advance Control Co.	Joliet, Ill.
66346	Minnesota Mining & Mfg. Co.			Micamold Division	Newark, N. J.	82866	Research Products Corp.	Madison, Wis.
	Revere Mincom Div.	St. Paul, Minn.	76487	James Millen Mfg. Co., Inc.	Malden, Mass.	82877	Rolton Mfg. Co., Inc.	Woodstock, N. Y.
70276	Allen Mfg. Co.	Hartford, Conn.	76493	J. W. Miller Co.	Los Angeles, Cal.	82893	Vector Electronic Co.	Glendale, Cal.
70309	Allied Control	New York, N. Y.	76530	Cinch-Monadnock, Div. of United Carr		83058	Carr Fastener Co.	Cambridge, Mass.
70318	Allmetal Screw Product Co., Inc.			Fastener Corp.	San Leandro, Cal.	83086	New Hampshire Ball	
		Garden City, N. Y.		Mueller Electric Co.	Cleveland, Ohio		Bearing, Inc.	Peterborough, N. H.
70417	Amplex, Div. of Chrysler Corp.	Detroit, Mich.	76545	National Union	Newark, N. J.	83125	General Instrument Corp.,	
70485	Atlantic India Rubber Works, Inc.	Chicago, Ill.	76703	Oak Manufacturing Co.	Crystal Lake, Ill.		Capacitor Div.	Darlington, S. C.
70563	Amperite Co., Inc.	Union City, N. J.	77068	The Bendix Corp.,		83148	ITT Wire and Cable Div.	Los Angeles, Cal.
70674	ADC Products Inc.	Minneapolis, Minn.		Electrodynamics Div.	N. Hollywood, Cal.	83186	Victory Eng. Corp.	Springfield, N. J.
70903	Belden Mfg. Co.	Chicago, Ill.	77075	Pacific Metals Co.	San Francisco, Cal.	83298	Bendix Corp., Red Bank Div.	Red Bank, N. J.
70998	Bird Electric Corp.	Cleveland, Ohio	77221	Phaostran Instrument and		83315	Hubbell Corp.	Mundelein, Ill.
71002	Birnbach Radio Co.	New York, N. Y.		Electronic Co.	So. Pasadena, Cal.	83324	Rosan Inc.	Newport Beach, Cal.
71034	Bliley Electric Co., Inc.	Erie, Pa.	77252	Philadelphia Steel and		83330	Smith, Herman H., Inc.	Brooklyn, N. Y.
71041	Boston Gear Works Div. of			Wire Corp.	Philadelphia, Pa.	83332	Tech Labs	Palisades Park, N. J.
	Murray Co. of Texas	Quincy, Mass.	77342	American Machine & Foundry Co.		83385	Central Screw Co.	Chicago, Ill.
71218	Bud Radio, Inc.	Willoughby, Ohio		Potter & Brumfield Div.	Princeton, Ind.	83501	Gavitt Wire and Cable Co., Div. of	
71279	Cambridge Thermionics Corp.	Cambridge, Mass.	77630	TRW Electronic Components Div.	Camden, N. J.		Amerace Corp.	Brookfield, Mass.
71286	Camloc Fastener Corp.	Paramus, N. J.	77638	General Instrument Corp.,		83594	Burroughs Corp., Electronic	
71313	Cardwell Condenser Corp.			Rectifier Division	Brooklyn, N. Y.		Tube Div.	Plainfield, N. J.
		Lindenhurst, L. I., N. Y.	77764	Resistance Products Co.	Harrisburg, Pa.	83740	Union Carbide Corp., Consumer	
71400	Bussmann Mfg. Div. of		77969	Rubbercraft Corp. of Calif.	Torrance, Cal.		Prod. Div.	New York, N. Y.
	McGraw-Edison Co.	St. Louis, Mo.	78189	Shakeproof Division of		83777	Model Eng. and Mfg., Inc.	Huntington, Ind.
71436	Chicago Condenser Corp.	Chicago, Ill.		Illinois Tool Works	Elgin, Ill.	83821	Lloyd Scruggs Co.	Festus, Mo.
71447	Calif. Spring Co., Inc.	Pico-Rivera, Cal.	78277	Sigma	So. Braintree, Mass.	83942	Aeronautical Inst. & Radio Co.	Lodi, N. J.
71450	CTS Corp.	Elkhart, Ind.	78283	Signal Indicator Corp.	New York, N. Y.	84171	Arco Electronics Inc.	Great Neck, N. Y.
71468	ITT Cannon Electric Inc.	Los Angeles, Cal.	78290	Struthers-Dunn Inc.	Pitman, N. J.	84396	A. J. Glesener Co., Inc.	San Francisco, Cal.
71471	Cinema, Div. Aerovox Corp.	Burbank, Cal.				84411	TRW Capacitor Div.	Ogallala, Neb.

## CODE LIST OF MANUFACTURERS (Continued)

Code No.	Manufacturer	Address	Code No.	Manufacturer	Address	Code No.	Manufacturer	Address
94870	Sarkes Tarzian, Inc.	Bloomington, Ind.	91929	Honeywell Inc., Micro Switch Division	Freeport, Ill.	96095	Hi-Q Div. of Aerovox Corp.	Olean, N.Y.
85454	Boonton Molding Company	Boonton, N.J.				96256	Thordarson-Meissner Inc.	Mt. Carmel, Ill.
85471	A. B. Boyd Co.	San Francisco, Cal.	91961	Nahm-Bros. Spring Co.	Oakland, Cal.	96296	Solar Mfg. Co.	Los Angeles, Cal.
85474	R. M. Bracamonte & Co.	San Francisco, Cal.	92180	Tru-Connector Corp.	Peabody, Mass.	96396	Microswitch, Div. of	
85660	Kolled Kords, Inc.	Hamden, Conn.	92367	Elgeet Optical Co., Inc.	Rochester, N.Y.		Minn.-Honeywell	Freeport, Ill.
85911	Seamless Rubber Co.	Chicago, Ill.	92607	Tensolite Insulated Wire Co., Inc.		96330	Carlton Screw Co.	Chicago, Ill.
86174	Fafnir Bearing Co.	Los Angeles, Calif.				96341	Microwave Associates, Inc.	Burlington, Mass.
86197	Clifton Precision Products Co., Inc.		92702	IMC Magnetics Corp.	Westbury, L.I., N.Y.	96501	Excel Transformer Co.	Oakland, Cal.
		Clifton Heights, Pa.	92966	Hudson Lamp Co.	Kearney, N.J.	96508	Xcelite, Inc.	Orchard Park, N.Y.
86579	Precision Rubber Products Corp.	Dayton, Ohio	93332	Sylvania Electric Prod. Inc.,		96733	San Fernando Elec. Mfg. Co.	San Fernando, Cal.
86684	Radio Corp. of America, Electronic Comp.			Semiconductor Div.	Woburn, Mass.	96881	Thomson Ind. Inc.	Long Island, N.Y.
	& Devices Division	Harrison, N.J.	93369	Robbins & Myers Inc.	Pallisades Park, N.J.	97464	Industrial Retaining Ring Co.	Irvington, N.J.
86928	Seastrom Mfg. Co.	Glendale, Cal.	93410	Stemco Controls, Div. of Essex		97539	Automatic & Precision Mfg.	Englewood, N.J.
87034	Marco Industries	Anaheim, Cal.		Wire Corp.	Mansfield, Ohio	97979	Reon Resistor Corp.	Yonkers, N.Y.
87216	Philco Corporation (Lansdale Division)		93632	Waters Mfg. Co.	Culver City, Cal.	97983	Litton System Inc., Adler-Westrex	
		Lansdale, Pa.	93929	G. V. Controls	Livingston, N.J.		Commun. Div.	New Rochelle, N.Y.
87473	Western Fibrous Glass Products Co.		94137	General Cable Corp.	Bayonne, N.J.	98141	R-Tronics, Inc.	Jamaica, N.Y.
		San Francisco, Cal.	94144	Raytheon Co., Comp. Div.,		98159	Rubber Teck, Inc.	Gardena, Cal.
87664	Van Waters & Rogers Inc.	San Francisco, Cal.		Ind. Comp. Operations	Quincy, Mass.	98220	Hewlett-Packard Co.,	
87930	Tower Mfg. Corp.	Providence, R.I.	94148	Scientific Electronics			Medical Elec. Div.	Pasadena, Cal.
88140	Cutler-Hammer, Inc.	Lincoln, Ill.		Products, Inc.	Loveland, Colo.	98278	Microdot, Inc.	So. Pasadena, Cal.
88220	Gould-National Batteries, Inc.	St. Paul, Minn.	94154	Wagner Elect. Corp.,		98291	Sealectro Corp.	Mamaronech, N.Y.
88698	General Mills, Inc.	Buffalo, N.Y.		Tung-Sol Div.	Newark, N.J.	98376	Zero Mfg. Co.	Burbank, Cal.
89231	Graybar Electric Co.	Oakland, Cal.	94197	Curtiss-Wright Corp.,		98410	Etc. Inc.	Cleveland, Ohio
89473	G. E. Distributing Corp.	Schenectady, N.Y.		Electronics Div.	East Patterson, N.J.	98731	General Mills Inc., Electronics Div.	
89479	Security Co.	Detroit, Mich.	94222	South Chester Corp.	Chester, Pa.		Commun. Div.	Minneapolis, Minn.
89665	United Transformer Co.	Chicago, Ill.	94330	Wire Cloth Products, Inc.	Bellwood, Ill.	98734	Paeco Division of Hewlett-Packard Co.	
90030	United Shoe Machinery Corp.	Beverly, Mass.	94375	Automatic Metal Products Co.	Brooklyn, N.Y.			Palo Alto, Cal.
90179	U. S. Rubber Co., Consumer Ind. &		94682	Worcester Pressed Aluminum Corp.		98821	North Hills Electronics, Inc.	Glen Cove, N.Y.
	Plastics Prod. Div.	Passaic, N.J.			Worcester, Mass.	98978	International Electronic Research Corp.	
90365	Belleville Speciality Tool Mfg., Inc.		94696	Magnecraft Electric Co.	Chicago, Ill.			Burbank, Cal.
		Belleville, Ill.	95023	George A. Philbrick Researchers, Inc.		99109	Columbia Technical Corp.	New York, N.Y.
90763	United Carr Fastener Corp.	Chicago, Ill.			Boston, Mass.	99313	Varian Associates	Palo Alto, Cal.
90970	Bearing Engineering Co.	San Francisco, Cal.	95146	Alco Elect. Mfg. Co.	Lawrence, Mass.	99378	Atlee Corp.	Winchester, Mass.
91146	ITT Cannon Elect. Inc., Salem Div.		95236	Allies Products Corp.	Dania, Fla.	99515	Marshall Ind., Capacitor Div.	Monrovia, Cal.
		Salem, Mass.	95238	Continental Connector Corp.	Woodside, N.Y.	99707	Control Switch Division, Controls Co.	
91260	Connor Spring Mfg. Co.	San Francisco, Cal.		Leecraft Mfg. Co., Inc.	Long Island, N.Y.		of America	El Segundo, Cal.
91345	Miller Dial & Nameplate Co.	El Monte, Cal.	95263	National Coil Co.	Sheridan, Wyo.	99800	Delevan Electronics Corp.	East Aurora, N.Y.
91418	Radio Materials Co.	Chicago, Ill.	95265	Vitramon, Inc.	Bridgeport, Conn.	99848	Wilco Corporation	Indianapolis, Ind.
91506	Augat Inc.	Attleboro, Mass.	95275	Gordos Corp.	Bloomfield, N.J.	99928	Branson Corp.	Whippany, N.J.
91637	Dale Electronics, Inc.	Columbus, Nebr.	95348	Methode Mfg. Co.	Rolling Meadows, Ill.	99934	Rembrandt, Inc.	Boston, Mass.
91662	Elco Corp.	Willow Grove, Pa.	95566	Arnold Engineering Co.	Marengo, Ill.	99942	Hoffman Electronics Corp.,	
91673	Epiphone Inc.	New York, N.Y.		Semiconductor Division	El Monte, Cal.		Technology-Instrument Corp.	
91737	Gremar Mfg. Co., Inc.	Wakefield, Mass.	95712	Dage Electric Co., Inc.	Franklin, Ind.		of California	Newbury Park, Cal.
91827	K F Development Co.	Redwood City, Cal.	95984	Siemon Mfg. Co.	Wayne, Ill.	99957		
91886	Malco Mfg., Inc.	Chicago, Ill.	95987	Weckesser Co.	Chicago, Ill.			
			96067	Microwave Assoc., West, Inc.	Sunnyvale, Cal.			

The following HP Vendors have no number assigned in the latest supplement to the Federal Supply Code for Manufacturers Handbook.

0000F	Malco Tool and Die	Los Angeles, Calif.	000CS	Hewlett-Packard Co., Colorado		000QQ	Cooltron	Oakland, Cal.
0000Z	Willow Leather Products Corp.	Newark, N.J.		Springs Div.	Colorado Springs, Colorado	000WW	California Eastern Lab	Burlington, Cal.
000AB	ETA	England	000MM	Rubber Eng. & Development	Hayward, Cal.	000YY	S. K. Smith Co.	Los Angeles, Cal.
000BB	Precision Instrument Comp. Co.	Van Nuys, Cal.	000NN	A "N" D Mfg. Co.	San Jose, Cal.			

## SUPPLEMENTAL CODE LIST OF MANUFACTURERS

Code No.	Manufacturer	Address
32293	Intersil Inc.	Cupertino, Calif
81840	Ledex Inc.	Dayton, Ohio
OOLAJ	Don Wells Products	San Leandro, Calif
15636	Elec-Trol Inc.	Saugus, Calif
27264	Molex Products	Downers Grove, Ill



## SALES & SERVICE OFFICES

### UNITED STATES

**ALABAMA**  
P.O. Box 4207  
2003 Byrd Spring Road S.W.  
Huntsville 35802  
Tel: (205) 881-4591  
TWX: 810-726-2204

**ARIZONA**  
2336 E. Magnolia St.  
Phoenix 85034  
Tel: (602) 252-5061  
TWX: 910-951-1330

5737 East Broadway  
Tucson 85715  
Tel: (602) 298-2313  
TWX: 910-952-1162

**CALIFORNIA**  
1430 East Orangethorpe Ave.  
Fullerton 92631  
Tel: (714) 870-1000  
3939 Lankershim Boulevard  
North Hollywood 91604  
Tel: (213) 877-1282  
TWX: 910-499-2170

1101 Embarcadero Road  
Palo Alto 94303  
Tel: (415) 327-6500  
TWX: 910-373-1280

2220 Watt Ave.  
Sacramento 95825  
Tel: (916) 482-1463  
TWX: 910-367-2092

9606 Aero Drive  
San Diego 92123  
Tel: (714) 279-3200  
TWX: 910-335-2000

**COLORADO**  
7965 East Prentice  
Englewood 80111  
Tel: (303) 771-3455  
TWX: 910-935-0705

**CONNECTICUT**  
508 Tolland Street  
East Hartford 06108  
Tel: (203) 289-9394  
TWX: 710-425-3416

111 East Avenue  
Norwalk 06851  
Tel: (203) 853-1251  
TWX: 710-468-3750

**FLORIDA**  
P.O. Box 24210  
2806 W. Oakland Park Blvd.  
Ft. Lauderdale 33307  
Tel: (305) 731-2020  
TWX: 510-965-4099

P.O. Box 20007  
Herrndon Station 32814  
621 Commonwealth Avenue  
Orlando  
Tel: (305) 841-3970  
TWX: 810-850-0113

**GEORGIA**  
P.O. Box 28234  
450 Interstate North  
Atlanta 30328  
Tel: (404) 436-6181  
TWX: 810-766-4890

**ILLINOIS**  
5500 Howard Street  
Skokie 60076  
Tel: (312) 677-0400  
TWX: 910-223-3613

**INDIANA**  
3839 Meadows Drive  
Indianapolis 46205  
Tel: (317) 546-4891  
TWX: 810-341-3263

**NEW JERSEY**  
W. 120 Century Road  
Paramus 07652  
Tel: (201) 265-5000  
TWX: 710-990-4951

**LOUISIANA**  
P.O. Box 856  
1942 Williams Boulevard  
Kenner 70062  
Tel: (504) 721-6201  
TWX: 810-955-5524

**MARYLAND**  
6707 Whitestone Road  
Baltimore 21207  
Tel: (301) 944-5400  
TWX: 710-862-9157

P.O. Box 1648  
2 Choke Cherry Road  
Rockville 20850  
Tel: (301) 948-6370  
TWX: 710-828-9684

**MASSACHUSETTS**  
32 Hartwell Ave.  
Lexington 02173  
Tel: (617) 861-8960  
TWX: 710-326-6904

**MICHIGAN**  
24315 Northwestern Highway  
Southfield 48075  
Tel: (313) 353-9100  
TWX: 810-224-4882

**MINNESOTA**  
2459 University Avenue  
St. Paul 55114  
Tel: (612) 645-9461  
TWX: 910-563-3734

**MISSOURI**  
11131 Colorado Ave.  
Kansas City 64137  
Tel: (816) 763-8000  
TWX: 910-771-2087

2812 South Brentwood Blvd.  
St. Louis 63144  
Tel: (314) 962-5000  
TWX: 910-760-1670

**NEW JERSEY**  
W. 120 Century Road  
Paramus 07652  
Tel: (201) 265-5000  
TWX: 710-990-4951

1060 N. Kings Highway  
Cherry Hill 08034  
Tel: (609) 667-4000  
TWX: 710-892-4945

**NEW MEXICO**  
P.O. Box 8366  
Station C  
6501 Lomas Boulevard N.E.  
Albuquerque 87108  
Tel: (505) 265-3713  
TWX: 910-989-1665

**NEW YORK**  
1702 Central Avenue  
Albany 12205  
Tel: (518) 869-8462  
TWX: 710-441-8270

1219 Campville Road  
Endicott 13760  
Tel: (607) 754-0050  
TWX: 510-252-0890

82 Washington Street  
Poughkeepsie 12601  
Tel: (914) 454-7330  
TWX: 510-248-0012

39 Saginaw Drive  
Rochester 14623  
Tel: (716) 473-9500  
TWX: 510-253-5981

1025 Northern Boulevard  
Roslyn, Long Island 11576  
Tel: (516) 869-8400  
TWX: 510-223-0811

**NORTH CAROLINA**  
P.O. Box 5188  
1923 North Main Street  
High Point 27262  
Tel: (919) 885-8101  
TWX: 510-926-1516

**OHIO**  
2557S Center Ridge Road  
Cleveland 44145  
Tel: (216) 835-0300  
TWX: 810-427-9129

3460 South Dixie Drive  
Dayton 45439  
Tel: (513) 298-0351  
TWX: 810-459-1925

1120 Morse Road  
Columbus 43229  
Tel: (614) 846-1300

**OKLAHOMA**  
2919 United Founders Boulevard  
Oklahoma City 73112  
Tel: (405) 848-2801  
TWX: 910-530-5862

**OREGON**  
Westhills Mall, Suite 158  
4475 S.W. Scholls Ferry Road  
Portland 97225  
Tel: (503) 292-9171  
TWX: 910-464-6103

**PENNSYLVANIA**  
2500 Moss Side Boulevard  
Monroeville 15146  
Tel: (412) 271-0724  
TWX: 710-797-3650

1021 8th Avenue  
King of Prussia Industrial Park  
King of Prussia 19406  
Tel: (215) 265-7000  
TWX: 510-660-2670

**RHODE ISLAND**  
873 Waterman Ave.  
East Providence 02914  
Tel: (401) 434-5535  
TWX: 710-381-7573

**TEXAS**  
P.O. Box 1270  
201 E. Arapaho Rd.  
Richardson 75080  
Tel: (214) 231-6101  
TWX: 910-867-4723

P.O. Box 22813  
6300 Westpark Drive  
Suite 100  
Houston 77027  
Tel: (713) 781-6000  
TWX: 910-881-2645

231 Billy Mitchell Road  
San Antonio 78226  
Tel: (512) 434-4171  
TWX: 910-871-1170

**UTAH**  
2890 South Main Street  
Salt Lake City 84115  
Tel: (801) 487-0715  
TWX: 910-925-5681

**VERMONT**  
P.O. Box 2287  
Kennedy Drive  
South Burlington 05401  
Tel: (802) 658-4455  
TWX: 910-299-0025

**VIRGINIA**  
P.O. Box 6514  
2111 Spencer Road  
Richmond 23230  
Tel: (703) 285-3431  
TWX: 910-956-0157

**WASHINGTON**  
433-108th N.E.  
Bellevue 98004  
Tel: (206) 454-3971  
TWX: 910-453-2303

**\*WEST VIRGINIA**  
Charleston  
Tel: (304) 768-1232

**FOR U.S. AREAS NOT LISTED:**  
Contact the regional office nearest you: Atlanta, Georgia . . . North Hollywood, California . . . Paramus, New Jersey . . . Skokie, Illinois. Their complete addresses are listed above.

\*Service Only

### CANADA

**ALBERTA**  
Hewlett-Packard (Canada) Ltd.  
11745 Jasper Ave.  
Edmonton  
Tel: (403) 482-5561  
TWX: 610-831-2431

**BRITISH COLUMBIA**  
Hewlett-Packard (Canada) Ltd.  
4519 Canada Way  
North Burnaby 2  
Tel: (604) 433-8213  
TWX: 610-922-5059

**MANITOBA**  
Hewlett-Packard (Canada) Ltd.  
511 Bradford Ct.  
St. James  
Tel: (204) 786-7551  
TWX: 610-671-3531

**NOVA SCOTIA**  
Hewlett-Packard (Canada) Ltd.  
2745 Dutch Village Rd.  
Suite 203  
Halifax  
Tel: (902) 455-0511  
TWX: 610-271-4482

**ONTARIO**  
Hewlett-Packard (Canada) Ltd.  
880 Lady Ellen Place  
Ottawa 3  
Tel: (613) 722-4223  
TWX: 610-562-1952

Hewlett-Packard (Canada) Ltd.  
50 Galaxy Blvd.  
Rexdale  
Tel: (416) 677-9611  
TWX: 610-492-4246

**QUEBEC**  
Hewlett-Packard (Canada) Ltd.  
275 Hymus Boulevard  
Pointe Claire  
Tel: (514) 697-4232  
TWX: 610-422-3022  
Telex: 01-20607

**FOR CANADIAN AREAS NOT LISTED:**  
Contact Hewlett-Packard (Canada) Ltd. in Pointe Claire, at the complete address listed above.

### CENTRAL AND SOUTH AMERICA

**ARGENTINA**  
Hewlett-Packard Argentina  
S.A.C.e.I.  
Lavalle 1171 - 3°  
Buenos Aires  
Tel: 35-0436, 35-0627, 35-0431  
Telex: 012-1009  
Cable: HEWPACKARG

**BRAZIL**  
Hewlett-Packard Do Brasil  
I.e.C. Ltda.  
Rua Frei Caneca 1119  
Sao Paulo - 3. SP  
Tel: 288-7111, 287-5858  
Cable: HEWPACK Sao Paulo

Hewlett-Packard Do Brasil  
I.e.C. Ltda.  
Rua da Matriz 29  
Botafogo ZC-02  
Rio de Janeiro, GB  
Tel: 246-4417  
Cable: HEWPACK Rio de Janeiro

Hewlett-Packard Do Brasil  
Indústria e Comércio Ltda.  
Praça Dom Feliciano 78  
Salas 806-8  
Porto Alegre RGS

**CHILE**  
Héctor Calcañi y Cia, Ltda.  
Bustos, 1932-Ser Piso  
Casilla 13942  
Santiago  
Tel: 4-2396  
Cable: Calcañi Santiago

**COLOMBIA**  
Instrumentacion  
Henrik A. Langebaek & Kier  
Ltda.  
Carrera 7 No. 48-59  
Apartado Aereo 6287  
Bogota, I.D.E.  
Tel: 45-78-06, 45-55-46  
Cable: AARIS Bogota  
Telex: 044-400

**COSTA RICA**  
Lic. Alfredo Gallegos Gurdian  
Apartado 3243  
San José  
Tel: 21-96-13  
Cable: GALGUR San José

**ECUADOR**  
Laboratorios de Radio-Ingeniería  
Calle Guayaquil 1246  
Post Office Box 3199  
Quito  
Tel: 12496  
Cable: HORVATH Quito

**EL SALVADOR**  
Electrónica  
Apartado Postal 1589  
27 Avenida Norte 1133  
San Salvador  
Tel: 25-74-50  
Cable: ELECTRONICA  
San Salvador

**MEXICO**  
Hewlett-Packard Mexicana, S.A.  
de C.V.  
Moras 439  
Col. del Valle  
Mexico 12, D.F.  
Tel: 575-46-49, 575-80-20,  
575-80-30

**NICARAGUA**  
Roberto Terán G.  
Apartado Postal 689  
Edificio Terán  
Managua  
Tel: 3451, 3452  
Cable: ROTERAN Managua

**PANAMA**  
Electrónica Balboa, S.A.  
P.O. Box 4929  
Ave. Manuel Espinosa No. 13-50  
Bldg. Alina  
Panama City  
Tel: 250033  
Telex: 3481003, Curundu,  
Canal Zone  
Cable: ELECTRON Panama City

**PERU**  
Compañía Electro Medica S.A.  
Ave. Enrique Canaval 312  
San Isidro  
Casilla 1030  
Lima  
Tel: 22-3900  
Cable: ELMED Lima

**PUERTO RICO**  
San Juan Electronics, Inc.  
P.O. Box 5167  
Ponce de Leon 154  
Pda. 3-Pta. de Tierra  
San Juan 00906  
Tel: (809) 725-3342, 722-3342  
Cable: SATRONICS San Juan  
Telex: SATRON 3450 332

**SURINAME**  
SurTel-Radio Holland N.V.  
P.O. Box 155  
Paramaribo

**URUGUAY**  
Pablo Ferrando S.A.  
Comercial e Industrial  
Avenida Italia 2877  
Casilla de Correo 370  
Montevideo  
Tel: 40-3102  
Cable: RADIUM Montevideo

**VENEZUELA**  
Hewlett-Packard De Venezuela  
C.A.  
Apartado 50933  
Caracas  
Tel: 71.88.05, 71.88.69, 71.99.30  
71.88.76, 71.82.05  
Cable: HEWPACK Caracas

**FOR AREAS NOT LISTED, CONTACT:**  
Hewlett-Packard  
INTERCONTINENTAL  
3200 Hillview Ave.  
Palo Alto, California 94304  
Tel: (415) 493-1501  
TWX: 910-373-1267  
Cable: HEWPACK Palo Alto  
Telex: 034-8461



## EUROPE

**AUSTRIA**  
Unilabor GmbH  
Wissenschaftliche Instrumente  
Rummelhardtsgasse 6  
P.O. Box 33  
A-1095 Vienna  
Tel: (222) 42 61 81, 43 13 94  
Cable: LABORINSTRUMENT  
Vienna  
Telex: 75 762

**BELGIUM**  
Hewlett-Packard S.A. Benelux  
348 Boulevard du Souverain  
1160 Brussels  
Tel: 72 22 40  
Cable: PALOBEN Brussels  
Telex: 23 494

**DENMARK**  
Hewlett-Packard A/S  
Datavej 38  
DK-3460 Birkerød  
Tel: (01) 81 66 40  
Cable: HEWPACK AS  
Telex: 66 40

Hewlett-Packard A/S  
Torvet 9  
DK-8600 Silkeborg  
Tel: (06) 827-840

**FINLAND**  
Hewlett-Packard Oy  
Bulevardi 26  
P.O. Box 12185  
Helsinki 12  
Tel: 13-730  
Cable: HEWPACKOY-Helsinki  
Telex: 12-1563

**FRANCE**  
Hewlett-Packard France  
Quartier de Courtaboeuf  
Boite Postale No. 6  
91 Orsay  
Tel: 1-920 88 01  
Cable: HEWPACK Orsay  
Telex: 60048

Hewlett-Packard France  
4 Quai des Etoiles  
69 Lyon 5ème  
Tel: 78-42 63 45  
Cable: HEWPACK Lyon  
Telex: 31617

**GERMANY**  
Hewlett-Packard Vertriebs-GmbH  
Berliner Strasse 117  
Postfach 560/40  
D6 Nieder-Eschbach/Fm 56  
Tel: (0611) 50 10 64  
Cable: HEWPACKSA Frankfurt  
Telex: 41 32 49 FRA  
Hewlett-Packard Vertriebs-GmbH  
Wilmersdorfer Strasse 113/114  
D-1000 Berlin W. 12  
Tel: (0311) 3137046  
Telex: 18 34 05

Hewlett-Packard Vertriebs-GmbH  
Herrenbergerstrasse 110  
D7030 Böblingen, Württemberg  
Tel: 07031-6671  
Cable: HEPAG Böblingen  
Telex: 72 65 739  
Hewlett-Packard Vertriebs-GmbH  
Vogelsanger Weg 38  
D4 Düsseldorf  
Tel: (0211) 63 80 31/35  
Telex: 85/86 533

Hewlett-Packard Vertriebs-GmbH  
Wendensdr. 23  
D2 Hamburg 1  
Tel: (0411) 24 05 51/52  
Cable: HEWPACKSA Hamburg  
Telex: 21 53 32

Hewlett-Packard Vertriebs-GmbH  
Reginfriedstrasse 13  
D8 München 9  
Tel: (0811) 68 59 71/75  
Cable: HEWPACKSA München  
Telex: 52 49 85

**GREECE**  
Kostas Karayannis  
18, Ermou Street  
Athens 126  
Tel: 230301,3,5  
Cable: RAKAR Athens  
Telex: 21 59 62 RAKAR GR

**IRELAND**  
Hewlett-Packard Ltd.  
224 Belth Road  
Slough, Bucks, England  
Tel: Slough 753-3341  
Cable: HEWPUE Slough  
Telex: 84413

**ITALY**  
Hewlett-Packard Italiana S.p.A.  
Via Amerigo Vespucci 2  
20124 Milano  
Tel: (2) 6251 (10 lines)  
Cable: HEWPACKIT Milan  
Telex: 32046

Hewlett-Packard Italiana S.p.A.  
Palazzo Italia  
Piazza Marconi 25  
00144 Rome - Eur  
Tel: 6-591 2544  
Cable: HEWPACKIT Rome  
Telex: 61514

**NETHERLANDS**  
Hewlett-Packard Benelux, N.V.  
Weerdesteil 117  
P.O. Box 7825  
Amsterdam, Z 11  
Tel: 020-42 77 77  
Cable: PALOBEN Amsterdam  
Telex: 13 216

**NORWAY**  
Hewlett-Packard Norge A/S  
Box 149  
Nesveien 13  
N-1344 Haslum  
Tel: 2-53 83 60  
Cable: HEWPACK Oslo  
Telex: 16621

**PORTUGAL**  
Electra  
Empresa Tecnica de  
Equipamentos  
Electronicos, S.a.r.l.  
Rua Rodrigo da Fonseca 103  
P.O. Box 2531  
Lisbon 1  
Tel: 68 60 72  
Cable: TELETRA Lisbon  
Telex: 1598

**SPAIN**  
Atalo Ingenieros SA  
Enrique Larreta 12  
Madrid, 16  
Tel: 215 35 43  
Cable: TELEATAIO Madrid  
Telex: 27249E  
Atalo Ingenieros SA  
Ganduxer 76  
Barcelona 6  
Tel: 211-44-66  
Cable: TELEATAIO BARCELONA

**SWEDEN**  
Hewlett-Packard Sverige AB  
Enighetsvägen 1-3  
Fack  
S-161 20 Bromma 20  
Tel: (08) 98 12 50  
Cable: MEASUREMENTS  
Stockholm  
Telex: 10721

Hewlett-Packard Sverige AB  
Hagakersgatan 9C  
Box 4028  
S 431 04 Mölndal 4  
Tel: 031 - 27 68 00  
Telex: 21 312 hpmind

**SWITZERLAND**  
Hewlett Packard Schweiz AG  
Zürcherstrasse 20  
CH-8952 Schlieren Zurich  
Tel: (051) 98 18 21/24  
Cable: HPAG CH  
Telex: 53933

Hewlett Packard Schweiz A.G.  
Rue du Bois-du-Lan 7  
1217 Meyrin 2 Geneva  
Tel: (022) 41 54 00  
Cable: HEWPACKSA Geneva  
Telex: 2 24 86

**TURKEY**  
Telekom Engineering Bureau  
P.O. Box 376  
Karahoy  
Istanbul  
Tel: 49 40 40  
Cable: TELEMATION Istanbul

**UNITED KINGDOM**  
Hewlett-Packard Ltd.  
224 Bath Road  
Slough, Bucks  
Tel: Slough (0753) 33341  
Cable: HEWPUE Slough  
Telex: 84413  
Hewlett-Packard Ltd.  
The Graftons  
Stanford New Road  
Altrincham, Cheshire  
Tel: 061 928-8626  
Telex: 668068

**YUGOSLAVIA**  
Belram S.A.  
83 avenue des Mimosas  
Brussels 1150, Belgium  
Tel: 34 33 32, 34 25 19  
Cable: BELRAMEL Brussels  
Telex: 21790

**SOCIALIST COUNTRIES  
PLEASE CONTACT:**  
Correspondence Office for  
Eastern Europe  
Immsstrasse 23/2  
Postfach  
A1204 Vienna, Austria  
Tel: (222) 3366 06/09  
Cable: HEWPACK Vienna  
Telex: 75923

**ALL OTHER EUROPEAN  
COUNTRIES CONTACT:**  
Hewlett-Packard S.A.  
Rue du Bois-du-Lan 7  
1217 Meyrin 2 Geneva  
Switzerland  
Tel: (022) 41 54 00  
Cable: HEWPACKSA Geneva  
Telex: 2.24.86

## AFRICA, ASIA, AUSTRALIA

**ANGOLA**  
Teletra Empresa Técnica  
de Equipamentos Eléctricos  
SAR  
Rua de Barbosa Rodrigues  
42-1°  
Box 6487  
Luanda  
Cable: TELETRA Luanda

**AUSTRALIA**  
Hewlett-Packard Australia  
Pty. Ltd.  
22-26 Weir Street  
Glen Iris, 3146  
Victoria  
Tel: 20.1371 (6 lines)  
Cable: HEWPARD Melbourne  
Telex: 31024

Hewlett-Packard Australia  
Pty. Ltd.  
61 Alexander Street  
Crows Nest 2065  
New South Wales  
Tel: 43.7866  
Cable: HEWPARD Sydney  
Telex: 21561

Hewlett-Packard Australia  
Pty. Ltd.  
97 Churchill Road  
Prospect 5082  
South Australia  
Tel: 65.2366  
Cable: HEWPARD Adelaide  
Telex: 21561

Hewlett-Packard Australia  
Pty. Ltd.  
2nd Floor, Suite 13  
Casablanca Buildings  
196 Adelaide Terrace  
Perth, W.A. 6000  
Tel: 21-3330  
Cable: HEWPARD Perth  
Telex: 21-3330

Hewlett-Packard Australia  
Pty. Ltd.  
10 Woolley Street  
P.O. Box 191  
Dickson A.C.T. 2602  
Tel: 49-8194  
Cable: HEWPARD Canberra ACT  
Telex: 49-8194

Hewlett-Packard Australia  
Pty. Ltd.  
75 Simpsons Road  
Bardon  
Queensland, 4068  
Tel: 36-5411

**CEYLON**  
United Electricals Ltd.  
P.O. Box 681  
Yahala Building  
Staples Street  
Colombo 2  
Tel: 5496  
Cable: HOTPOINT Colombo

**CYPRUS**  
Kyronics  
19 Gregorios & Xenopoulos Road  
P.O. Box 1152  
Nicosia  
Tel: 6282-75628  
Cable: HE-I-NAMI

**ETHIOPIA**  
African Salespower & Agency  
Private Ltd., Co.  
P. O. Box 718  
58/59 Cunningham St.  
Addis Ababa  
Tel: 12285  
Cable: ASACO Addisababa

**HONG KONG**  
Schmidt & Co. (Hong Kong) Ltd.  
P.O. Box 257  
1511, Prince's Building 15th Floor  
10, Chater Road  
Hong Kong  
Tel: 240168, 232735  
Cable: SCHMIDTCO Hong Kong

**INDIA**  
Blue Star Ltd.  
Kasturi Buildings  
Jamsheji Tata Rd.  
Bombay 20BR, India  
Tel: 29 50 21  
Telex: 2156  
Cable: BLUEFROST

Blue Star Ltd.  
Band Box House  
Prabhadevi  
Bombay 25DD, India  
Tel: 45 73 01  
Telex: 2156  
Cable: BLUESTAR

Blue Star Ltd.  
14/40 Civil Lines  
Kanpur, India  
Tel: 6 88 82  
Cable: BLUESTAR

Blue Star, Ltd.  
7 Hare Street  
P.O. Box 506  
Calcutta 1, India  
Tel: 23-0131  
Telex: 655  
Cable: BLUESTAR

Blue Star Ltd.  
Blue Star House,  
34 Ring Road  
Lajpat Nagar  
New Delhi 24, India  
Tel: 62 32 76  
Telex: 463  
Cable: BLUESTAR

Blue Star Ltd.  
17-C Ulsor Road  
Bangalore-8

Blue Star, Ltd.  
96 Park Lane  
Secunderabad 3, India  
Tel: 7 63 91  
Cable: BLUEFROST

Blue Star, Ltd.  
23/24 Second Line Beach  
Madras 1, India  
Tel: 2 39 55  
Telex: 379  
Cable: BLUESTAR

Blue Star, Ltd.  
18 Kaiser Bungalow  
Dindli Road  
Jamshedpur, India  
Tel: 38 04  
Cable: BLUESTAR

**INDONESIA**  
Bah Bolon Trading Coy. N.V.  
Djaloh Merdeka 29  
Bandung  
Tel: 4915 51560  
Cable: ILMU  
Telex: 809

**IRAN**  
Telecom, Ltd.  
P. O. Box 1812  
240 Kh. Saba Shomali  
Teheran  
Tel: 43850, 48111  
Cable: BASCOM Teheran

**ISRAEL**  
Electronics & Engineering  
Div. of Motorola Israel Ltd.  
17 Aminadav Street  
Tel-Aviv  
Tel: 36941 (3 lines)  
Cable: BASTEL Tel-Aviv  
Telex: Bastei Tv 033-569

**JAPAN**  
Yokogawa-Hewlett-Packard Ltd.  
Ohashi Building  
59 Yoyogi 1-chrome  
Shibuya-ku, Tokyo  
Tel: 03-370-2281/7  
Telex: 232-2024YHP  
Cable: YHPMARKET TOK 23-724

Yokogawa-Hewlett-Packard Ltd.  
Nissei Ibaragi Bldg.  
2-2-8 Kasuga  
Ibaragi-Shi  
Osaka  
Tel: 23-1641  
Telex: 385-5332 YHPOSAKA

Yokogawa-Hewlett-Packard Ltd.  
Its Building  
No. 59, Kotari-cho  
Nakanura-ku, Nagoya City  
Tel: 551-0215  
Yokogawa-Hewlett-Packard Ltd.  
Nitto Bldg.  
2300 Shinohara-cho,  
Kokoku-ku  
Yokohama 222  
Tel: (405) 432-1504/5

**KOREA**  
American Trading Co.,  
Korea, Ltd.  
Seoul P.O. Box 1103  
7th & 8th floors, Daekyung Bldg.  
107 Sejong Ro  
Chongro-Ku, Seoul  
Tel: 75-5841 (4 lines)  
Cable: AMTRACO Seoul

**LEBANON**  
Constantin E. Macridis  
Clemenceau Street  
P.O. Box 7213  
Beirut  
Tel: 220846  
Cable: ELECTRONUCLEAR Beirut

**MALAYSIA**  
MECOMB Malaysia Ltd.  
2 Lorong 13/6A  
Section 13  
Petaling Jaya, Selangor  
Cable: MECOMB Kuala Lumpur

**MOZAMBIQUE**  
A. N. Goncalves, LDA.  
4.1 Apt. 14 Av. D. Luis  
P.O. Box 107  
Lourenco Marques  
Cable: NEGON

**NEW ZEALAND**  
Hewlett-Packard (N.Z.) Ltd.  
32-34 Kent Terrace  
P.O. Box 9443  
Wellington, N.Z.  
Tel: 56-659  
Cable: HEWPACK Wellington  
Hewlett Packard (N.Z.) Ltd.  
Box 51092  
Pukuranga  
Tel: 573-733

**PAKISTAN (EAST)**  
Mushko & Company, Ltd.  
Zirat Chambers  
31, Jinnah Avenue  
Dacca  
Tel: 280058  
Cable: NEWDEAL Dacca

**PAKISTAN (WEST)**  
Mushko & Company, Ltd.  
Osman Chambers  
Victoria Road  
Karachi 3  
Tel: 511027, 512927  
Cable: COOPERATOR Karachi

**PHILIPPINES**  
Electromex Inc.  
Makati Commercial Center  
2129 Pasong Tamo  
Makati, Rizal D 708  
P.O. Box 1028  
Manila  
Tel: 89-85-01  
Cable: ELEMEX Manila

**SINGAPORE**  
Mechanical and Combustion  
Engineering Company Ltd.  
9, Jalan Kilang  
Red Hill Industrial Estate  
Singapore, 3  
Tel: 642361-3  
Cable: MECOMB Singapore

**SOUTH AFRICA**  
Hewlett Packard South Africa  
(Pty.), Ltd.  
P.O. Box 31716  
Braamfontein Transvaal  
Milnerfont  
30 De Beer Street  
Johannesburg  
Tel: 725-2080, 725-2030  
Telex: 0226 JH  
Cable: HEWPACK Johannesburg

Hewlett Packard South Africa  
(Pty.), Ltd.  
Breeccaste House  
Bree Street  
Cape Town  
Tel: 3-6019, 3-6545  
Cable: HEWPACK Cape Town  
Telex: 5-0006

Hewlett Packard South Africa  
(Pty.), Ltd.  
308 Glenwood Centre  
Corner Hunt & Moore Roads  
P.O. Box 99  
Overport, Natal  
Tel: 347536

**TAIWAN REP. OF CHINA**  
Hewlett Packard Taiwan  
39 Chung Shiao West  
Sec. 1  
Overseas Insurance  
Corp. Bldg. 7th Floor  
Taipei  
Tel: 579-605, 579-610, 579-613  
Telex: c/o Bankamerica TP 339  
Cable: HEWPACK Taipei

**THAILAND**  
The International  
Engineering Co., Ltd.  
P. O. Box 39  
614 Sukhumvit Road  
Bangkok  
Tel: 910722 (7 lines)  
Cable: GYSOM  
TLX INTENDO BK-226 Bangkok

**VIETNAM**  
Peninsular Trading Inc.  
P.O. Box H-3  
216 Hien-Vuong  
Saigon  
Tel: 20805, 93398  
Cable: PENTRA, SAIGON 242

**ZAMBIA**  
R. J. Tilbury (Zambia) Ltd.  
P.O. Box 2792  
Lusaka  
Zambia, Central Africa

**MEDITERRANEAN AND  
MIDDLE EAST COUNTRIES  
NOT SHOWN PLEASE  
CONTACT:**  
Hewlett-Packard Correspondence  
Office  
Piazza Marconi 25  
I-00144 Rome-Eur, Italy  
Tel: (6) 59 40 29  
Cable: HEWPACKIT Rome  
Telex: 61514

Hewlett-Packard Far East  
Area Office  
P.O. Box 87  
Alexandra Post Office  
Singapore 3  
Tel: 633022  
Cable: HEWPACK SINGAPORE

**OTHER AREAS NOT  
LISTED, CONTACT:**  
Hewlett-Packard  
INTERCONTINENTAL  
3200 Hillview Ave.  
Palo Alto, California 94304  
Tel: (415) 326-7000  
(Feb. 71 493-1501)  
TWX: 910-373-1267  
Cable: HEWPACK Palo Alto  
Telex: 034-8461





# MANUAL BACKDATING CHANGES

Model 3310A

FUNCTION GENERATOR

Manual Serials Prefixed: 947-

This manual backdating sheet makes this manual applicable to earlier instruments. Instrument-component values that differ from those in the manual, yet are not listed in the backdating sheet, should be replaced using the part number given in the manual.

Instrument Serial Prefix	Make Manual Changes	Instrument Serial Prefix	Make Manual Changes
920-00111 and below	1-9	947-01950 and below	7-9
920-0450 and below	2-9	0947A02851 and below	8,9
947-01200 and below	3-9	1048A03650 and below	9
947-01450 and below	4-9		
947-1576 and below	5-9		
947-01700 and below	6-9		

**CHANGE NO. 1**

Page 7-7/7-8, Figure 7-3

Delete Ferrite bead (L9) on the base of A1Q20.

Page 6-2, Table 6-1

Delete L9, Ferrite bead, Part No. 9170-0016.

**CHANGE NO. 2**

Page 6-4

Change A1R54 to R: fxd comp 1200 ohms 5% 1/4 W (0683-1225).

Change A1R55 to R: fxd comp 390 ohms 5% 1/4 W (0683-3915).

Page 6-10

Delete vernier drive plate assembly (03310-60605) and add spring: vernier (03310-09191).

Delete Assembly: heat sink spacer (03310-24701).

Page 7-7/7-8

Change A1R54 and A1R55 to 1200 ohms and 390 ohms, respectively.

**CHANGE NO. 3**

Table 6-1

Delete Panel: Rear (03310-00203). (Miscellaneous).

Add Panel: Rear (03310-00202). (Miscellaneous).

Delete J5, Connector: Power (1251-2357).

Add J5, Connector: Power (1251-0148).

Delete W1, Cord: Power (8120-1348).

Add W1, Cord: Power (8120-0078).

**CHANGE NO. 4**

Table 6-1

Delete A1R163 thru A1R168 and add A1L1 thru A1L5 and A1L7, Inductor: fxd 20uH 10% (9140-0047).

————— NOTE —————

It is recommended that inductors L1 thru L5 and L7 be replaced by the resistors R163 and R168 as indicated in the manual if replacement becomes necessary.

## CHANGE NO. 5

Model 3310A's with Serial number 947-01575 and below have output transistors (Q1 and Q2) mounted on a metal bracket as shown below. To install replacement transistors, remove the bracket and connect the transistors' leads directly to the appropriate pins on the A3 assembly. Transistor assemblies A8 and A9 (mentioned in Change 9) should be used for this purpose. A heat sink spacer, -hp- part no. 03310-24702, will also be required.

NOTE

Instruments which have been modified per service note P-3310-69503 have assemblies A8 and A9 already installed.


## CHANGE NO. 6

## Table 6-1

Delete A3IC1 (1820-0203) and A3CR28 (1902-0681).  
 Add A3Q7 and A3Q8 (1854-0215).  
 Add A3R34, 7150 ohms fxd flm 1% 1/8 W (0698-4471).  
 Delete A3R36, A3C5, and A3C6 and add A3R35 and A3R36, 2000 ohms fxd comp 5% 1/4 W (0683-2025).  
 Add A3C4, A3C5, and A3C6, 0.001uF fxd cer 500 vdcw (0150-0069).

Figure 7-4


Delete A3R33, A3R36, A3IC1, A3CR28, A3C5 and A3C6.  
 Replace with circuit below:

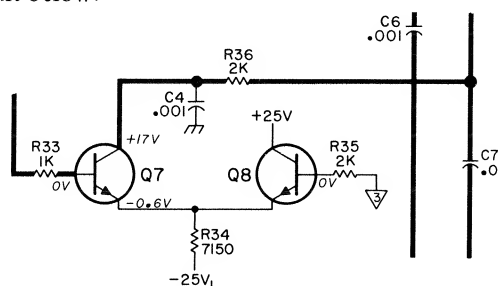

Change A3C13 and A3R43 near Q9 to .1uF and 357 ohms respectively.

Change C11 near Q12 to .1uF.

Delete the component location diagram for the A3 board as shown in Figures 7-4 and 7-5 and substitute the diagram shown below.

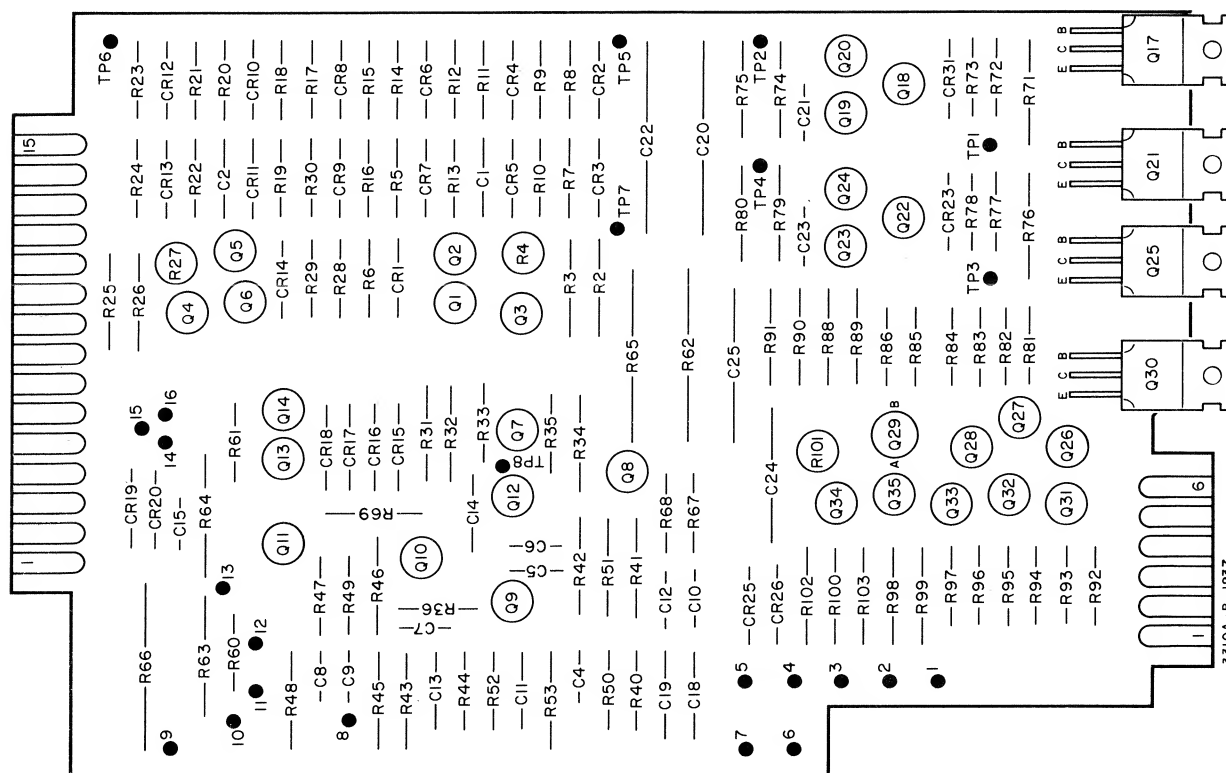

*hp* Part No. 03310-66503  
A3


Table 6-1

Delete A2R22 (0757-0465) and A2R23 (2100-2514).

Figure 7-4

Delete resistors A2R22 and A2R23 near A2Q2. Connect A2C4 from collector of A2Q2 to circuit ground.

Delete the component location diagram for the A2 board as shown in Figure 7-4 and substitute the diagram shown below.

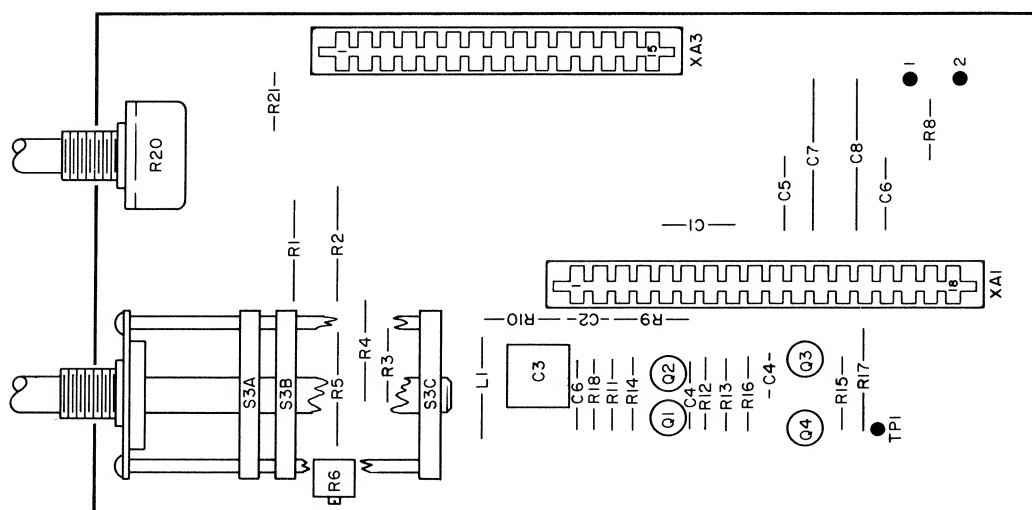

hp Part No. 03310-66502  
A2

## CHANGE NO. 8

## Table 6-1:

Delete Panel Assembly: rear (Miscellaneous), -hp- part no. 03310-60201. (Includes J5 and S5).  
Change A2R21 to R: fxd,  $27 \Omega \pm 5\%$  1/4 W, -hp- part no. 0683-0465.  
Change the -hp- part no. of the A3 assembly to 03310-66503.  
Delete the following components:  
    A3R26\* and A3CR29  
Change A3R62 and A3R65 to R: fxd,  $22 \Omega \pm 5\%$  2 W, -hp- part no. 0698-3609.  
Change A3R66 to R: fxd,  $47 \Omega \pm 5\%$  2 W, -hp- part no. 0698-3615.  
Change A3R72 and A3R77 to R: fxd,  $330 \Omega \pm 5\%$  1/4 W, -hp- part no. 0683-3315.  
Change the -hp- part no. of J5 (a.c. power connector) to 1251-0148.  
Change the -hp- part no. of W1 (a.c. power cord) to 8120-0078.  
Add Panel: rear, -hp- part no. 03310-00202 (Miscellaneous).

## CHANGE NO. 9

## Table 6-1:

Delete Transistors: Output (Q1 and Q2), -hp- part nos. 1854-0254 and 1853-0012, respectively.  
Change the -hp- part no. of the A3 assembly to 03310-66503.  
Delete the following components:  
    A3CR30, A3CR31, A3C27, A3C28, A3R104, and A3R105.  
Add to Chassis Mounted Components:  
Output transistor assembly (A8), -hp- part no. 03310-67901, includes:  
    Transistor: Si NPN, -hp- part no. 1854-0254.  
    C: fxd,  $.47 \mu\text{F}$  35 vdcw, -hp- part no. 0180-0291.  
Output transistor assembly (A9), -hp- part no. 03310-67902, includes:  
    Transistor: Si PNP, -hp- part no. 0185-0012.  
    C: fxd,  $.47 \mu\text{F}$  35 vdcw, -hp- part no. 0180-0291.  
Add Spacer: heat sink, -hp- part no. 03310-24702 1 ea. (Misc.).  
Also make the changes indicated on Figure 7-5 of this manual.  
Capacitor A3C26\* should be shown in Figure 7-4. It is connected in the same manner as shown on the schematic for the latest instruments. (Figure 7-4).

All references to 3310B in the manual also apply to 3310A-H10.

Change A1R71 and A1R81 to R: fxd,  $100 \text{ k}\Omega \pm 5\%$  1/4 W -hp- part no. 0684-4741.  
Change A1C22 and A1C26 to C: fxd,  $1 \mu\text{F}$  35 V, -hp- part no. 0180-0291.

